CD\$EL Three phase input type	Ordering information				
TAH series	TAH -10	-683 3	3 -		
	2	③Line 1	I Name I Current to ground capacitor coc Line to ground capacito		
RoHS		Code	Leakage Current (Input 250/500V 60Hz)	Line to ground capacitor (nominal value)	
	683 2.5mA/5.0mA max 68000pF ④Options D:DIN rail installation type * The dimensions change when the option is set. Refer to External view.				
The terminal cover is retracted inside the unit DIN r	ail installation type is option	1101	or to External view.		

Features of TAH series

Ultra high-attenuation type of common mode noise from 10kHz to 1MHz

• Three Phase 500 VAC


 Quick and easy push-down terminal Just connect the wires, push down and tighten

the screws with a screwdriver


Specifications

No.	Items	TAH-04-683	TAH-06-683	TAH-10-683	TAH-20-683	TAH-30-683		
1	Rated Voltage[V]	AC Three Phase 500						
2	Rated Current[A]	4	6	10	20	30		
3	Test Voltage (Terminal-Mounting Plate)	2,000 VAC (Cutoff Current = 100mA), 1minute at room temperature and humidity						
4	Isolation Resistance (Terminal-Mounting Plate)	500 VDC 100M $\!\Omega$ minute at room temperature and humidity						
5	Leakage current 250/500V 60Hz	2.5mA/5.0mA max						
6	Voltage drop	1.5V max		1.0V max				
7	Safety agency approval temperatures	-25 to +85°C (Refer to Derating Curve)						
8	Operating temperature	-40 to +85°C (Refer to Derating Curve)						
9	Operating humidity	20 to 95%RH (Non condensing)						
10	Storage temperature/humidity	-40 to +85°C/20 to 95%RH (Non condensing)						
11	Vibration	10 to 55Hz, 19.6m/s ² (2G), 3min. Period, 1hour each X, Y and Z axis						
12	Impact	196.1m/s²(20G), 11ms Once each X, Y and Z axis						
13	Safety agency approvals	UL1283, CSA C22.2 No.8 (C-UL) , DIN EN133200 VDE0565 Teil3-1, ENEC						
14	Case size (without projection) /Mass	63×64×128 mm (W×H×D) /620g max (Option : -D refer to external view)						

Circuit Diagram

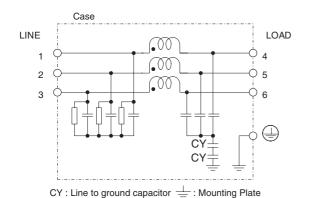

Derating Curve

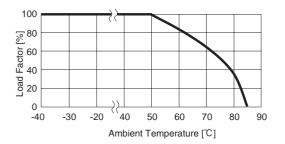

Noise Filter


TAC, TAH series | COSEL

External view

This product is shipped in the following condition, because it is equipped with push-down terminals.

①The terminal cover is retracted inside the unit.


(2) The screws for connecting the terminals are held in the up right position.

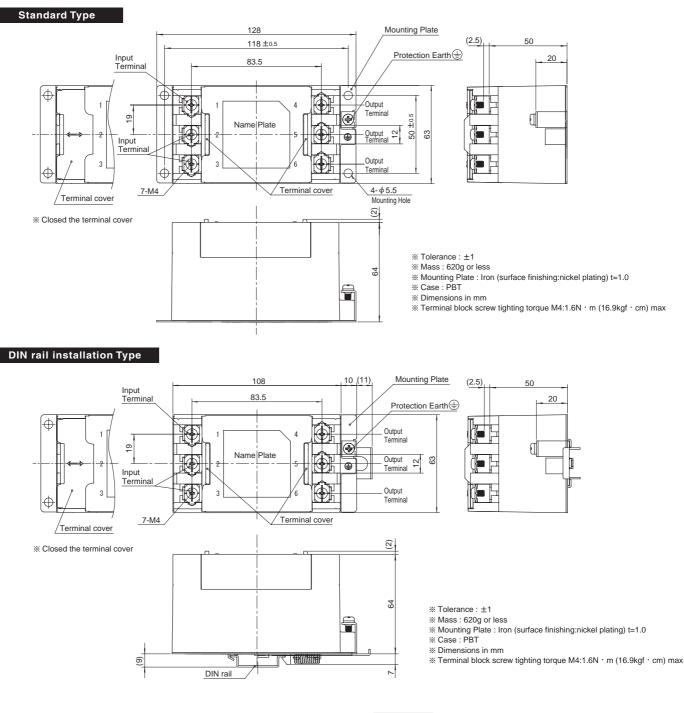

Note when installing the noise filter on a DIN rail.

When the noise filter is grounded through the DIN rail, the proper noise attenuation may not be achieved.

Be sure to connect the protection earth (PE) of the noise filter body to the earth.

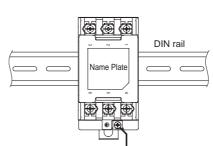

Noise Filter

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Cosel:

<u>TAH-04-683</u> <u>TAH-04-683-D</u> <u>TAH-30-683</u> <u>TAH-30-683-D</u> <u>TAH-06-683-D</u> <u>TAH-10-683</u> <u>TAH-10-683</u> <u>TAH-10-683-D</u> TAH-20-683 TAH-20-683-D