| 213-CONRar Panel Mating Connector2200-205-2200-32.237-BAN-3ATiax to Banan Plug2000-SCS, 7072, 7072-HV, DMMS237-BR-CRWSlag Firma To to Male BNC connector with guard disconnected7078-TRX cables237-TRX-ARSlag Tirax to Male PRNL connector with guard disconnected7078-TRX cables237-TRX-ARSlag Tirax Male-Female diapter with guard disconnector6171, 65178, 7072, 7072-HV,237-TRX-TRSelot Male to Dual 3-Lug Female Tria Risconnector700-SCS, 7072, 7072-HV,237-TRX-TRSlave Sold For use with 2182-MT700-SCS, 7072, 7072-HV,238-TRX-TRSlave Sold For use with 2182-MT700-SCS, 7072, 7072-HV,2182-TRX-TRSlave Sold For use with 2182-MT700-SCS, 7072, 7072-HV,2182-TRX-TRSlave Sold For use with 2182-MT700-SCS, 7072, 7072-HV,2182-TRX-TRSlave Sold For use with 2182-MT700-SCS, 7072, 7072-HV, 7078-HX, cables2182-TRX-TRSlave Sold For use with 2182-MT700-SCS, 7072, 7072-HV, 7078-HX, cables2182-TRX-TRSlave Sold For use with 2182-MT700-SCS, 7072, 7072-HV, 7078-HX, cables2182-TRX-TRSlave Sold For use with 2182-MT700-SCR, 7072, 7072-HV, 7078-HX, cables2182-TRX-TRSlave Sold For use with 2182-MT700-SCR, 7072, 7072-HV, 7078-HX, cables2182-TRX-TRSlave Sold For use with 2182-MT700-SCR, 700-SCR, | Model | Name | Use With: |
|---|-----------------|---------------------------------------|---------------------------------|
| 3-Lug Female Triax Ko Male BNC Connector with guard disconnected4200-SCS, 6517A, 6517B, 7078-TRX cables237-TRX-BAR3-Lug Triax Female to Female Barrel Adapter2635B, 2636B, 4200-SCS, 6482, Triax (2637E, 2637E, 2737E, 2737 | 213-CON | Rear Panel Mating Connector | |
| 25/BRCHKConnector with guard disconnected7078-TRX cables237-TRX-BAR3-Jag Triax Female to Female Barrel Adapter2653B, 2636B, 4200-SCS, 6482, Triax interconnect237-TRX-NGTriax Male-Female Adapter with guard disconnected6517A, 6517B, 7072, 7072-HV237-TRX-TI3-Jot Male to Dual 3-Lug Female Triax Tree Adapter200-SCS, 7072, 7072-HV, 7078-TRX cables237-TRX-TB2-Lug Female Triax Bulkhead Connector7072, 7072-HV, 7078-TRX cables2182-325ASilver Solder for use with 2182-XIT2182A2182-41TLow-Thermal Connector with Strain Relief (LENO)2182A2189-DIGIDDigital 1/O Expansion ModuleSourceMeter SMU instruments2300INT-SMASMA Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2600-KITScrew Terminal Connect with Strain Relief and Cover2601B, 2602B (2 needed), 2614B, 2612B (2 needed | 237-BAN-3A | Triax to Banana Plug | 4200-SCS, 7072, 7072-HV, DMMs |
| 2>/- RX-H3ARBarrel Adapterinterconnect237-TRX-NGTirx Male-Female Adapter with guar disconnected6517A, 6517B, 7072, 7072-HV, 7078-TRX cables237-TRX-TB3-slot Male to Dual 3-Lug Female Tira tee Adapter200-SCS, 7072, 7072-HV, 7078-TRX cables237-TRX-TBC3-lug Female Tirax Bulkhead Connector7072, 7072-HV, 7078-TRX cables2182-325ASilver Solder for use with 2182-KIT2182A2182-KITkeilef (LEMO)2182A2188Low-Thermal Connector with Strain Relief (LEMO)2182A2199-DIGIObigital 1/O Expansion ModuleSourceMeter SMU instruments2500INT-FC/PCFP/PC Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2600-KITSchwer Terminal Connect with Strain Relief and Cover2601B, 2602B (2 needed), 2614B, 2612B (2 n | 237-BNC-TRX | | |
| 23/-IKA-VOdisconnected1051/a, 051/a, 0024 | 237-TRX-BAR | | |
| 23/-11 Kx1Tee Adapter7078-TRX cables237.TRX:TBC3-Lug Female Triax Bulkhead Connector7072, 7072-HV, 7078-TRX cables2182-325ASilver Solder for use with 2182-KIT2182A2182-325ASilver Solder for use with 2182-KIT2182A2183Low-Thermal Connector with Strain Relief (LEMO)2182A2499-DIGIODigital I/O Expansion ModuleSourceMeter SMU instruments2500INT-FC/PCFP/PC Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2614B, 2612B (2 needed), 2614B2601-RIAX3-Lug Triax Adapter2601B, 2602B (2 needed), 2614B2677A-LIM-3Low Interconnect Module2657A2677A-FN-200200V Protection Module2657A2730-STScrew Terminal Block37203721-STScrew Terminal Block37233723-STScrew Terminal Block37303731-STScrew Terminal Block37303731-STScrew Terminal Block37303731-STScrew Terminal Block37203730-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3743730-STScrew Terminal Block37203731-STScrew Terminal Block37203730-STScrew Terminal Block3731 <t< th=""><td>237-TRX-NG</td><td></td><td>6517A, 6517B, 7072, 7072-HV</td></t<> | 237-TRX-NG | | 6517A, 6517B, 7072, 7072-HV |
| 23/-IKX-IBCConnector70/2, 70/2-HX, 70/8-HX Cables2182-325ASilver Solder for use with 2182-KIT2182A2182-XITLow-Thermal Connector with Strain Relief (LMO)2182A2188Low-Thermal Calibration Shorting Plug2182A2199-DIGIODigital I/O Expansion ModuleSourceMeter SMU instruments2500INT-FC/PCFP/PC Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 261B, 261B, 2612B (2 needed), 2614B, 261B, 2612B (2 needed), 2614B, 261B, 2612B (2 needed), 2614B, 2613B, 2612B (2 needed) | 237-TRX-T | 6 | |
| 2182-KITLow-Thermal Connector with Strain Relief (LEMO)2182A, SC-932188Low-Thermal Calibration Shorting Plug2182A2499-DIGIODigital I/O Expansion ModuleSourceMeter SMU instruments25001NT-SMASMA Connector25001NT integrating sphere25001NT-FC/PCFP/PC Connector25001NT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2604B, 261B, 2612B (2 needed), 2604B, 2617A-11M-32600-KITScrew Terminal Connect Module2657A2600-KITNalog Backplane Extender BoardSeries 3700A3720-STScrew Terminal Block37203721-STScrew Terminal Block37233723-ST1Screw Terminal Block37243730-ST1Screw Terminal Block37303731-STScrew Terminal Block37303730-STScrew Terminal Block37203790-STScrew Terminal Block3720, 3731, 3740, 3750, 3731, 3740, 37503791-KITS0-RSopin Female D-sub Connector Kit3720, 3723, 3724, 37323791-KITS0-RSopin Fema | 237-TRX-TBC | - | 7072, 7072-HV, 7078-TRX cables |
| 2182-KITRelief (LEMO)2182A, SC-932188Low-Thermal Calibration Shorting Plug2182A2499-DIGIODigital I/O Expansion ModuleSourceMeter SMU instruments2500INT-SMASMA Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2601B, 2612B (2 needed), 2601B, 2612B (2 needed), 2604B, 2611B, 2612B (2 needed), 2604B, 2611B, 2612B (2 needed), 2604B, 2613B, 2602B (2 needed), 2604B, 2613B, 2602B (2 needed), 2604B, 2613B, 2602B (2 needed), 2604B, 2613B, 2612B (2 needed), 2604B, 2614B2700-TRIAXS-tew Terminal Block37203723-ST1Screw Terminal Block37303731-STScrew Terminal Block3750, 3731, 3740, 3750, 3714, 3 | 2182-325A | Silver Solder for use with 2182-KIT | 2182A |
| 2499-DIGIODigital I/O Expansion ModuleSourceMeter SMU instruments2500INT-SMASMA Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2611B, 2612B (2 needed), 2614B, 2612B (2 needed), 2614B, 2611B, 2612B (2 needed), 2648B, 2611B, 2612B (2 needed), 2644B, 2611B, 2612B (2 needed), 2644B, 2617B, 2678A, 27003700-STScrew Terminal Block37203721-STScrew Terminal Block3731374-STScrew Terminal Block37403730-STScrew Terminal Block37403730-STScrew Terminal Block37403790-KITS0-RSorew Terminal Block37203790-KITS0-RSorew Terminal Block | 2182-KIT | | 2182A, SC-93 |
| 2500INT-SMASMA Connector2500INT integrating sphere2500INT-FC/PCFP/PC Connector2500INT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2611B, 2612B (2 needed), 2604B, 2611B, 2612B (2 needed), 2604B, 2611B, 2612B (2 needed), 2604B, 2611B, 2612B (2 needed), 2614B2600-TRIAX3-Lug Triax Adapter2601B, 2602B (2 needed), 2604B, 2611B, 2612B (2 needed), 2614B2657A-LIM-3Low Interconnect Module2657A2657A-D0200V Protection Module2657A2657A-STScrew Terminal Block37203720-STScrew Terminal Block37203723-STScrew Terminal Block37213724-STScrew Terminal Block37303731-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403730-STScrew Terminal Block37403740-STScrew Terminal Block37403740-STScrew Terminal Block37403740-STScrew Terminal Block37403790-KITS0-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3722, 37233791-KIT9R-R78-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223792-KIT104-RBNC Shorting PlugInstruments with BNC connectors61713-sl | 2188 | Low-Thermal Calibration Shorting Plug | 2182A |
| 25001NT-FC/PCFP/PC Connector25001NT integrating sphere25001NT-FC/APCFP/APC Connector25001NT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2611B, 2612B (2 needed), 2614B2600-TRIAX3-Lug Triax Adapter2601B, 2602B (2 needed), 2604B, 2611B, 2612B (2 needed), 2614B2677A-LIM-3Low Interconnect Module2657A2677A-PM-200200V Protection Module2657A270-STScrew Terminal Block3720371Screw Terminal Block3721372-STScrew Terminal Block3723372-STScrew Terminal Block3723372-STScrew Terminal Block3724373-STScrew Terminal Block3724373-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3740374-STScrew Terminal Block3740374-STScrew Terminal Block3740379-STScrew Ter | 2499-DIGIO | Digital I/O Expansion Module | SourceMeter SMU instruments |
| 2500INT-FC/APCFP/APC Connector2500INT integrating sphere2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2611B, 2612B (2 needed), 2614B2600-TRIAX3-Lug Triax Adapter2601B, 2602B (2 needed), 2604B, 2611B, 2612B (2 needed), 2614B2657A-LIM-3Low Interconnect Module2657A2657A-PM-200200V Protection Module2657A270-STScrew Terminal Block3720371Screw Terminal Block3721372-STScrew Terminal Block3723372-STScrew Terminal Block3723372-STScrew Terminal Block3724373-STScrew Terminal Block37243730-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block37403730-STScrew Terminal Block37403740-STScrew Terminal Block37403790-KITSO-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3722, 3723, 3724, 37323792-KITI04-R/F104-pin Male D-sub Connector Kit37223792-KITI04-R/F104-pin Female D-sub Connector Kit37223792-KITI04-R/F104-pin Female D-sub Connector Kit37223792-KITI04-R/F104-pin Female D-sub Connector Kit37223792-KITI04-R/F104-pin Female D-sub Connector Kit3722 </th <td>2500INT-SMA</td> <td>SMA Connector</td> <td>2500INT integrating sphere</td> | 2500INT-SMA | SMA Connector | 2500INT integrating sphere |
| 2600-KITScrew Terminal Connector with Strain Relief and Cover2601B, 2602B (2 needed), 2611B, 2612B (2 needed)2600-TRIAX3-Lug Triax Adapter2601B, 2602B (2 needed), 2604B, 2611B, 2612B (2 needed), 2614B2657A-LIM-3Low Interconnect Module2657A2657A-PM-200200V Protection Module2657A2657A-PM-200200V Protection Module2657A3706-BKPLAnalog Backplane Extender BoardSeries 3700A3720-STScrew Terminal Block37203721-STScrew Terminal Block37233723-ST1Screw Terminal Block37233724-STScrew Terminal Block37243730-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Genale2-lug triax connectors61713- | 2500INT-FC/PC | FP/PC Connector | 2500INT integrating sphere |
| 2000-KI1Relief and Cover2612B (2 needed)2600-TRIAX3-Lug Triax Adapter2601B, 2602B (2 needed), 2604B, 2611B, 2612B (2 needed), 2614B2657A-LIM-3Low Interconnect Module2657A2657A-PM-200200V Protection Module2657A2657A-PM-200200V Protection Module2657A3706-BKPLAnalog Backplane Extender BoardSeries 3700A3720-STScrew Terminal Block37213723-STScrew Terminal Block37233723-STScrew Terminal Block37233724-STScrew Terminal Block37243730-STScrew Terminal Block37303731-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block3721, 3730, 3731, 3740, 37503791-KIT0-R50-pin Female D-sub Connector Kit3722, 3723, 3724, 37323792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Gemale2-lug triax connectors61713-slot Male to 3-Lug Female Triax Adapter2-lug triax connectors< | 2500INT-FC/APC | FP/APC Connector | 2500INT integrating sphere |
| 2000-IKIAX3-Lug Irlax Adapter2611B, 2612B (2 needed), 2614B2657A-LIM-3Low Interconnect Module2657A2657A-PM-200200V Protection Module2657A3706-BKPLAnalog Backplane Extender BoardSeries 3700A3720-STScrew Terminal Block37213723-STScrew Terminal Block37233723-STScrew Terminal Block37233724-STScrew Terminal Block37243730-STScrew Terminal Block37303731-STScrew Terminal Block3731374-STScrew Terminal Block3731374-STScrew Terminal Block37313740-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223791-KIT78-RSolot Male to 2-Lug Female Triax Adapter2-lug triax connectors61712-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit< | 2600-KIT | | |
| 2657A-PM-200200V Protection Module2657A3706-BKPLAnalog Backplane Extender BoardSeries 3700A3720-STScrew Terminal Block37213721-STScrew Terminal Block37213723-STScrew Terminal Block37233723-STScrew Terminal Block37233724-STScrew Terminal Block37313724-STScrew Terminal Block37313724-STScrew Terminal Block37313730-STScrew Terminal Block37313731-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223791-KIT3-RS-slot Male to 2-Lug Female Triax Adapter7065, 2500INT7011-SZ-slot Ma | 2600-TRIAX | 3-Lug Triax Adapter | |
| 3706-BKPLAnalog Backplane Extender BoardSeries 3700A3720-STScrew Terminal Block37203721-STScrew Terminal Block37213723-STScrew Terminal Block37233723-STScrew Terminal Block37233723-STScrew Terminal Block37243724-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3720, 3721, 3740, 37503791-KIT78-R78-pin Female D-sub Connector Kit3720, 3723, 3724, 37323792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223791-KIT4-R/F104-pin Gemale Triax Adapter2-lug triax connectors61713-slot Male to 3-Lu | 2657A-LIM-3 | Low Interconnect Module | 2657A |
| 3720-STScrew Terminal Block37203721-STScrew Terminal Block37213723-STScrew Terminal Block37233723-STScrew Terminal Block37233723-STScrew Terminal Block37243724-STScrew Terminal Block37243730-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-KIT78-R78-pin Female D-sub Connector Kit3722, 37233791-KIT78-R104-pin Male D-sub Connector Kit37223792-KIT104-R/104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223791-KIT4-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223791-KIT4-R/F104-pin Ale to 2-Lug Female Triax Adapter2-lug triax connectors61712-slot Male to 3-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7011- | 2657А-РМ-200 | 200V Protection Module | 2657A |
| 3721-STScrew Terminal Block37213723-STScrew Terminal Block37233723-STScrew Terminal Block37233723-ST-1Screw Terminal Block37243724-STScrew Terminal Block37243730-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3723, 3724, 37323791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223791-KITBNC Shorting PlugInstruments with BNC connectors61712-slot Male to 3-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 701 | 3706-BKPL | Analog Backplane Extender Board | Series 3700A |
| 3723-STScrew Terminal Block37233723-ST-1Screw Terminal Block37233724-STScrew Terminal Block37243730-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223792-KIT104-RBNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter70017001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011-STExtra Screw Terminal Board7011-S712-STExtra Screw Terminal Board7012-S | 3720-ST | Screw Terminal Block | 3720 |
| 3723-ST-1Screw Terminal Block37233724-STScrew Terminal Block37243730-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R104-pin Female D-sub Connector Kit37223791-KIT78-RSelot Male to 2-Lug Female Triax Adapter2-lug triax connectors61712-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011-SExtra Screw Termina | 3721-ST | Screw Terminal Block | 3721 |
| 3724-STScrew Terminal Block37243730-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223791-KIT78-RRemale D-sub Connector Kit37223791-KIT78-RRemale D-sub Connector Kit37203791-KIT78-RRemale D-sub Connector Kit37203791-KIT78-RFemale D-sub Connector | 3723-ST | Screw Terminal Block | 3723 |
| 3730-STScrew Terminal Block37303731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit3720, 3723, 3724, 37323792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Semale D-sub Connector Kit37223792-KIT104-R/F104-pin Semale D-sub Connector Kit37223792-KIT104-R/F104-pin Semale D-sub Connector Kit37223792-KIT104-R/FNale to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7011-CNMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011-STExtra Screw Terminal Board7011-S7012-STExtra Screw Terminal Board7012-S | 3723-ST-1 | Screw Terminal Block | 3723 |
| 3731-STScrew Terminal Block37313740-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit37223792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F2-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter70017011-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011 | 3724-ST | Screw Terminal Block | 3724 |
| 3740-STScrew Terminal Block37403750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit3720, 3723, 3724, 37323792-KIT104-R/F104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37224851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7005, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7012-STExtra Screw Terminal Board7011-S7012-STExtra Screw Terminal Board7012-S | 3730-ST | Screw Terminal Block | 3730 |
| 3750-STScrew Terminal Block37503790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit3720, 3723, 3724, 37323792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37224851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7012-STExtra Screw Terminal Board7012-S | 3731-ST | Screw Terminal Block | 3731 |
| 3790-KIT50-R50-pin Female D-sub Connector Kit3721, 3730, 3731, 3740, 37503791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit3720, 3723, 3724, 37323792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37224851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7012-STExtra Screw Terminal Board7012-S | 3740-ST | Screw Terminal Block | 3740 |
| 3791-CITContact Insertion and Extraction Tool3720, 3722, 37233791-KIT78-R78-pin Female D-sub Connector Kit3720, 3723, 3724, 37323792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37224851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011-STExtra Screw Terminal Board7011-S7012-STExtra Screw Terminal Board7012-S | 3750-ST | Screw Terminal Block | 3750 |
| 3791-KIT78-R78-pin Female D-sub Connector Kit3720, 3723, 3724, 37323792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37224851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011-STExtra Screw Terminal Board7011-S7012-STExtra Screw Terminal Board7012-S | 3790-KIT50-R | 50-pin Female D-sub Connector Kit | 3721, 3730, 3731, 3740, 3750 |
| 3792-KIT104-R104-pin Male D-sub Connector Kit37223792-KIT104-R/F104-pin Female D-sub Connector Kit37224851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7012-STExtra Screw Terminal Board7012-S | 3791-CIT | Contact Insertion and Extraction Tool | 3720, 3722, 3723 |
| 3792-KIT104-R/F104-pin Female D-sub Connector Kit37224851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7012-STExtra Screw Terminal Board7012-S | 3791-KIT78-R | 78-pin Female D-sub Connector Kit | 3720, 3723, 3724, 3732 |
| 4851BNC Shorting PlugInstruments with BNC connectors61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011-STExtra Screw Terminal Board7011-S7012-STExtra Screw Terminal Board7012-S | 3792-KIT104-R | 104-pin Male D-sub Connector Kit | 3722 |
| 61713-slot Male to 2-Lug Female Triax Adapter2-lug triax connectors61722-slot Male to 3-Lug Female Triax Adapter7065, 2500INT7001-PNLMetal Plate70017011-KIT-RFemale 96-pin Connector Kit7011-C, 7012-C, 7013-C, 7015-C, 7018-C7011-STExtra Screw Terminal Board7011-S7012-STExtra Screw Terminal Board7012-S | 3792-KIT104-R/F | 104-pin Female D-sub Connector Kit | 3722 |
| 61/1 Triax Adapter 2-lug triax connectors 6172 2-slot Male to 3-Lug Female Triax Adapter 7065, 2500INT 7001-PNL Metal Plate 7001 7011-KIT-R Female 96-pin Connector Kit 7011-C, 7012-C, 7013-C, 7015-C, 7018-C 7011-ST Extra Screw Terminal Board 7011-S 7012-ST Extra Screw Terminal Board 7012-S | 4851 | BNC Shorting Plug | Instruments with BNC connectors |
| 01/2 Triax Adapter 7003, 2300141 7001-PNL Metal Plate 7001 7011-KIT-R Female 96-pin Connector Kit 7011-C, 7012-C, 7013-C, 7015-C, 7018-C 7011-ST Extra Screw Terminal Board 7011-S 7012-ST Extra Screw Terminal Board 7012-S | 6171 | | 2-lug triax connectors |
| 7011-KIT-R Female 96-pin Connector Kit 7011-C, 7012-C, 7013-C, 7015-C, 7018-C 7011-ST Extra Screw Terminal Board 7011-S 7012-ST Extra Screw Terminal Board 7012-S | 6172 | | 7065, 2500INT |
| 7011-KTI-K Female 90-pin Connector Kit 7018-C 7011-ST Extra Screw Terminal Board 7011-S 7012-ST Extra Screw Terminal Board 7012-S | 7001-PNL | Metal Plate | 7001 |
| 7012-ST Extra Screw Terminal Board 7012-S | 7011-KIT-R | Female 96-pin Connector Kit | |
| | 7011-ST | Extra Screw Terminal Board | 7011-5 |
| 7013-ST Extra Screw Terminal Board 7013-S | 7012-ST | Extra Screw Terminal Board | 7012-8 |
| | 7013-ST | Extra Screw Terminal Board | 7013-S |

| Model | Name | Use With: |
|--------------|--|---|
| 7015-ST | Extra Screw Terminal Board | 7015-8 |
| 7018-ST | Extra Screw Terminal Board | 7018-S |
| 7072-TRT | Triax Removal Tool | 707B, 708B |
| 7074-CIT | Contact Extraction Tool | 7152-KIT, 7152-MTR |
| 7078-CIT | Contact Insertion/Extraction Tool | 7078-KIT, 7078-MTR, 7152-KIT, 7152-MTR |
| 7078-НСТ | Hand Crimping Tool for 7078-KIT, 7169-KIT | 7078-KIT |
| 7078-KIT | Connector Kit | 7071, 7071-4, 7074-D, 7078-MTR |
| 7078-MTR | Mass Terminated Receptacle, Bulkhead Mount | 7071, 7071-4, 7078-KIT, 7078-MTC |
| 7078-TRX-BNC | 3-slot Male Triax to BNC Adapter | 4210-CVU, 4801, 6482, 6487, 6514, 6517A, 6517B, 7072, 7072-HV |
| 7078-TRX-GND | 3-slot Male Triax to BNC Adapter (guard removed) | 4200-SCS, 4801, 6517A, 6517B, 7072, 7072-HV, Series 2600B |
| 7078-TRX-TBC | 3-Lug Female Triax Bulkhead Connector w/Cap | 7078-TRX cables |
| 7152-НСТ | Hand Crimp Tool for 7152-KIT, 7152-MTR | 7152-KIT, 7152-MTR |
| 7152-KIT | 6-Position M-Series Plug w/Contacts | 7152, 7152-MTR |
| 7152-MTR | 6-Position M-Series Receptacle w/Sockets | 7152, 7152-KIT, 7152-MTC-2, 7152-MTC-10 |
| 7703-306A | DB50 Male Connector Kit | 7701, 7703, 7705, 7709 |
| 7709-308A | DB25 Male Connector Kit | 7701, 7707, 7709, Series 2600B |
| 7712-SMA-N | Female SMA to Male N-Type Adapter | 7711, 7712 |
| 7755 | 50 Ω Feed-Through Terminator | RG 58 cable, 776, 3390 |
| 7788 | 50-pin D Subconnector Kit | 7703, 7705, 77XX, modules with D sub connectors |
| 7789 | 50-pin Male and 25-pin Male D-Shell Connector Kit | 7701, 7709 |
| 7790 | 50-pin Male, 50-pin Female, and 25-pin Male IDC D-Shell Connector Kit | 7701, 7703, 7705, 7707, 7709 |
| 8610 | Low Thermal Shorting Plug | 2000, 2001, 2002, 2010 |
| 8620 | 4-Wire DMM Shorting Plug | 2000, 2001, 2002, 2010, 2015, 2016, 2100, 2110, Series 2400, Series 2700 Series 3700A |
| 8680 | RTD Probe Adapter | 2001, 2002, 2010, 2110 |
| BG-18 | Dual Banana to BNC Coaxial Adapter | Series 2000, 2100, 2110, Series 2400 2700, 2750 |
| CAP-18 | Protective Shield/Cap | BNC, 2-lug triax connectors |
| CAP-31 | Protective Shield/Cap | 3-lug triax connectors |
| CA-573-3A1 | 4-Pin Round Interlock Cable, Unterminated | 2657A-LIM-3 |
| CS-400 | DB25 Male Solder Cup | CA-126-1 cable, 213 |
| CS-458 | Interlock Connector Kit | 6517-ILC-3 |
| CS-565 | BNC Barrel, 4200-SCS | BNC interconnect |
| CS-630 | 3-Lug Female Triax Bulkhead Connector | 6487, 6517A, 6517B |
| CS-631 | 3-Lug Male Triax Cable Mount Connector | 4200-SCS, SC-22 cable |
| CS-701 | BNC Tee Adapter (Female-Male-Female) | 4200-SCS |
| CS-719 | 3-Lug Triax Jack Receptacle | 4200-SCS |
| CS-846 | Screw Terminal Test Lead Connector | 230X, 2510, 2510-AT |
| CS-970 | High Voltage Bulkhead Connector | 248, 248-SHV cable |




www.keithley.com



| Model | Name | Use With: |
|-----------|--|--------------|
| CS-1247 | SMA Female to BNC Male Adapter | 4200-SCS |
| CS-1249 | SMA Female to SMB Plug Adapter | 4200-SCS |
| CS-1251 | BNC Female to SMB Plug Adapter | 4200-SCS |
| CS-1252 | SMA Male to BNC Female Adapter | 4200-SCS |
| CS-1281 | SMA Female to SMA Female Adapter | 4200-SCS |
| CS-1305 | Interlock Connector | 6517B |
| CS-1390 | Male LEMO Triax to Female SMA Adapter | 4200-SCS |
| CS-1391 | SMA Tee Adapter (Female-Male-Female) | 4200-SCS |
| CS-1423-3 | Miniature Mating Connector | 2635B, 2636B |
| CS-1479 | SMA Male to BNC Male Adapter | 4200-SCS |

| Model | Name | Use With: |
|------------|--|--|
| CS-1592-2 | Screw Terminal Plug | 2651A |
| CS-1626-2 | Screw Terminal Receptacle | 2651A |
| CS-1629-8 | Screw Terminal Connector | 2651A |
| CS-1638-12 | Rear Panel Mounting Connector | 2200-20-5, 2200-30-5, 2200-32-3, 2200-60-2, 2200-72-1 |
| CS-1655-15 | Rear Panel Mating Connector | 2220-30-1, 2220J-30-1, 2230-30-1, 2230J-30-1 |
| HV-CS-1613 | High Voltage Triax Feed Through Connector/Barrel (female to female) | 2657A, 2600-PCT-x, 4200-PCT-x |
| TL-24 | SMA Torque Wrench | 4200-SCS, System 46, System 46T |

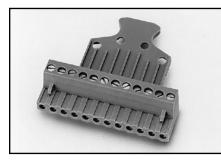

Model 213-CON Rear Panel Mating Connector: Quick disconnect, 12-screw terminal connector with handle.

For use with: 2200-20-5, 2200-30-5, 2200-32-3, 2200-60-2, 2200-72-1



Model 237-BAN-3A Triax to Banana Plug: Triax cable center conductor terminated in a safety banana plug (guard and shield open). For connecting DMMs and other banana jack instruments to a matrix or fixture.

For use with: 4200-SCS, 7072, 7072-HV, DMMs



Model 237-BNC-TRX: Male BNC to 3-lug female triax adapter (guard disconnected). Terminates triax cable in BNC plug. High voltage rating for use with 7072-HV.

For use with: 4200-SCS, 6517A, 6517B, 7078-TRX cables



Model 237-TRX-BAR: 3-lug triax barrel (female to female) for use with triax interconnect.

For use with: 2635B, 2636B, 4200-SCS, triax interconnect



Model 237-TRX-NG: 3-slot triax to 3-lug female triax adapter (guard removed) for non-guarded measurements. High voltage rating for use with 7072-HV, etc.

For use with: 6517A, 6517B, 7072, 7072-HV



Model 237-TRX-T: 3-slot male to dual 3-lug female triax tee adapter for use with 7078-TRX cables and 7072/7072-HV Semiconductor Matrix Cards. High voltage rating for use with Model 6517B Electrometer.

For use with: 4200-SCS, 6517A, 6517B, 7072, 7072-HV, 7078-TRX cables

ACCESSORIES



Model 237-TRX-TBC: 3-lug female triax bulkhead connector with cap for assembly of custom panels and interface connections. High voltage rating for use with 7072-HV, etc. Uses miniature coax cable, not triax cable, at soldered end. Bulkhead is outer shield.

For use with: 7072, 7072-HV, 7078-TRX cables

Model 2182-325A: Silver solder for making connections in experiments with the Model 2182A. 20 ft roll.

For use with: 2182A



Model 2182-KIT Low-Thermal Connector with Strain Relief: Connector kit for building a custom input cable for the Model 2182A Nanovoltmeter. Includes a low-thermal (LEMO) connector and a strain relief.

For use with: 2182A, SC-93



Model 2188 Low-Thermal Calibration Shorting Plug: A low-resistance, low-thermal shorting plug required to calibrate the Model 2182A Nanovoltmeter. Made of a LEMO connector with its pin connectors shorted together using copper wire and Sn/Ag4 silver solder.

For use with: 2182A



Model 2499-DIGIO: Digital I/O expansion module that plugs onto the DB-9 connector of a SourceMeter[®] SMU instrument. Expands the three digital I/O lines of the SourceMeter to 16 lines. The SOT, EOT/BUSY, 5V, GND, and Interlock signals are passed through.

Services Available: 1-year factory warranty extended to 3 years from date of shipment

For use with: SourceMeter SMU Instruments

Model 2500INT-FC/ APC: FC/APC connector for 2500-INT Integrating Sphere.

For use with: 2500-INT

Model 2500INT-FC/ PC: FC/PC connector for 2500-INT Integrating Sphere.


For use with: 2500-INT

Model 2500INT-SMA: SMA connector for 2500-INT Integrating Sphere. For use with: 2500-INT







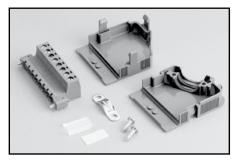

Model 2600-KIT: Screw terminal connector kit with extra screw terminal connector, strain relief, and cover for a single SourceMeter channel (two needed for use with Models 2602B, 2612B, and 2614B).

For use with: 2601B, 2602B, 2604B, 2611B, 2612B, 2614B, 2651A



Model 2600-TRIAX: Triax adapter for a single Series 2600B SourceMeter channel (two needed for use with Models 2602B and 2612B). For use with standard 3-lug triax cables.

For use with: 2601B, 2602B, 2611B, 2612B







Model 2657A-LIM-3: Low Interconnect Module for use with 2657A, HV triax cables (3kV rated).

For use with: Series 2657A




2657A-PM-200: 200V protection module to protect standard triax instruments from 2657A, standard and HV triax cables (3kV rated).

For use with: Series 2657A



Model 3706-BKPL: Analog backplane extender board, 15-pin D-sub to terminal block.

For use with: Series 3700A

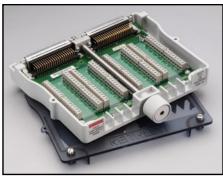

Model 3720-ST: Screw Terminal Block. Required with the Model 3720 for automatic CJC thermocouple measurements.

For use with: 3720



Model 3721-ST: Screw Terminal Block. Required with the Model 3721 for automatic CJC thermo-couple measurements.

For use with: 3721




Model 3723-ST: Screw Terminal Block. Accessory for Model 3723 for two-pole applications.

For use with: 3723




Model 3723-ST-1: Screw Terminal Block. Accessory for the Model 3723 for single-pole applications.

For use with: 3723

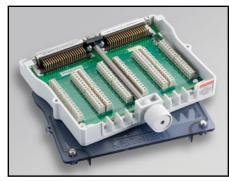

Model 3724-ST: Screw Terminal Block. For use with: 3724

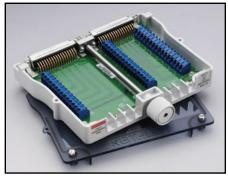

Model 3730-ST: Screw Terminal Block. For use with: 3730

Connectors, adapters, and tools





Model 3731-ST: Screw Terminal Block.

For use with: 3731

Connectors, adapters, and tools



Model 3732-ST-C: Screw Terminal Block. Enables screw terminal access and additional matrix sizes including: quad 4×28 (1W), dual 4×28 (2W), single 4×56 (2W), dual 4×56 (1W), and single 4×112 (1W).

For use with: 3732



Model 3732-ST-R: Screw Terminal Block. Enables screw terminal access and additional matrix sizes including: dual 8×28 (1W), single 8×28 (2W), and single 16×28 (1W).

For use with: 3732



Model 3740-ST: Screw Terminal Block. For use with: 3740



Model 3750-ST: Screw Terminal Block. For use with: 3750



Model 3790-KIT50-R: 50-pin female D-sub connector kit that contains two female D-sub connectors and 100 solder cup contacts. Use for assembly of custom cable and harnesses compatible with Series 3700A plug-in cards.

For use with: 3721, 3730, 3731, 3740, 3750



Model 3791-CIT: Contact insertion and extraction tool for assembly and maintenance of Series 3700A D-sub Connector kits.

For use with: 3791-KIT78-R, 3791-KIT104-R



Model 3791-KIT78-R: 78-pin female D-sub connector kit that contains two female D-sub connectors and 156 solder-cup contacts. Use for assembly of custom cable and harnesses compatible with Series 3700A plug-in cards.

For use with: 3720, 3723, 3724, 3732



Model 3792-KIT104-R: 104-pin male D-sub connector kit that contains two male D-sub connectors with housings and 208 solder-cup contacts. Use for assembly of custom cable and harnesses compatible with Series 3700A plug-in cards.

For use with: 3722







Model 3792-KIT104-R/F: 104-pin female D-sub connector kit that contains two female D-sub connectors with housings and 208 solder-cup contacts. Use for assembly of custom cables, harnesses, and DUT interface compatible with Series 3700A plug-in cards.

For use with: 3722



Model 4851: BNC shorting plug. For use with: Instruments with BNC connectors



Model 6171: 3-slot male to 2-lug female triax adapter.

For use with: 2-lug triax connectors



Model 6172: 2-slot male to 3-lug female triax adapter. For use in adapting Models 7065 and 250INT inputs to 3-slot triax plugs.

For use with: 2500INT, 7065




Model 7001-PNL: Metal plate used to cover an empty card slot on the rear panel of a Model 7001.

For use with: 7001




Model 7011-KIT-R: 96-pin female DIN connector with solder eyelets and strain relief. This kit can be used for assembly of custom cables to connect with the connectors on the 7011-C, 7012-C, 7013-C, 7015-C, and 7018-C switch cards. Also connects with the 7011-MTR bulkhead mount male connector.

For use with: 7011-C, 7012-C, 7013-C, 7015-C, 7018-C

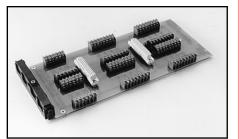


Model 7011-ST: Extra quick disconnect screw terminal board. One 7011-ST is included with each 7011-S.

For use with: 7011-S

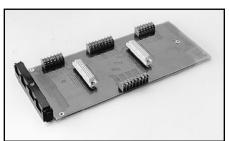

Model 7012-ST: Extra quick disconnect screw terminal board. One 7012-ST is included with each 7012-S.


For use with: 7012-S

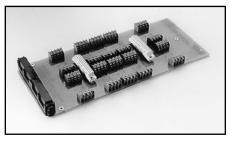

Model 7013-ST: Extra quick disconnect screw terminal board. One 7013-ST is included with each 7013-S.

For use with: 7013-S


ACCESSORIES

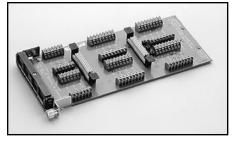

Model 7015-ST: Extra quick disconnect screw terminal board. One 7015-ST is included with each 7015-S.


For use with: 7015-S

Connectors, adapters, and tools

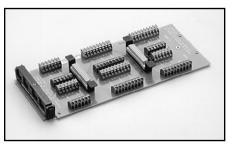


Model 7018-ST: Extra quick disconnect screw terminal board. One 7018-ST is included with each 7018-S.

For use with: 7018-S

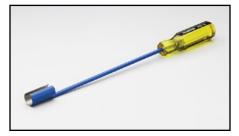

Model 7072-TRT: Triax removal tool used to connect or disconnect triax style connectors when clearance is limited making it difficult to mate or unmate a connector with your fingers.

For use with: 707B, 708B

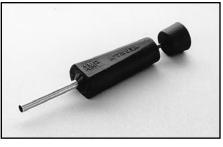

Model 7074-CIT: Contact extraction tool for removal of contacts from cables and connectors.

For use with: 7152-KIT, 7152-MTR




Model 7078-CIT: Contact insertion and extraction tool for assembly and maintenance of 7078-MTC cables and connectors.

For use with: 7078-KIT, 7078-MTR, 7152-KIT, 7152-KIT, 7152-MTR




Model 7078-HCT: Contact crimping pliers for assembly of cables and connectors using 7078-MTR or 7078-KIT.

For use with: 7078-KIT

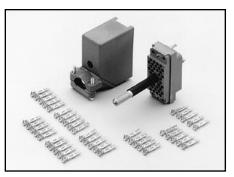

Model 7078-KIT: 38-pin male plug assembly with strain relief and 40 contacts for assembly of custom cable and harnesses compatible with Model 7071 8×12 Matrix Card, Model 7071-4 Dual 4×12 Matrix Card, and 7078-MTR Mass Terminated Receptacle. Requires 7078-HCT; recommend 7078-CIT.

For use with: 7071, 7071-4, 7074-D, 7078-MTR

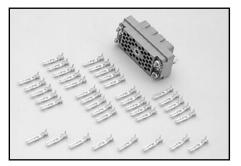

Model 7078-MTR: 38-pin female bulkhead mount receptacle with 40 contacts for custom interface and patch panels compatible with 7078-MTC and 7078-KIT. Requires 7078-HCT; recommend 7078-CIT.

For use with: 7078-KIT, 7078-MTC, 7071, 7071-4



Model 7078-TRX-BNC: 3-slot male triax to BNC adapter for use with 7072 Semiconductor Matrix Card and 4801 cables.

For use with: 4210-CVU, 4801, 6482, 6487, 6514, 6517A, 6517B, 7072, 7072-HV





Model 7078-TRX-GND: 3-slot male triax to female BNC adapter (guard removed) for adapting non-guarded measurements to the Model 7072 or 7072-HV Semiconductor Matrix Cards or 8006 or 8008 Test Fixtures.

For use with: Series 2600B, 4801, 6517A, 6517B, 7072, 7072-HV




Model 7078-TRX-TBC: 3-lug female triax bulkhead connector with cap for assembly of custom panels and interface connections.

For use with: 7078-TRX Cables



Model 7152-HCT: Contact crimping pliers for assembly of cables and connector using 7152-MTR or 7152-KIT.

For use with: 7152-KIT, 7152-MTR

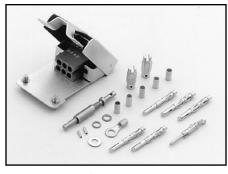

Model 7152-KIT: 6-pin plug assembly with strain relief and contacts for assembly of custom cable and harnesses compatible with Model 7152 4×5 Low Current Matrix Card and 7152-MTR Mass Terminated Receptacle. Requires 7152-HCT recommend 7074-CIT and 7074-HCT.

For use with: 7152, 7152-MTR



Model 7152-MTR: 6-pin bulkhead mount receptacle with contacts for custom interface and patch panels compatible with 7152-MTC and 7152-KIT. Requires 7152 HCT; recommend 7074-CIT and 7074-HCT.

For use with: 7152, 7152-KIT, 7152-MTC-2, 7152-MTC-10



Model 7703-306A: DB50 male connector kit (solder cup) with shell.

For use with: 7701, 7703, 7705, 7709



Model 7709-308A: DB25 male connector kit (solder cup) with shell.

For use with: 7701, 7707, 7709, Series 2600B



Model 7712-SMA-N: Female SMA to male N-type adapter.

For use with: 7711, 7712



Model 7755 50 Ω Feed-Through Terminator: BNC-to-BNC adapter for terminating RG58 cable in its characteristic impedance. VSWR <1.1, DC-250MHz.

For use with: RG58 Cable, 776, 3390







Model 7788: 50-pin D subminiature connector kit. To mate with 50-pin connector on Model 7703 and 7705.

For use with: 7703, 7705, 77xx modules with **D-sub connectors**



Model 7789: 50-pin/25-pin (both male) D-Shell Kit (one of each) for 7701 or 7709 Integra modules (mating connectors are supplied with these modules when purchased).

For use with: 7701, 7709




Model 7790: 50 pin male, 50 pin female, 25 pin male IDC D-Shell Connector Kit (one each). For use with: 7701, 7703, 7705, 7707, or 7709 Integra modules



Model 8610 Low Thermal Shorting Plug: For calibration lab use, this plug provides a very low thermal offset short at front or rear inputs.

For use with: All DMMs

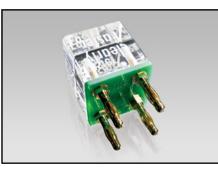

Model 8620 Four-Wire DMM Shorting Plug: Provides a low resistance 4-wire short to both observe and cancel DMM offset resistances and voltages to improve measurement accuracies.

For use with: All DMMs, Series 2400, Series 2700, Series 3700A



Model 8680 RTD Probe Adapter: Provides a means of connecting RTD probes terminated in either a 4-wire instrumentation connector or bare wires to safety input jacks on a 0.5 inch spacing.

For use with: 2001, 2002, 2010, 2100, 2110, 8681



BG-18: Dual banana to BNC coaxial adapter for adapting connection on instrument with dual banana jack.

For use with: All DMMs, Series 2400



CAP-18: Protective shield/cap for BNC connectors. For use with: BNC connectors



CAP-31: Protective shield/cap for 3-lug triax connectors.

For use with: 3-lug triax connectors



CS-400: DB25 male solder cup. For use with: C126-1 cable, 213



CS-458: Interlock connector kit to mate with 6517-ILC-3. For use with: 6517-ILC-3







CS-565: Female BNC to female BNC adapter with 50Ω nominal impedance.

For use with: 4200-SCS, BNC interconnect



CS-630: 3-lug female triax bulkhead connector for soldered connection. Mates with CS-631. **For use with: Fixtures, 6487, 6517A, 6517B**



CS-631: 3-slot male triax cable mount connector for use with SC-22 cable. Mates to Models 7072, and 8006.

For use with: 4200-SCS, SC-22 cable



CS-701: BNC tee adapter (female, male, female). **For use with: 4200-SCS**



CS-719: 3-lug triax jack receptacle. For use with: 4200-SCS



CS-846: Eight position connector with screw terminals for connection to test leads. For use with: 230x, 2510, 2510-AT



CS-970: High voltage bulkhead connector. For use with: 248, 248-SHV cable



CS-1247: SMA female to BNC male adapter For use with: 4200-SCS



CS-1249: SMA female to SMB plug adapter For use with: 4200-SCS



CS-1251: BNC female to SMB plug adapter **For use with: 4200-SCS**



CS-1252: SMA male to BNC female adapter For use with: 4200-SCS



CS-1281: SMA female to SMA female adapter For use with: 4200-SCS



CS-1305: Interlock connector to mate with Model 6517B.

For use with: 6517B

Connectors, adapters, and tools





CS-1390: Male LEMO triax to female SMA adapter

For use with: 4200-SCS

Connectors, adapters, and tools



CS-1391: SMA tee adapter (female-male-female) **For use with: 4200-SCS**



CS-1423-3: Miniature mating connector used as a ground connector for the Models 2635B and 2636B.

For use with: 2635B, 2636B



CS-1479: SMA male to BNC male adapter. For use with: 4200-SCS



C**S-1592-2:** 2-pin male screw terminal connector plug. Rated 50A. Mates with the Model CS-1626-2 screw terminal block.

For use with: 2651A



CS-1626-2: 2-pin female screw terminal connector block. Rated 50A. Mates with Model CS-1592-2 screw terminal connector.

For use with: 2651A



CS-1629-8: 8-pin female cable termination block.

For use with: 2651A



CS-1638-12: 12-pin rear panel output connector. For use with: 2200-20-5, 2200-30-5, 2200-32-3, 2200-60-2, 2200-72-1



CS-1655-15: 15-pin rear panel output connector. For use with: 2200-30-1, 2220J-30-1, 2230-30-1, 2230J-30-1



HV-CS-1613: High voltage triax feed through connector/barrel (female to female) (3kV rated).

For use with: For use with: 2600-PCT-x, 2657A, 4200-PCT-x



TL-24: SMA torque wrench For use with: 4200-SCS, System 46, System 46T





Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Keithley Instruments, Inc.: 7078-TRX-GND 3740-ST 3750-ST 3792-KIT104-R 2188 8620 3724-ST 7078-TRX-TBC