


Table with 3 columns: PART NUMBER, REV, FIRST USED

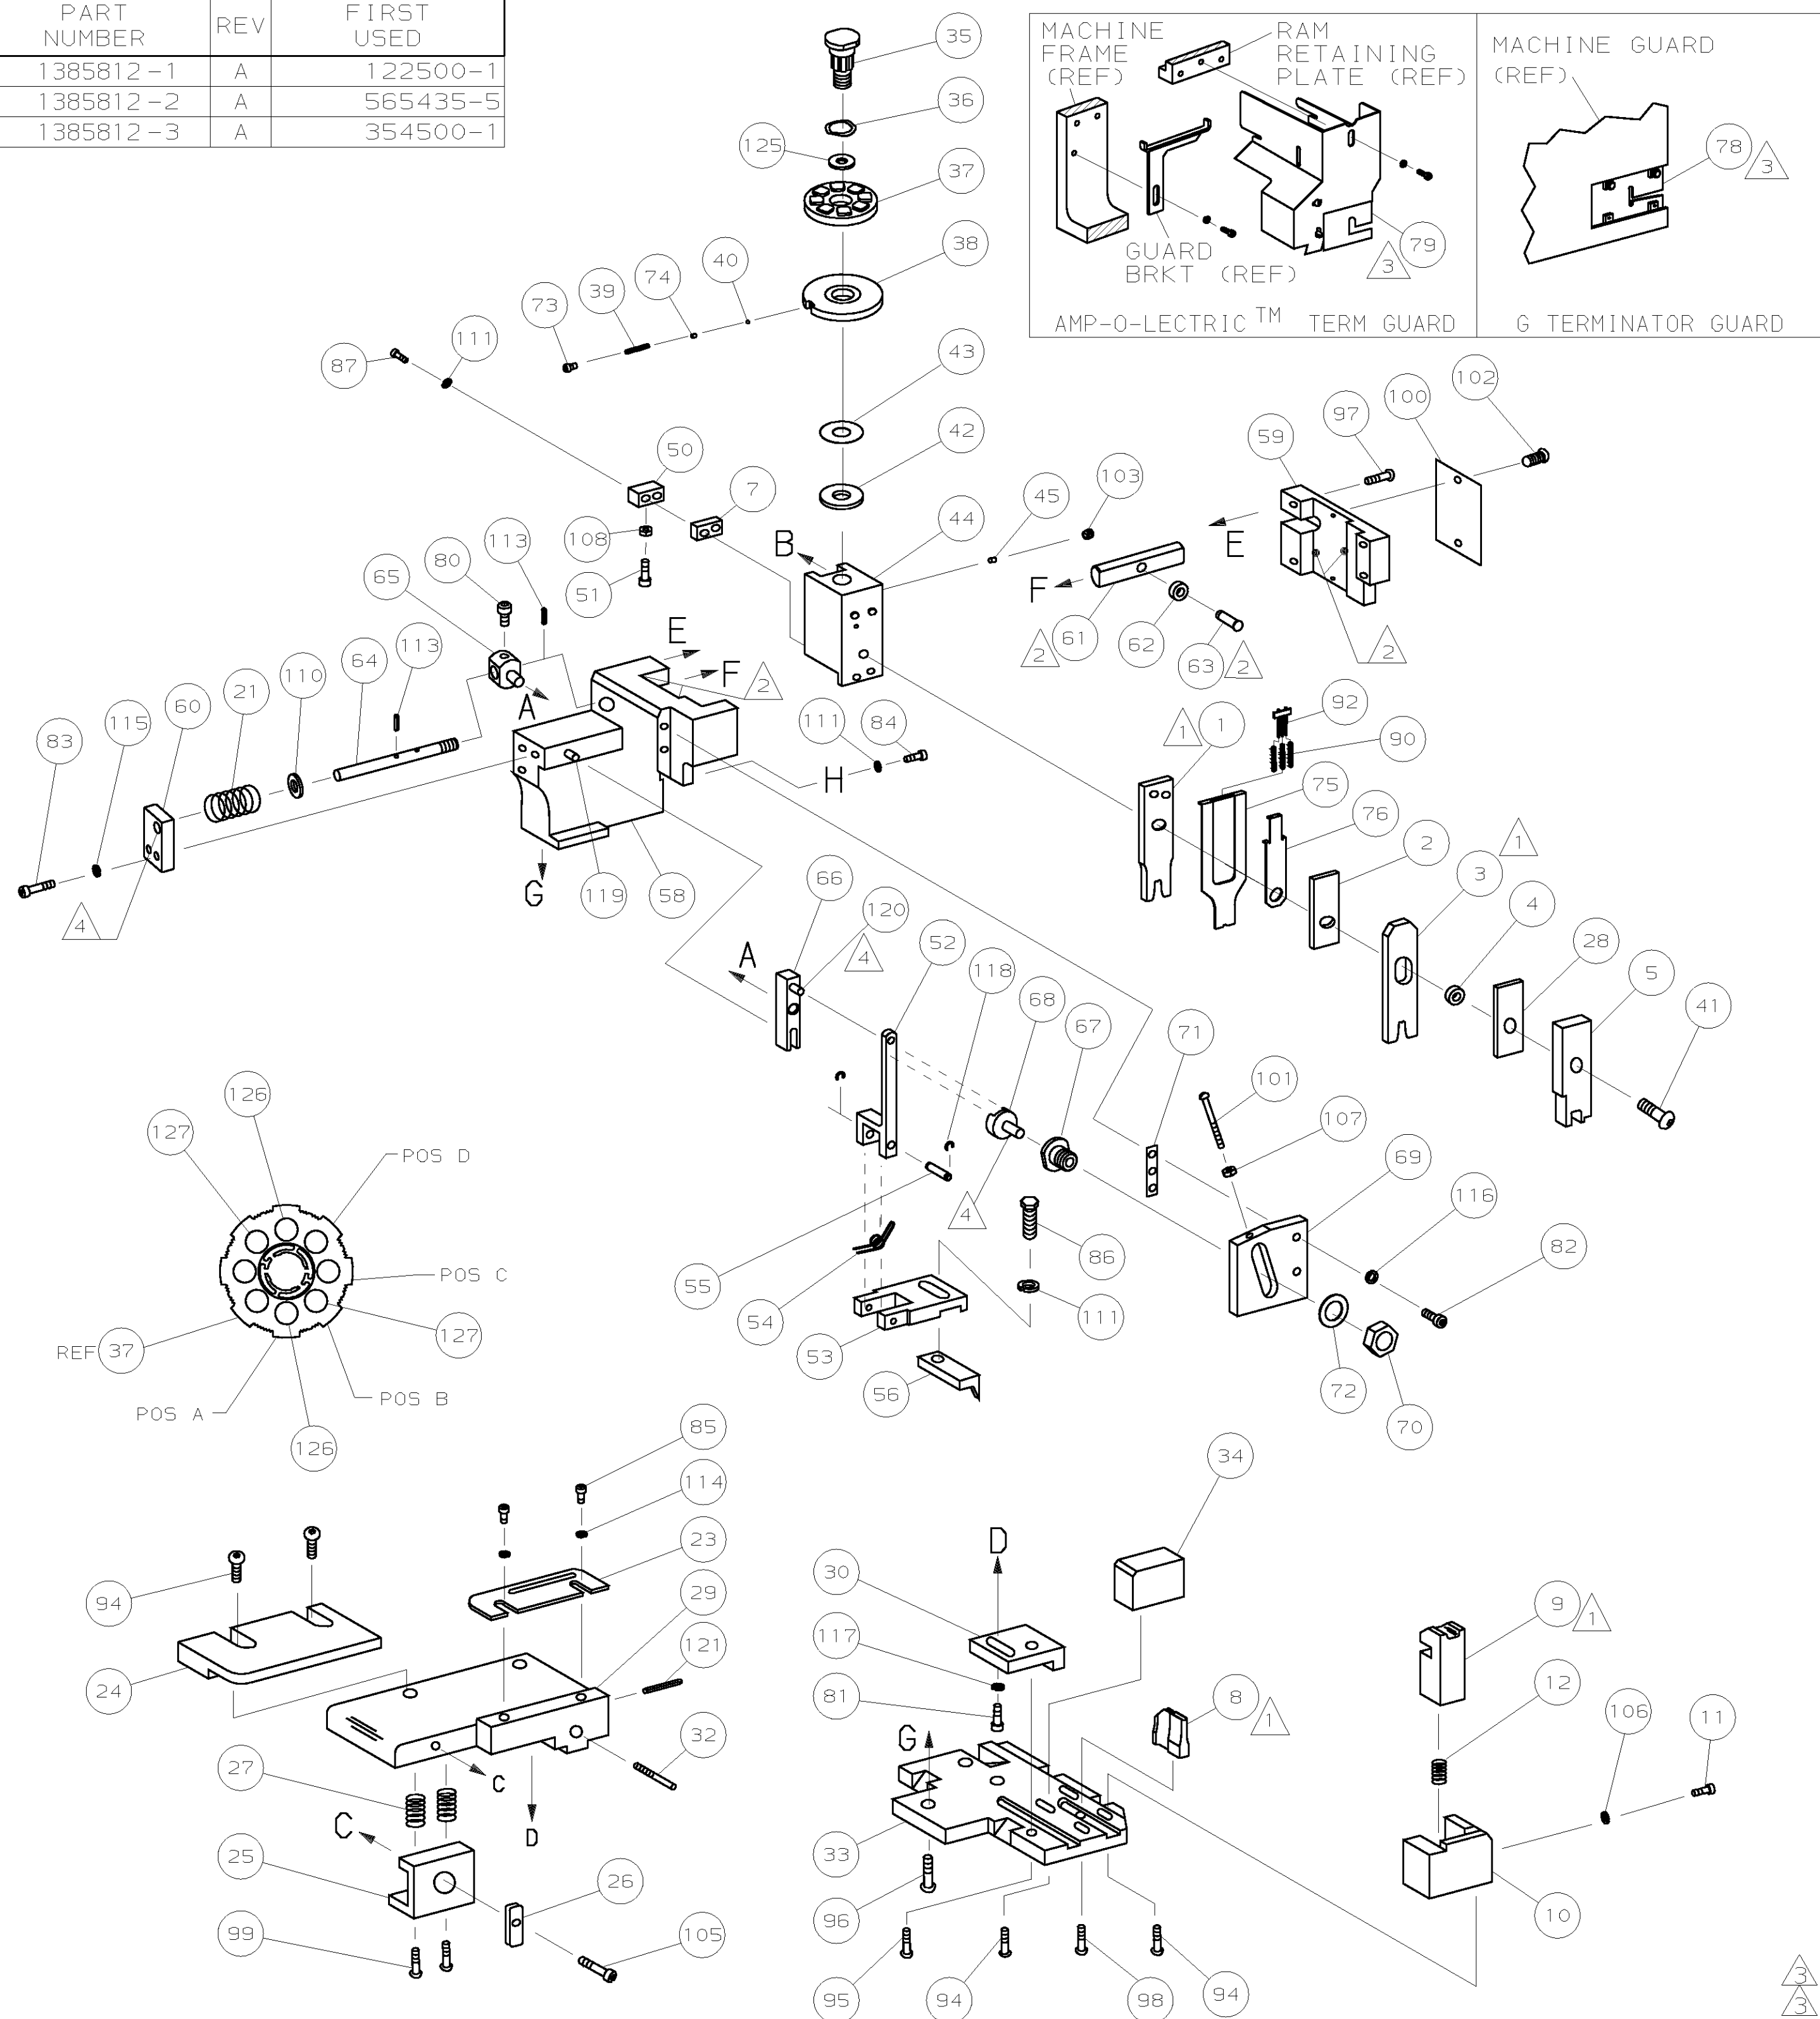

Technical diagrams showing part rotation (rotated 180°) and sub-assembly details for LEADMAKER and BENCH MACHINE.

- 1 RECOMMENDED SPARE PARTS.
2 GREASE LIGHTLY.
3 GUARD MUST BE IN PLACE WHEN OPERATING APPLICATOR IN A BENCH MACHINE.
4 LUBRICATE DAILY USING NO. 20 MACHINE OIL.
5. ITEMS WITH QTY OF REF SPECIFIED (EXCEPT ITEMS 78 AND 79) ARE USED ON ITEM 46.

Terminal specifications table: AMP TERM PN/MFR TERM PN, SUMITOMO TERMINAL AMP CRIMP SPECS, WIRE STRIP LENGTH, TERM APPL SPEC, FEED, APPL INSTRUCTION, SET UP GAGE, LAYOUT.

Main parts list table with columns: QTY, REF, PART NO, DESCRIPTION, ITEM NO.

Secondary parts list table with columns: QTY, REF, PART NO, DESCRIPTION, ITEM NO.

Dimensional and material specifications section including MATL, HT TR, FIN, TOLERANCES, and a note to REMOVE BURRS, BREAK SHARP EDGES R.015 MAX.

THIS DRAWING IS A CONTROLLED DOCUMENT.

RELEASED FOR PUBLICATION SEPTEMBER 17, 2004 BY AMP INCORPORATED. ALL RIGHTS RESERVED.

1385812

B

A

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[TE Connectivity:](#)

[1385812-1](#)