

Fuseholders for GMT Type Indicating Fuses

HLS, HLT, PCT



CATALOG SYMBOL: HLS, HLT, PCT
 FUSEHOLDERS FOR GMT TYPE INDICATING FUSES
 ELECTRICAL RATING—60V DC, 125V AC
 U.L. RECOGNIZED (GUIDE # IZLT2, FILE E14853)
 15AMP (60V DC)

Materials:

Body: Thermosplastic, U.L. 94VO flammability rating

Terminals: Tin-plated bifurcated copper

For use with GMT Type Indicating Fuses

**Multiple Fuseholders with bus bars
 Ordering Information—Catalog No.**




* Angle Bar mounts on common or center terminals only.
 † Minimum of 4 Poles Required.
 **SL Version is not available with bus bars.

Dimensional Data

**Printed Circuit Board Application
 Shown With GMT Fuse Installed**





**Note: Similar Body Dimensions
 of All Holders Are Identical.**

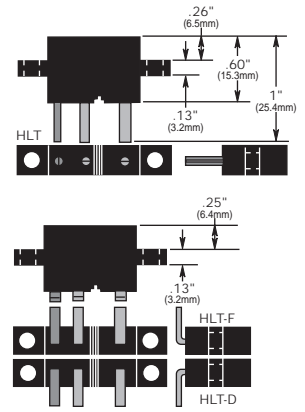

Wire Wrap Terminals
 .025" x .063"
 (.64mm x 1.6mm)

— Fuse Terminal
 — Alarm Terminal

Panel Mounting Data

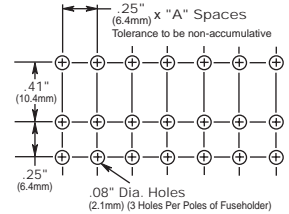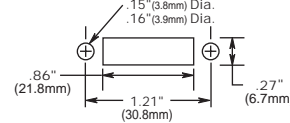

The only controlled copy of this BIF document is the electronic read-only version located on the Bussmann Network Drive. All other copies of this BIF document are by definition uncontrolled. This bulletin is intended to clearly present comprehensive product data and provide technical information that will help the end user with design applications. Bussmann reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Bussmann also reserves the right to change or update, without notice, any technical information contained in this bulletin. Once a product has been selected, it should be tested by the user in all possible applications.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Eaton:

[BK/HLT](#) [BK/HLS](#) [HLS-C](#) [HLT-10](#) [PCT-1K0796](#) [HLT-10-B2-P2-B](#) [BK/HLS-01-SL](#) [BK/HLS-F](#) [BK/HLT-D](#) [BK/HLT-F](#)
[HLS-01-ML](#) [HLS-01-SL](#) [HLS-02](#) [HLS-02-SL](#) [HLS-03](#) [HLS-03-ML](#) [HLS-03-SL](#) [HLS-04](#) [HLS-04-ML](#) [HLS-04-SL](#)
[HLS-05](#) [HLS-05-ML](#) [HLS-05-SL](#) [HLS-06](#) [HLS-06-SL](#) [HLS-07](#) [HLS-07-SL](#) [HLS-08](#) [HLS-08-SL](#) [HLS-10](#) [HLS-10-ML](#)
[HLS-10-SL](#) [HLS-11-SL](#) [HLS-13](#) [HLS-13-SL](#) [HLS-16](#) [HLS-F](#) [HLT-01-LL](#) [HLT-01-ML](#) [HLT-01-SL](#) [HLT-02](#) [HLT-04](#)
[HLT-04-B3-P4-L](#) [HLT-04-B5-P1-B](#) [HLT-05](#) [HLT-05-B2-P1-B](#) [HLT-05-B2-P3-R](#) [HLT-05-B3-P4-L](#) [HLT-05-B5-P3-R](#)
[HLT-06](#) [HLT-06-B5-P2-B](#) [HLT-10-B3-P1-B](#) [HLT-10-B3-P2-B](#) [HLT-10-B4-P1-B](#) [HLT-10-B5-P1-B](#) [HLT-10-B5-P3-B](#)
[HLT-10-ML](#) [HLT-13](#) [HLT-25-B5-P1-B](#) [HLT-25-B5-P2-B](#) [HLT-D](#) [HLT-F](#) [BK/HLS-02-ML](#) [BK/HLS-07-SL](#) [BK-HLS-03-](#)
[ML](#) [BK/HLS-C](#) [HLT-04-ML](#) [HLT-05-B5-P2-B](#) [HLS](#) [HLT](#)