# Installation Instructions for the **700 Series Platinum RTD Temperature Sensors**

ISSUE 1 50010925

#### **CAUTION**

#### **IMPROPER HANDLING**

• Do not remove the sensor from its original protective packaging until it is ready to be installed.

Failure to comply with these instructions may result in product damage.

#### **GENERAL INFORMATION**

The 700 Series is RoHS (Restriction of Hazardous Substances) compliant (EU Directive 2002/95/EC).


#### **LEADS**


Catalog Listing	Lead Material/Soldering Connection
700-* 701-*	Pt-clad Ni wire
702-* 703-*	End termination galvanic Sn-plated with Ni barrier layer

#### SOLDERING/ASSEMBLY

For catalog listings 702-\* and 703\*- face-up-mounting: Reflow soldering or wave soldering, e.g. double wave soldering, <8 s at 235 °C.

MOUNTING DIMENSIONS (for reference only mm/[in])

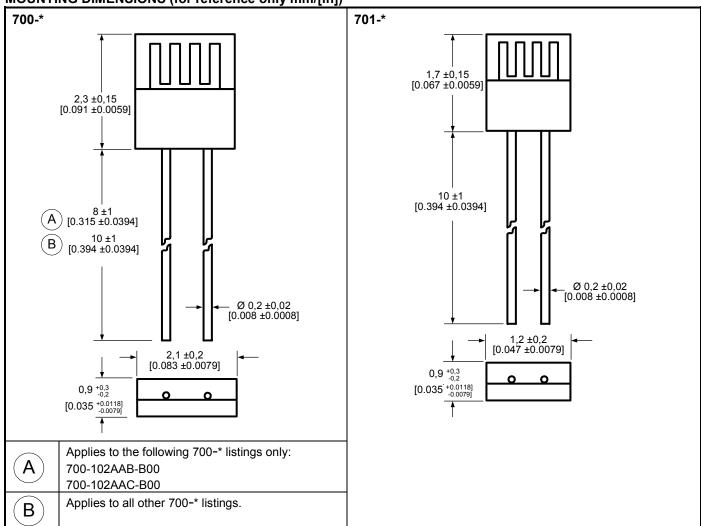

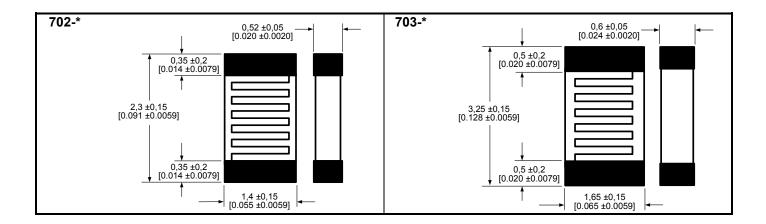



#### **PERSONAL INJURY**

DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

#### WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. The foregoing is buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.



#### SALES AND SERVICE

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office or:

E-mail: info.sc@honeywell.com

Internet: www.honeywell.com/sensing

#### Phone and Fax:

Asia Pacific +65 6355-2828

+65 6445-3033 Fax

Europe +44 (0) 1698 481481

+44 (0) 1698 481676 Fax

Latin America +1-305-805-8188

+1-305-883-8257 Fax

USA/Canada +1-800-537-6945

+1-815-235-6847 +1-815-235-6545 Fax

#### **Automation and Control Solutions**

Sensing and Control Honeywell 11 West Spring Street Freeport, Illinois 61032 www.honeywell.com/sensing

Honeywell

## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

### Honeywell:

700-102BAB-B00 701-102AAB-B00 701-102BAB-B00 702-101BBB-A00 702-102BBB-A00