

Seal - WR-DA-M32/PG29 - 1644847

Please be informed that the data shown in this PDF Document is generated from our Online Catalog. Please find the complete data in the user's documentation. Our General Terms of Use for Downloads are valid (http://phoenixcontact.com/download)



Seal, outside, to increase the degree of protection, size M32 or Pg21

The figure shows the version WR-DI-PG 21 and WR-DA-PG21



Key Commercial Data

Packing unit	5 pc
GTIN	4 017918 911140
GTIN	4017918911140

Technical data

General

Seal material	PUR
Environmental Product Compliance	
China RoHS	Environmentally friendly use period: unlimited = EFUP-e
	No hazardous substances above threshold values

Drawings



Seal - WR-DA-M32/PG29 - 1644847

Dimensional drawing

Assembly instructions for Pg29 corrugated pipe

a = Corrugated screw connection


b = Corrugated pipe

c = Opener

Installation note:

Cut the corrugated pipe in the groove to retain a round shape for insertion. The lighter seal (not depicted in the illustration) is positioned in the corrugated pipe screw connection below the safety latch. The darker outer seal (not depicted in the illustration) is placed over the corrugated pipe screw connection from outside. The corrugated pipe is then pushed as far as possible into the corrugated pipe screw connection then pushed as far as possible into the corrugated pipe screw connection and clicks into place. The screw connection is opened by placing the yellow corrugated pipe opener with force between the safety latch and theyellow corrugated pipe opener with force between the safety latch and the corrugated tube and the corrugated pipe is then pulled out.

Dimensional drawing

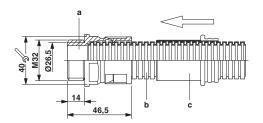

Assembly instructions for M32 corrugated pipe

a = Corrugated screw connection

B = Corrugated pipe

c = Opener

Installation note:

Cut the corrugated pipe in the groove to retain a round shape for insertion. The lighter seal (not depicted in the illustration) is positioned in the corrugated pipe screw connection below the safety latch. The darker outer seal (not depicted in the illustration) is placed over the corrugated pipe screw connection from outside. The corrugated pipe is and clicks into place. The screw connection is opened by placing the corrugated tube and the corrugated pipe is then pulled out.

Phoenix Contact 2018 @ - all rights reserved http://www.phoenixcontact.com

PHOENIX CONTACT GmbH & Co. KG Flachsmarktstr. 8 32825 Blomberg Germany

Tel. +49 5235 300 Fax +49 5235 3 41200

http://www.phoenixcontact.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Phoenix Contact: