


8			7					
THIS DRAWING IS UNPUBLISHED.			RELEASED FOR PUBLICATION			20		
(C) COPYRIGHT 20			BY TYCO ELECTRONICS CORPORATION. ALL RIGHTS RESERVED.					
PART NUMBER		REV	FIRST USED	POWER UNIT	FEED TYPE	DESCRIPTION		
1855252-1		C	122500-1	LEADMAKER	AIR FEED	CUTS CARRIER		
1855252-2		C	565435-5	BENCH MODEL K	AIR FEED	CUTS CARRIER		
1855252-3		C	354500-1	BENCH MODEL G	AIR FEED	CUTS CARRIER		
1855252-6		C	122500-1	LEADMAKER	AIR FEED	CONTINUOUS CARRIER		
7-1855252-7		B	-	-	-	SPARE PARTS		

- △ RECOMMENDED SPARE PARTS
- △ GREASE LIGHTLY
- △ GUARD MUST BE IN PLACE WHEN OPERATING APPLICATOR IN A BENCH MACHINE
- △ WHEN RUNNING TERMINAL PN 1949327-1 USE ITEM 119
WHEN RUNNING TERMINAL PN 1949327-2 USE ITEM 34
WHEN RUNNING TERMINAL PN 1949327-3 USE ITEM 120
- △ TERMINAL PN 1949327-1 REQUIRES 1.240 FEED.
TERMINAL PN 1949327-2 REQUIRES .800 FEED.
TERMINAL PN 1949327-3 REQUIRES 1.000 FEED.
ADJUSTMENT IN FEED IS NECESSARY WHEN CHANGING TERMINALS.

*** WARNING**
ON INSTALLATION, SET WIRE DISC TO LARGEST WIRE SIZE SETTING. USE OF SETTINGS BELOW MIN. REQUIRED CRIMP HEIGHT SETTING WILL CAUSE DAMAGE TO CRIMP TOOLING.

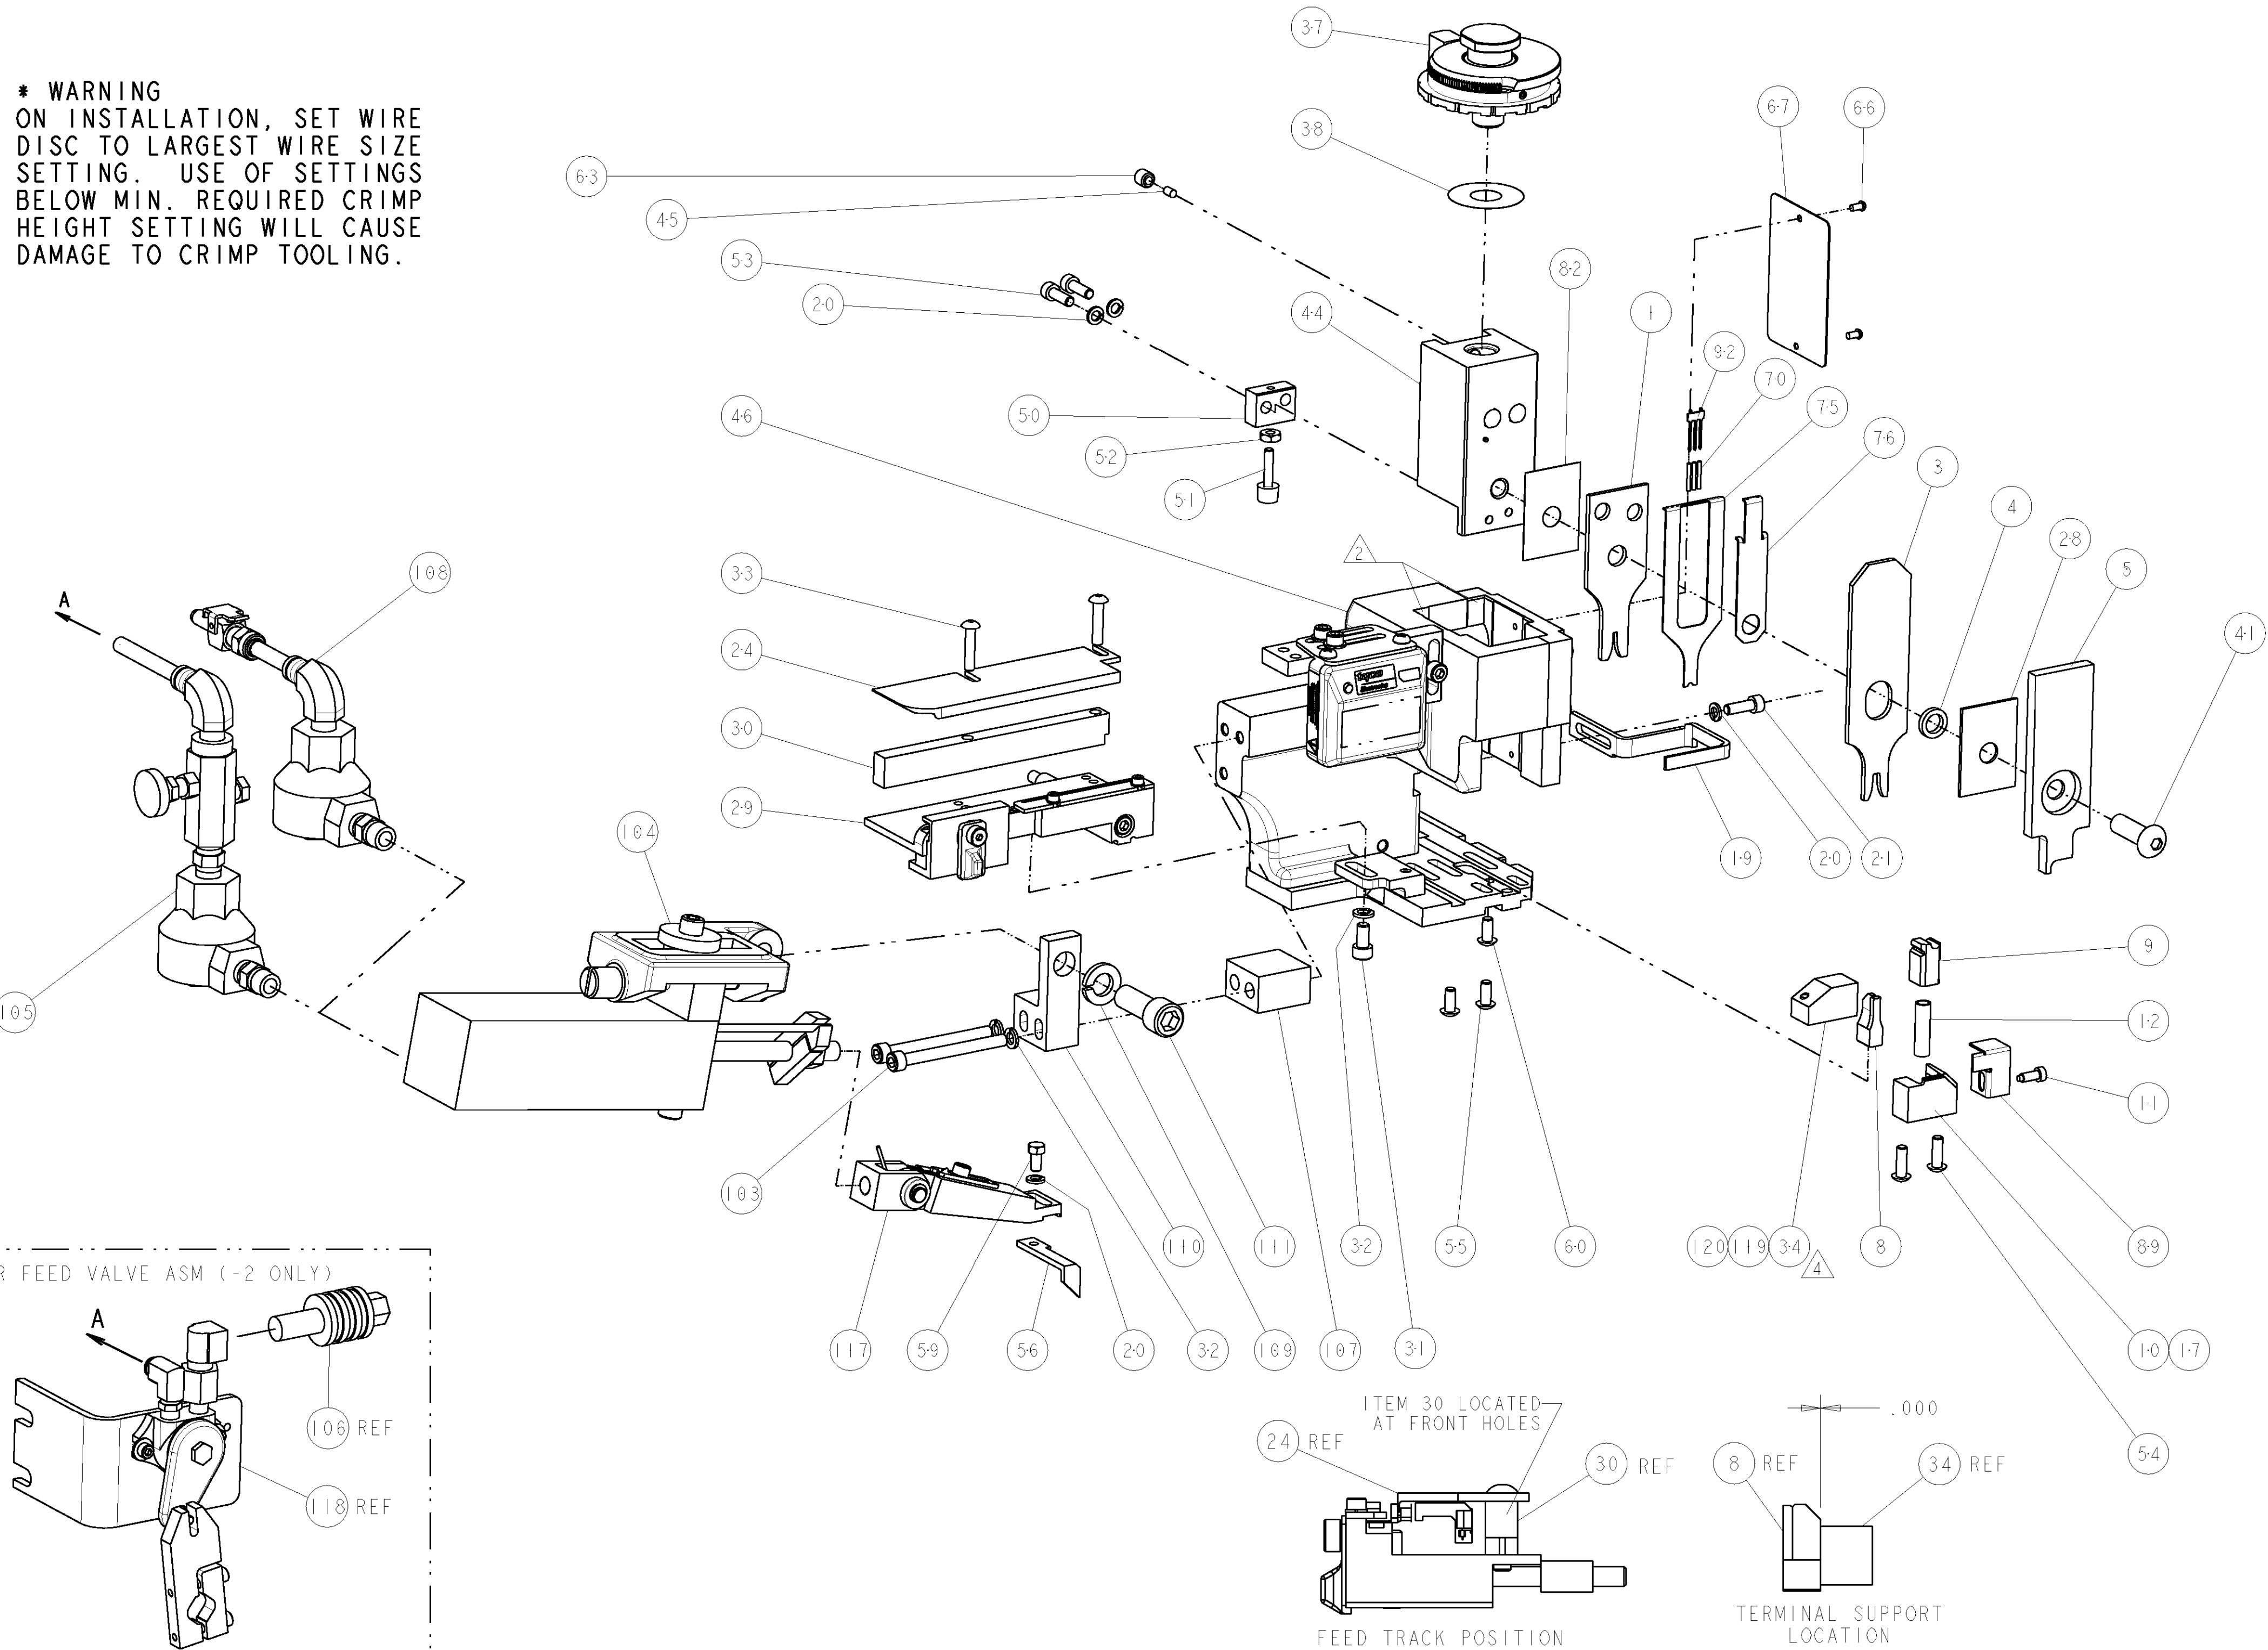

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[TE Connectivity:](#)

[1855252-2](#)