

ISL9000EV2

User Manual

AN1210
Rev 0.00
Oct 5, 2005

Description

The ISL9000EV2 board is designed for customers' use in exploring the operation of the ISL9000 Low Dropout Regulator IC (LDO). In this capacity, it provides an easy to use platform for testing most of the datasheet specifications and functionalities. It is designed to show the small space required for all the components, while providing room to access the signals.

The layout is intended to minimize thermal effects, to better evaluate current limits and voltage regulation accuracy. In an actual implementation, the area for heat sinking may be smaller, so thermal effects may make the operation slightly different.

The ISL9000EV2 board constitutes a complete dual voltage regulator solution. The PCB board is 2 inches by 3 inches, however, the actual charger components easily fit within a 0.9 x 1.6 cm area (components on one side), demonstrating the space saving advantage of the ISL9000 in limited space applications.

A voltage source can be connected to the two pin connector (J2, default) or to the banana jacks (not populated). For monitoring the output, test instruments can be connected to the five pin connector (J13, default) or to the banana jacks or scope probe jacks (not populated). Additional test points provide a convenient way to monitor the POR outputs and the signal on the bypass capacitor. This can be especially important when testing the LDO in a temperature chamber. Several ground pins provide reference points for test leads. Additional "kelvin" test points are provided for VIN, VO1, VO2, and GND to monitor the actual performance of the IC. This removes the voltage drops across the PCB traces that occurs at higher currents.

The board has a jumper block for enabling each of the two LDO outputs. A shunt can be placed on J3 or J4 between "ENx" and "LOW" pins to provide a 100k Ω pull down on each EN pin of the device. If J3 or J4 "HI" pins are floating, the respective LDO output will be off, while connecting "HI" to "ENx" will enable the output.

When it is desired that an LDO always be enabled, connect a shunt between "ENx" and "HI" on J3 or J4. In this case the shunt between "ENx" and "LOW" is not needed.

If an external enable signal that drives both high and low is used to enable the LDO outputs, both shunts can be removed from ENx.

A jumper (J10) connects the CPOR input to a 10nF capacitor for POR timing. The jumper can be removed and replaced by a different capacitor to ground for different power on timing requirements.

The board also provides a connector (JP1, not populated) which can connect to a logic analyser/pattern generator for controlling and monitoring the output response. The connector provides both enable inputs and POR outputs.

Finally, a daughter card connector and a jumper (J14 and J9, not populated) allow specially assembled boards containing untrimmed LDOs to be programmed to custom voltage levels after board assembly. This is done at the factory, so no additional information will be provided in this document.

Ordering Information

PART NUMBER	DESCRIPTION
ISL9000NJEV2	ISL9000NJ Evaluation board [3.3V/2.8V]
ISL9000NFEV2	ISL9000NF Evaluation board [3.3V/2.5V]
ISL9000KKEV2	ISL9000KK Evaluation board [2.85V/2.85V]
ISL9000KJEV2	ISL9000KJ Evaluation board [2.85V/2.8V]
ISL9000KFEV2	ISL9000KF Evaluation board [2.85V/2.5V]
ISL9000JBEV2	ISL9000JB Evaluation board [2.8V/1.5V]
ISL9000FJEV2	ISL9000FJ Evaluation board [2.5V/2.8V]
ISL9000KCEV2	ISL9000KC Evaluation board [2.85V/1.8V]
ISL9000BJEV2	ISL9000BJ Evaluation board [1.5V/2.8V]
ISL9000PLEV2	ISL9000PL Evaluation board [1.85V/2.9V]
ISL9000GCEV2	ISL9000GC Evaluation board [2.7V/1.8V]
ISL9000JCEV2	ISL9000JC Evaluation board [2.8V/1.8V]
ISL9000JREV2	ISL9000JR Evaluation board [2.8V/2.6V]
ISL9000JMEV2	ISL9000JM Evaluation board [2.8V/3.0V]
ISL9000LLEV2	ISL9000LL Evaluation board [2.9V/2.9V]
ISL9000MMEV2	ISL9000MM Evaluation board [3.0V/3.0V]

Features

- Complete dual low dropout regulator (LDO)
- Easy to use board for evaluation of the LDO in a target application.
- Exposed soldering pads/pins for monitoring VIN, VO1, VO2, POR1, POR2, and CBYP.
- Voltage monitoring using test pins, banana jacks and scope jacks.
- Enable jumpers for each supply, plus jumpered enable pull down resistors.
- The board has options for:
 - Changing the CPOR capacitor
 - Using a logic analyser/pattern generator to monitor enable/POR response.

What is Inside

The Evaluation Kit contains:

- ISL9000__EV2 Evaluation board
- The ISL9000 Data Sheet
- The ISL9000EV2 Users Guide (this document)

What is Needed

The following instruments will be needed to perform testing (not provided):

- DC 6.5V/1A Power supply
- Two Digital Voltmeters (4.5 digit or better).
- Oscilloscope
- 2 channel, 0 to 400mA electronic load
- Cables and wires

Quick Setup Guide

Step 1: Place shunts on J3 between “EN1” and HI”, on J4 between “EN1” and HI”, and on J10 (CPOR). This is the factory default connection.

Step 2: Set the power supply to 3.8V with a 1.0A current limit (then turn off).

Step 3: Connect the power supply between VIN and GND using connector J2.

Step 4: Connect two voltmeter positive leads to the VO1 “kelvin” connector (J13-1, “V1K”) and the VO2 “kelvin” connector (J13-5, “V2K”). The meters can also be connected to the VO power pins J2-2 and J2-4 or the banana jacks, but at higher currents, these won’t reflect the output voltage as accurately as the kelvin connections.

Connect the negative leads to GND J13-3. (To get the best representation of the IC output voltage under all output loading conditions, add a ground terminal to the GNDk pad and connect the meter ground leads there).

Step 5: Connect a third voltmeter to the input. This can be connected to the J2 terminal, but at higher inputs, the V1k terminal will give the most accurate reading of the voltage at the ISL9000 VIN pin.

Step 6: (Optional) Connect an electronic load to one or both of the outputs. For the VO1 output, use the VO1 power connector J2-2 (“V1P”). For the VO2 output, use the VO2 power connector J2-4 (“V2P”).

Step 7: Monitor VO1 and VO2. The voltages should reflect the voltage of the selected part, i.e. the ISL9000NJ EV2 board should have 3.3V and 2.8V outputs. For a complete list of output voltages, see Table 1.

Step 8: Change the loading on each output and monitor the output voltages

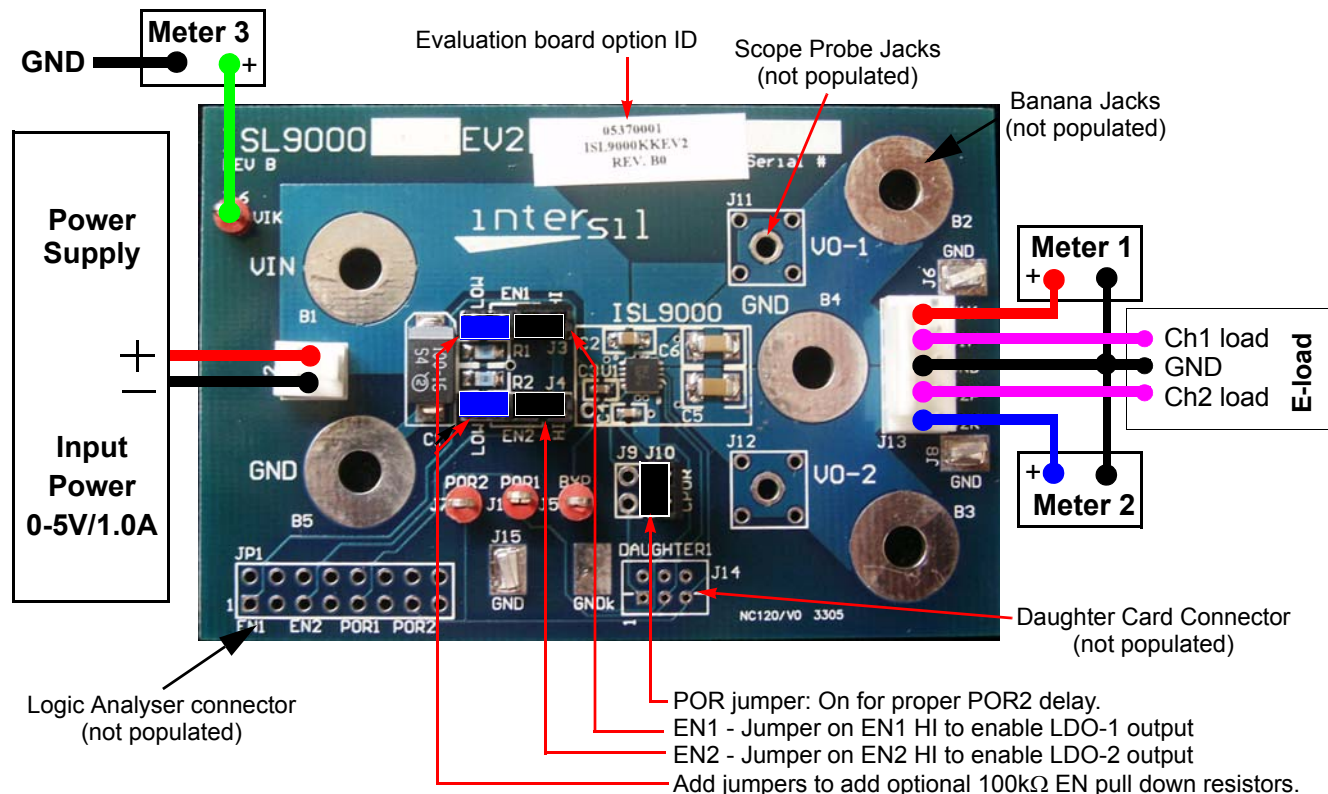


FIGURE 1. BOARD CONNECTION DIAGRAM

Step 9: Change the input voltage and monitor the effect on the output voltages

For additional testing, such as load transient and line transient response, adding the optional scope jacks will improve the measurement, by reducing external noise. The Scope Jack part number is included in the bill of materials as an optional component.

If desired, banana jacks can be added to the board to facilitate connection of the board to test equipment. Part numbers for these optional components are included in the bill of materials.

Improved PSRR and noise specs can be obtained by replacing the 0.01 μ F (C3) capacitor with a 0.1 μ F capacitor.

TABLE 1. OUTPUT VOLTAGES

	OUTPUT VOLTAGE 1		OUTPUT VOLTAGE 2	
PART NUMBER	MIN	MAX	MIN	MAX
ISL9000NJEV2	3.267	3.333	2.772	2.828
ISL9000NFEV2	3.267	3.333	2.475	2.525
ISL9000KKEV2	2.821	2.879	2.821	2.879
ISL9000KJEV2	2.821	2.879	2.772	2.828
ISL9000KFEV2	2.821	2.879	2.475	2.525
ISL9000JBEV2	2.772	2.828	1.485	1.515
ISL9000FJEV2	2.475	2.525	2.772	2.828
ISL9000KCEV2	2.821	2.879	1.782	1.818
ISL9000BJEV2	1.485	1.515	2.772	2.828
ISL9000PLEV2	1.831	1.869	2.871	2.929
ISL9000GCEV2	2.673	2.727	1.782	1.818
ISL9000JCEV2	2.772	2.828	1.782	1.818
ISL9000JREV2	2.772	2.828	2.574	2.626
ISL9000JMEV2	2.772	2.828	2.970	3.030
ISL9000LLEV2	2.871	2.929	2.871	2.929
ISL9000MMEV2	2.970	3.030	2.970	3.030

Schematic

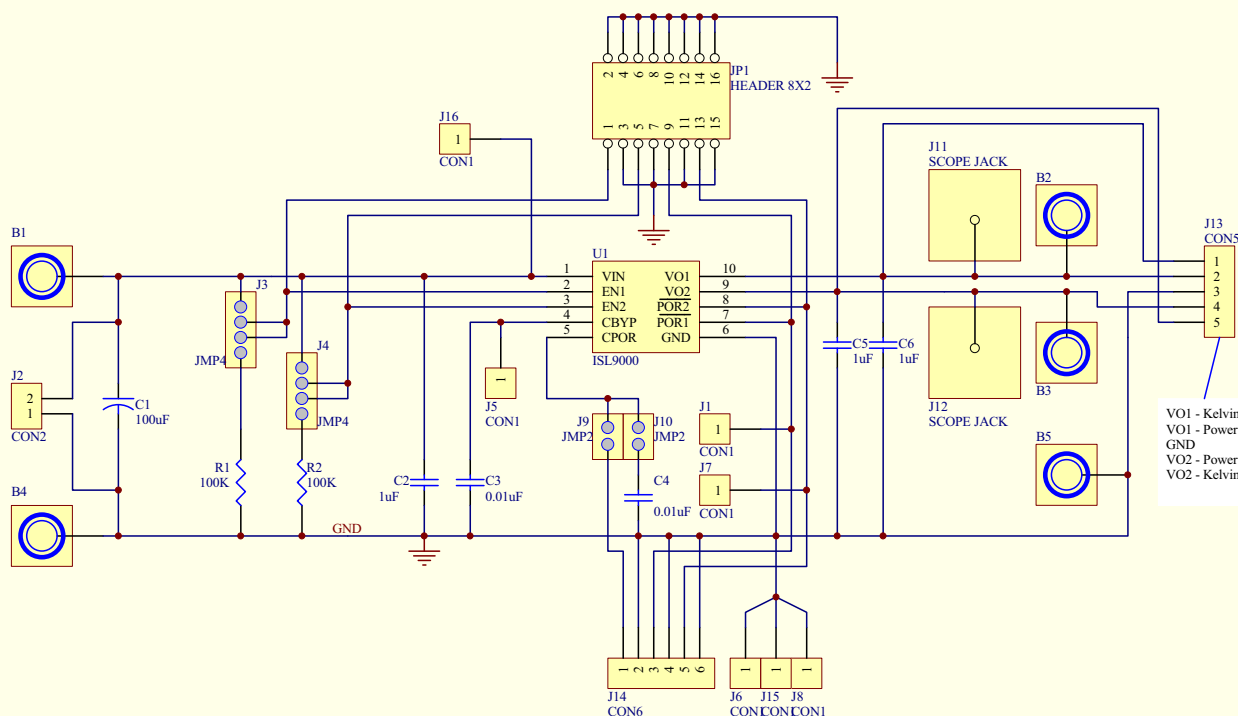


FIGURE 2. ISL9000EV2 REV B SCHEMATIC

Bill of Materials

ITEM	QTY	PART TYPE	DESIGNATOR	MFR	DIGIKEY	COMMENTS
COMPONENTS COMMON TO ALL BOARDS						
1	1	PCB	PCB	ISL9000EV2 REVB		
2	2	0.01 μ F	C3, C4	AVX: 06035C103KAT2A	478-1227-2-ND	0603 capacitor
3	1	1 μ F	C2	Panasonic: ECJ-2FB1C105K	PCC2249CT-ND	0805 capacitor
4	2	1 μ F	C5, C6	Panasonic: ECJ-3YB1E105K	PCC1893CT-ND	1206 or 1210 capacitor
5	2	100K	R1, R2	Panasonic: ERJ-3EKF-100KV	P100KHCT-ND	Any 0805 resistor
6	1	100 μ F	C1	KEMET: T491D107M016AS	Digikey: 399-1605-1-ND	
7	4	CON1	J1, J5, J7, J16	Keystone: 5010	Digikey: 5010K-ND	
8	3	CON1	J6, J8, J15	Keystone: 5016	Digikey: 5016KCT-ND	
9	1	CON2	J2	Molex: 22-23-2021	Digikey: WM4200-ND	
10	1	CON5	J13	Molex: 22-23-2051	Digikey: WM4203-ND	
11	1	JMP2	J10	Molex: 22-28-4020	Digikey: WM6402-ND	
12	2	JMP4	J3, J4	Molex: 22-28-4040	Digikey: WM6404-ND	
13	3	Shunt		AMP: 382811-8	Digikey: A26228-ND	Installed at test - ship 10 to a strip, but only 3 needed/board
COMPONENTS SPECIFIC TO EACH BOARD VARIATION						
14	1	ISL9000	U1	Intersil: ISL9000IR_ _Z	*	ISL9000_ _EV2 REVB only
15	1	Label	L1	_ _Label		ISL9000_ _EV2 REVB only
COMPONENTS OPTIONAL ON EACH BOARD						
16	2	SCOPE JACK	J11, J12	Tektronix #131-5031-00	*	Not populated
17	3	BANANA	B1, B2, B3	Keystone: 7006	7006K-ND	Not populated
18	2	BANANA	B4, B5	Keystone: 7007	7007K-ND	Not populated
19	1	JMP2	J9	Molex: 22-28-4020	Digikey: WM6402-ND	Not populated
20	1	CON6	J14	HRS: DF11-6DS-2DSA	Digikey: H2274	Not populated
21	1	HEADER 8X2	JP1	Molex: 10-88-1161	Digikey: WM6916-ND	Not populated

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
 2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
 3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
 4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
 5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
 6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
 7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
 8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
 9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
 10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
 11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
 12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.
1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.
Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics Canada Limited
9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited
Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-651-700, Fax: +44-1628-651-804

Renesas Electronics Europe GmbH
Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.
Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.
Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited
Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852-2886-9022

Renesas Electronics Taiwan Co., Ltd.
13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

Renesas Electronics Singapore Pte. Ltd.
80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.
Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.
No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.
17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5338

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Renesas Electronics:

[ISL9000FJEV2](#) [ISL9000JBEV2](#) [ISL9000JREV2](#) [ISL9000KCEV2](#) [ISL9000KFEV2](#) [ISL9000LLEV2](#) [ISL9000MMEV2](#)
[ISL9000NFEV2](#) [ISL9000PLEV2](#)