



DF57 Series Mating / Unmating Operation Instruction


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direftion.

②Slightly press the socket down at cable side to tilted angle.

@Press down at the lever side with stabilizing t he cable side to insert. Mating completes.

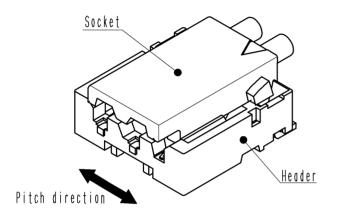


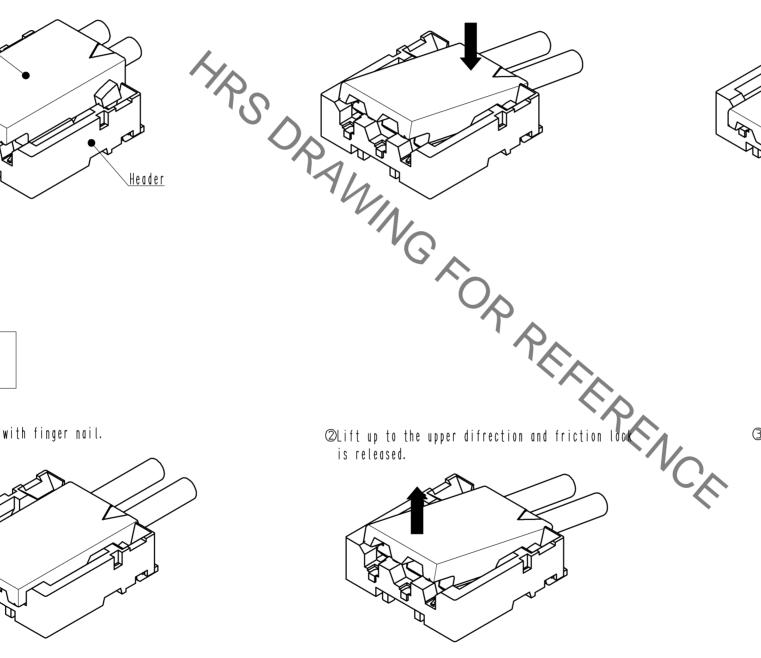


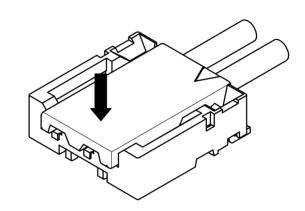


Unmating

Thook the lever with finger nail.

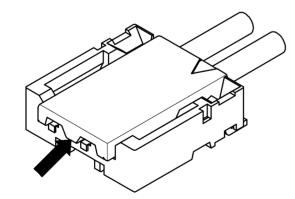

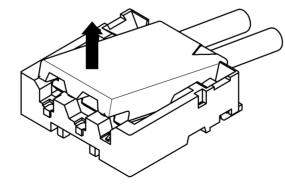

③Lift up to the upper direction and positive lock is released. Removal completes.

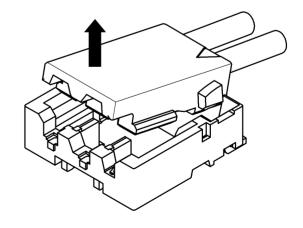

ĸ	DRAWING NO.	EDC3-343901-00	
	PART NO.	DF57H-4S-1.2C	
	CODE NO.	CL666-0101-9-00	$\triangle \frac{2}{2}$