

General Description

The MAX1925/MAX1926 single-cell lithium-ion (Li+) switch-mode battery chargers use an external PMOS pass element step-down configuration. Charge current is programmable, and an external capacitor sets the maximum charge time.

Additional features include automatic input power detection (ACON output), logic-controlled enable, and temperature monitoring with an external thermistor. The MAX1925 disables charging for inputs greater than 6.1V, while the MAX1926 charges for inputs between 4.25V and 12V.

The MAX1925/MAX1926 feature two precondition levels to restore near-dead cells. The devices source 4mA to a cell that is below 2V while sourcing C/10 to a cell between 2V and 3V. Full charge current is then applied above 3V. A CHG output drives an LED to indicate charging (LED on) and fault conditions (LED blinking).

The MAX1925/MAX1926 are available in a 12-pin 4mm \times 4mm thin QFN package and are specified over the extended temperature range (-40°C to +85°C). An evaluation kit is available to speed design.

Applications

Digital Cameras Self-Charging Battery Packs PDAs Cradle Chargers _Features


- Small (4mm × 4mm) Package
- 4.25V to 12V Input Range (MAX1926)
- Overvoltage Lockout at 6.1V (MAX1925)
- ♦ ±0.75% Battery Regulation Voltage
- Set Charge Current with One Resistor
- Automatic Input Power Sense
- LED (or Logic-Out) Charge Status and Fault Indicator
- Programmable Safety Timer
- Autorestart at Cell = 4V
- Thermistor Monitor Input


		•	
PART	TEMP RANGE	PIN- PACKAGE	INPUT CHARGING RANGE
MAX1925ETC	-40°C to +85°C	12 Thin QFN 4mm x 4mm	4.5V to 6.1V
MAX1926ETC	-40°C to +85°C	12 Thin QFN 4mm x 4mm	4.25V to 12V

Ordering Information

Typical Operating Circuit

Maxim Integrated Products 1

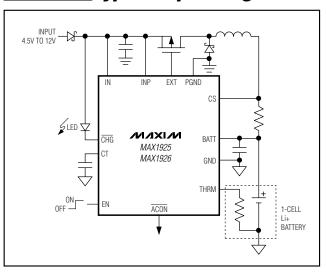

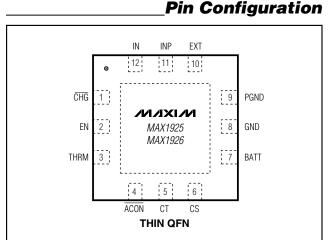

For pricing, delivery, and ordering information, please contact Maxim/Dallas Direct! at 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.

ABSOLUTE MAXIMUM RATINGS

IN, INP, ACON to GND	0.3V to +14V
CHG, EXT to PGND	0.3V to (V _{INP} + 0.3V)
CS, BATT, EN, THRM to GND	-0.3V to +6V
CT to GND	0.3V to +4V
EN, THRM, CT to IN	14V to +0.3V
INP to IN	0.3V to +0.3V
PGND to GND	0.3V to +0.3V
CS to BATT	0.3V to +0.3V
EXT Continuous RMS Current	±100mA

1349mW
721mW
40°C to +85°C
+150°C
65°C to +150°C
+300°C

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

ELECTRICAL CHARACTERISTICS

 $(V_{PGND} = V_{GND} = 0, V_{INP} = V_{IN} = V_{\overline{CHG}} = 5V, V_{BATT} = V_{CS} = V_{EN} = 4V, THRM = 10k\Omega$ to GND, $C_{CT} = 100$ nF, $T_A = 0^{\circ}C$ to +85°C, unless otherwise noted. Typical values are at $T_A = +25^{\circ}C$.)

PARAMETER		CONDITIONS	MIN	ТҮР	MAX	UNITS
Supply Voltage Range	VINP, VIN (MAX192	25 does not charge above 6.1V)	4.5		12.0	V
		MAX1925	4.30	4.50	4.78	
	V _{INP} , V _{IN} rising	MAX1926	4.00	4.25	4.50	
ACON Trip Point		MAX1925	4.17	4.30	4.43	V
	V _{INP} , V _{IN} falling	MAX1926	3.90	4.15	4.40	
INP, IN Shutdown Threshold	MAX1925	Rising	5.8		6.4	V
	IVIAX 1925	Falling	5.3		5.9	V
EN Input Resistance	MAX1926 internal	ly pulled up to 3V	125	300	550	kΩ
EN Leakage Current	MAX1925		-1		+1	μA
EN Logic Input High Threshold			2			V
EN Logic Input Low Threshold					0.8	V
	DONE state, VBAT	T = 4.1V		25	50	
BATT + CS Input Current (Total Current into BATT and CS)	EN = GND (Note 1)			2	10	μA
	VBATT = VINP = VI	N = 4V, shutdown (Note 1)		2	10	
CS Input Current	Charging			39		μA
	EN = GND			5	8	mA
	$V_{BATT} = V_{INP} = V_{I}$	N = 4V, shutdown		2	10	μA
IN + INP Total Input Current	V _{BATT} = 4.1V; charging				10	mA
	V _{BATT} = 4.3V; done			5	8	
VOLTAGE LOOP						
Voltage Loop Set Point			4.1685	4.2000	4.2315	V
Voltage Loop Hysteresis			15		mV	
BATT Prequal1 Voltage Threshold			1.9	2	2.1	V
BATT Prequal2 Voltage Threshold			2.85	3	3.15	V

ELECTRICAL CHARACTERISTICS (continued)

 $(V_{PGND} = V_{GND} = 0, V_{INP} = V_{IN} = V_{\overline{CHG}} = 5V, V_{BATT} = V_{CS} = V_{EN} = 4V$, THRM = 10k Ω to GND, C_{CT} = 100nF, **T_A = 0°C to +85°C**, unless otherwise noted. Typical values are at T_A = +25°C.)

PARAMETER	CONDITIONS	MIN	ТҮР	MAX	UNITS
Restart Threshold	Charging restarts when BATT falls to this point	3.92	4.00	4.08	V
BATT Voltage Fault Threshold	If BATT exceeds this threshold, EXT is high (external MOSFET is off) and $\overline{\text{CHG}}$ blinks	4.275	4.350	4.425	V
CURRENT LOOP					
CS - BATT Sense Threshold	V _{CS} - V _{BATT} , average value	132	142	152	mV
CO-DATT Sense Threshold	Rise/fall hysteresis		30		111V
Prequal1 Charge Current	$V_{BATT} < 2V$	3	4	6	mA
Prequal2 CS - BATT Sense	Average value, 2V < V _{BATT} < 3V (charge current is C/10)		14		mV
Threshold	Rise/fall hysteresis, 2V < V _{BATT} < 3V		12		IIIV
Current Threshold for Full-Battery Indication	ILOAD falling, as percentage of fast charge current	6	12	20	%
DRIVER FUNCTIONS					•
EXT Sink/Source Current			1		A
EXT On-Resistance	EXT high or low		5	12	Ω
Nominal Switching Frequency	V _{BATT} = 3.6V, L =10µH		235		kHz
TIMER FUNCTIONS					•
Full-Time Timeout - t _{FULL}	$C_{CT} = 100nF$		3.02		hours
Prequal1 Timeout	C _{CT} = 100nF	^t FULL/1088 (10s)		S	
Prequal2 Timeout	C _{CT} = 100nF	^t FULL/17 (10.67 min)		1)	min
Timer Accuracy	C _{CT} = 100nF for 3 hours	-15		+15	%
CHG Output Low Current	V _{CHG} = 1V	7	10	14	mA
CHG Output High Leakage Current	V _{CHG} = 12V			1	μA
CHG Blink Rate - Fault	Fault state (50% duty cycle), C _{CT} = 100nF		0.5		Hz
ACON High Leakage	VACON = 12V		0.01	1.00	μA
ACON Sink Current	$V_{\overline{\text{ACON}}} = 0.4V$	2			mA
THERMISTOR MONITOR (Note 2	2)				•
THRM Sense Current for Hot Qualification		344.1	352.9	361.7	μA
THRM Sense Current for Cold Qualification		47.58	48.80	50.02	μA
THRM Sense-Voltage Trip Point	(Note 3)	1.386	1.400	1.414	V

ELECTRICAL CHARACTERISTICS

 $(V_{PGND} = V_{GND} = 0, V_{INP} = V_{IN} = V_{\overline{CHG}} = 5V, V_{BATT} = V_{CS} = V_{EN} = 4V, THRM = 10k\Omega \text{ to GND}, C_{CT} = 100nF, \textbf{T}_{\textbf{A}} = -40^{\circ}C \text{ to } +85^{\circ}C, unless otherwise noted. Typical values are at T_{A} = +25^{\circ}C.) (Note 4)$

PARAMETER		CONDITIONS	MIN	ТҮР	MAX	UNITS
Supply Voltage Range	VINP, VIN (MAX1925 d	does not charge above 6.1V)	4.5		12.0	V
		MAX1925	4.30		4.78	
	V_{INP} , V_{IN} rising	MAX1926	4.0		4.5	
ACON Trip point	Vue Ve folling	MAX1925	4.17		4.43	V
	V _{INP} , V _{IN} falling	MAX1926	3.9		4.4	
INP, IN Shutdown Threshold	MAX1925	Rising	5.8		6.4	V
INF, IN SHUUDWIT THESHOLD	MAX 1925	Falling	5.3		5.9	v
EN Input Resistance	MAX1926 internally p	oulled up to 3V	125		550	kΩ
EN Leakage Current	MAX1925		-1		+1	μA
EN Logic Input High Threshold			2			V
EN Logic Input Low Threshold					0.8	V
DATT Of land to constant	DONE State, VBATT =	= 4.1V			50	
BATT + CS Input Current (Total Current into BATT and CS)	EN = GND (Note 2)				10	μA
	$V_{BATT} = V_{INP} = V_{IN} =$	= 4V, shutdown (Note 1)			10	
	EN = GND				8	mA
	$V_{BATT} = V_{INP} = V_{IN} = 4V$, shutdown				10	μA
IN + INP Total Input Current	V _{BATT} = 4.1V, charging				10	mA
	V _{BATT} = 4.3V, done				8	ША
VOLTAGE LOOP						
Voltage Loop Set Point			4.158		4.242	V
BATT Prequal1 Voltage Threshold			1.9		2.1	V
BATT Prequal2 Voltage Threshold			2.85		3.15	V
Restart Threshold	Charging restarts wh	en BATT falls to this point	3.92		4.08	V
BATT Voltage Fault Threshold	If BATT exceeds this MOSFET is off) and C	threshold, EXT is high (external CHG blinks	4.275		4.425	V
CURRENT LOOP						•
CS - BATT Sense Threshold	V _{CS} - V _{BATT} , average	e value	127		157	mV
Prequal1 Charge Current	V _{BATT} < 2V		3		6	mA
Current Threshold for Full-Battery Indication	ILOAD falling, as percentage of fast charge current		4		20	%
DRIVER FUNCTIONS	1		I			•
EXT On-Resistance	EXT high or low				12	Ω
TIMER FUNCTIONS			I			
Timer Accuracy	$C_{CT} = 100$ nF for 3 ho	ours	-16		+16	%
CHG Output Low Current	$V\overline{CHG} = 1V$		7		14	mA

ELECTRICAL CHARACTERISTICS (continued)

 $(V_{PGND} = V_{GND} = 0, V_{INP} = V_{IN} = V_{\overline{CHG}} = 5V, V_{BATT} = V_{CS} = V_{EN} = 4V, THRM = 10k\Omega$ to GND, $C_{CT} = 100$ nF, $T_A = -40^{\circ}C$ to +85°C, unless otherwise noted. Typical values are at $T_A = +25^{\circ}C$.) (Note 4)


PARAMETER	CONDITIONS	MIN	ТҮР	МАХ	UNITS
CHG Output High Leakage Current	$V\overline{CHG} = 12V$			1	μA
ACON High Leakage	$V_{\overline{ACON}} = 12V$			1	μA
ACON Sink Current	$V_{\overline{ACON}} = 0.4V$	2			mA
THERMISTOR MONITOR					
THRM Sense Current for Hot Qualification		342		363	μΑ
THRM Sense Current for Cold Qualification		47.3		50.3	μA
THRM Sense-Voltage Trip Point	(Note 3)	1.379		1.421	V

Note 1: When the AC adapter is unplugged or if the charger is shut down, BATT drain is less than 10µA.


Note 2: These specifications guarantee the thermistor interface detects a fault at the correct temperature (0°C to +5°C cold temperature and 45°C to +50°C hot temperature) with Philips NTC Thermistor Series 640-6, 2322-640-63103, 10.0K at +25°C, ±5% (or equivalent).

Note 3: A fault is generated if V_{THRM} lower than 1.4V during the cold test or higher than 1.4V during the hot test. Hot and cold tests occur on alternate CT clock transitions.

Note 4: Specifications to -40°C are guaranteed by design and not production tested.

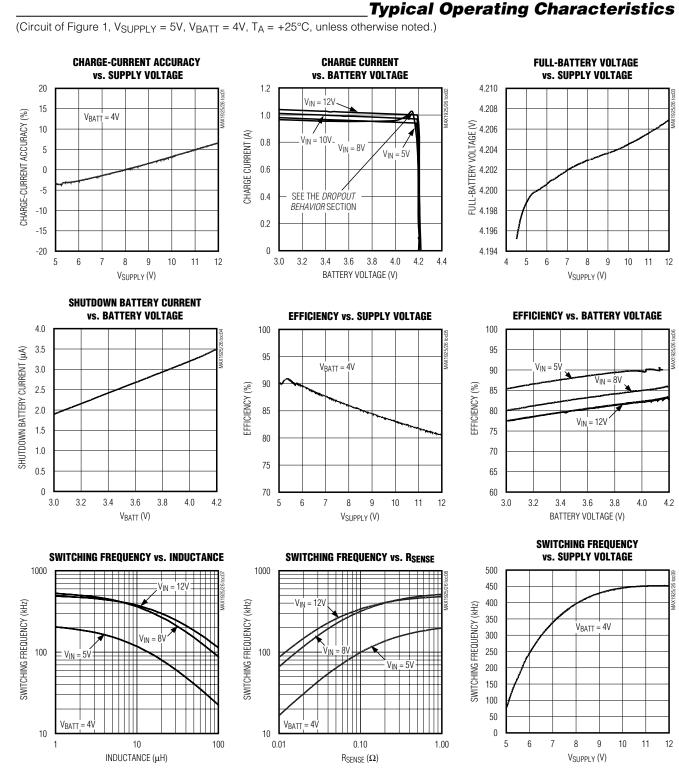

MAX1925/MAX1926

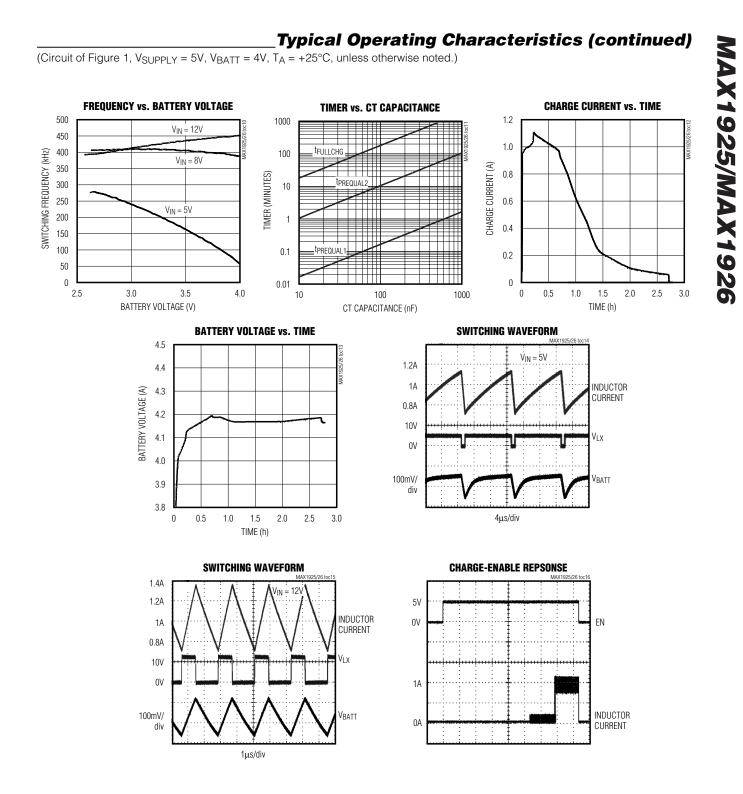

PIN	NAME	FUNCTION			
1	CHGCharge Status LED Driver. Open-drain LED driver sinks 10mA when the MAX1925/MAX1926 are cCHGalso blinks at a 0.5Hz rate during fault states (see the <i>Timing</i> section). High impedance when in shutdown. See Tables 1 and 2.				
2	EN	Enable. Drive EN high to enable charger. Logic level input for normal ON/OFF control. In the MAX1926 EN is internally pulled up to 3V with a 300k Ω resistor.			
3	THRM	Thermistor Input. Monitors external thermistor ($10k\Omega$ at +25°C). When external temperature is lower than 0°C or above +50°C, charging stops and the charger enters fault mode. Charging resumes when the temperature returns to normal. During a temperature fault the MAX1926 blinks the CHG output, while MAX1925 CHG remains off (high).			
4	ACON	Power-OK Indicator Output. Open-drain output goes low when AC adapter power is valid. See Table 2 for $\overline{\text{ACON}}$ states.			
5	СТ	Timing Capacitor Connection. Connect timer cap to program full-charge safety timeout interval and prequalification fault times. Timeouts with C _{CT} = 100nF are: Full Timer (t _{FULLCHG}): 3 hours—If FASTCHG is not completed within this time a fault is asserted. Prequal2 Timer: Full Timer/17 (10.67 min) Prequal1 Timer: Full Timer/1088 (10s)			
6	CS	Charge-Current Sense Input. 142mV nominal regulation threshold. CS is high impedance during shutdown.			
7	BATT	Battery-Sense Input. Also negative side of charge-current sense. BATT is high impedance during shutdown.			
8	GND	Ground			
9	PGND	Power Ground			
10	EXT	PMOS Gate-Driver Output. Drives gate of external PMOS switching transistor from IN to GND. When using the MAX1926, ensure that the MOSFET V_{GS} rating is greater than V_{IN} .			
11	INP	Supply Voltage Input			
12	IN	Supply-Sense Input. Connect IN to INP.			

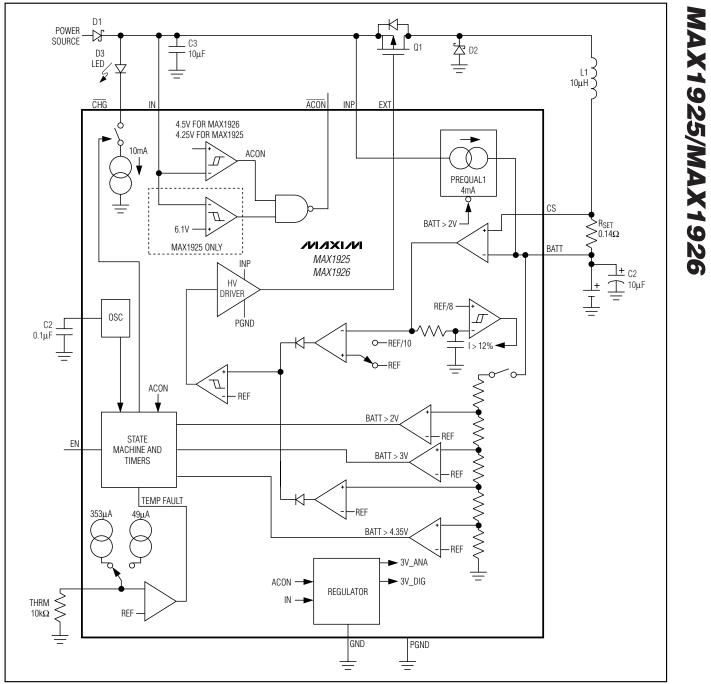


Figure 1. Functional Diagram

Detailed Description

The MAX1925/MAX1926 switch-mode battery chargers form a complete solution for a single-cell Li+ battery. The devices include battery undervoltage/overvoltage fault protection. The MAX1925/MAX1926 use EN and THRM for shutdown, battery detection, and temperature monitoring. The devices provide outputs to indicate charge status (CHG) and presence of input power (ACON).

The MAX1925/MAX1926 include two prequalification modes that must be passed before the charger enters the fast-charge state. During fast charge, the charger operates initially in constant-current mode until the battery voltage reaches 4.2V. When the battery voltage has reached 4.2V, the charger operates in constantvoltage mode. In constant-current mode, the charger acts as a hysteretic current source, controlling the inductor's peak and valley currents. In constant-voltage mode, the charger regulates the peak and valley of the output ripple.

Charge Cycle

The MAX1925/MAX1926 initiate PREQUAL when one of the following occurs:

- · When an external power source is connected
- The cell voltage falls to 4V after charging is finished
- EB is toggled
- Input power is cycled

Some Li+ cells can be damaged when fast-charged from a completely dead state. Moreover, an over-discharged cell may indicate a dangerous abnormal cell condition. As a built-in safety feature, the MAX1925/ MAX1926 use a two-level prequalification charge to determine if it is safe to charge. When the cell voltage is less than 2V, the cell is charged from an internal

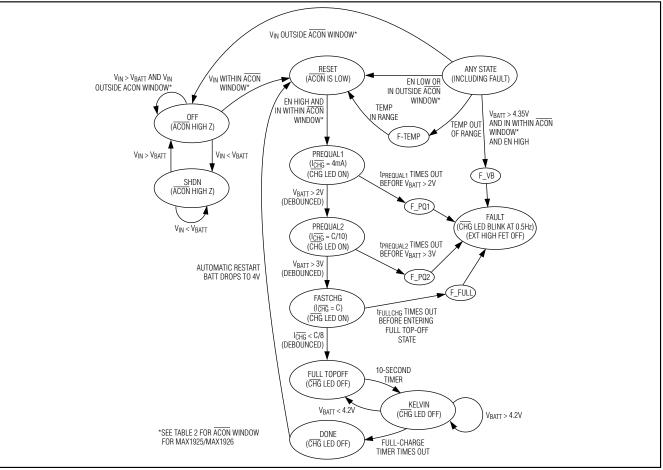


Figure 2. MAX1925/MAX1926 State Diagram

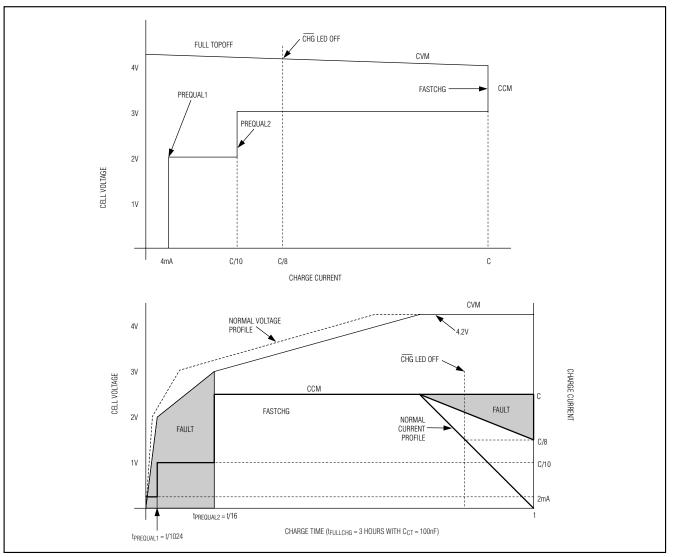


Figure 3. Charging Current and Voltage Timing Diagrams

linear 4mA current source (PREQUAL1). When the cell voltage exceeds 2V, the cell is charged with 10% of the programmed fast-charge current (IFASTCHG) until it reaches 3V. When the cell voltage is above 3V, fast charging occurs at the full set current. If the cell fails to reach the next prequalification threshold before a set time (see tPREQUAL1 and tPREQUAL2 in the *Timer Capacitor and Fault Modes section*), charging stops, a fault alarm is set, and the CHG output blinks.

Figures 2 and 3 show charging behavior typical Li+ cell. The MAX1925/MAX1926 remain in fast-charge mode until the battery voltage reaches regulation and the charge current drops below 1/8th of IFASTCHG. The charger then enters full topoff mode and the CHG LED is turned off. In full topoff mode, the controller continues to operate as in fast-charge mode, except that it remains in constant-voltage mode (CVM) unless the battery voltage falls. After every tPREQUAL1 (see the *Timer Capacitor and Fault Modes* section) the charger enters the Kelvin state (for 2 CT clock cycles, 60ms with CCT = 100nF) where charge current is interrupted so that the battery voltage can be accurately measured.

The MAX1925/MAX1926 do not enter done mode until tFULLCHG has been reached. If the battery is removed

MAX1925/MAX1926

and a new battery is connected during either fast-charge or full topoff modes, the charger begins with full charge current without prequalification unless the part is reset. Detect battery insertion by connecting THRM to a thermistor on the battery, if a thermistor is used, or to a $10 \mathrm{k} \Omega$ resistor linked to a battery door mechanism.

Constant-Current Mode (CCM)

When the battery voltage is below 4.2V, the MAX1925/MAX1926 regulate the charging current by controlling the peak and valley inductor currents. When the inductor current exceeds the 158mV/R_{SET}, the MAX1925/MAX1926 turn the external PFET off. When the inductor current falls below 128mV/R_{SET}, the MAX1925/MAX1926 turns the external PFET on, but only if the battery voltage is below regulation. The maximum cell charging current is programmed by selecting the external R_{SET} (see Figure 1) resistor connected between BATT and CS. Select the external resistor value using RSET = 142mV/IFASTCHG.

The accuracy of the charge current is a function of input voltage, battery voltage, inductance, and comparator delay (300ns typ). Determine the charge-current error according to the following equation:

$$\Delta I_{CHG} = \frac{(V_{IN} - 2 \times V_{BATT}) \times t_{IDelay}}{2 \times L}$$

where ΔI_{CHG} is the charge-current error, and t_{IDelay} is the current-sense comparator delay.

For this reason choose L for an on-time and off-time greater than $2 \times t_{IDelay}$ to minimize error in the charging current.

Constant-Voltage Mode (CVM)

In constant-voltage mode (CVM), the controller regulates the peak and valley of the output ripple. The maximum cell voltage is regulated to 4.2V. If, for any reason, the cell voltage exceeds 4.35V, a fault alarm is set, the CHG output blinks, and the PFET power switch is held off. The charger can then be restarted only by cycling input power or the EN input.

Indication of Charge Completion (CHG)

The CHG output is a 10mA current-sink output that indicates the cell's charging status. Connect an LED from IN to CHG for a visible indicator. Alternatively, a pullup resistor (typically 200k Ω) from a logic supply to CHG provides a logic-level output. Table 1 relates the status of the LED to the condition of the charger and battery.

ACON Output

The ACON open-drain output indicates when usable power is applied to IN. In the MAX1926 when VIN exceeds ACON threshold (nominally 4.25V with IN rising—see the *Electrical Characteristics* table), ACON goes low. In the MAX1925, ACON goes low when the input voltage is between 4.5V and 6.1V (see Table 2).

Re-Initiating a Charging Cycle

The MAX1925/MAX1926 feature automatic restart that resumes charging when the cell voltage drops to 4V and tFULL_CHG is completed. By automatically resuming charg-

STATE	CONDITION	CHG
OFF	EN low or no battery or input power	High impedance (LED off)
PREQUAL1	Charge current = 4mA until BATT reaches 2V.	Low (LED on)
PREQUAL2	Charge current = C/10 until BATT reaches 3V.	Low (LED on)
FAST CHARGE	Charge current = $C = 142 \text{mV/R}_{\text{SET}}$.	Low (LED on)
FULL CHARGE	Charge current has fallen to C/8.	High impedance (LED off)
FAULT PREQUAL1	BATT does not reach 2V before PREQUAL1 timeout.	
FAULT PREQUAL2	BATT does not reach 3V before PREQUAL2 timeout.	Blinking. LED on 50% f _{BLINK} (0.5Hz). Can
FAULT FULL	Charge current does not drop to C/8 before FULL CHARGE timeout.	only be cleared by cycling input power, THRM, or EN.
FAULT BATT VOLTAGE	Battery voltage has exceeded 4.35V.	Blinking. LED on 50% f _{BLINK} (0.5Hz).
FAULT TEMP	Temperature has risen above +50°C or fallen below 0°C.	MAX1925—High impedance (LED off)
FAULT TEIMP	Temp fault clears by itself.	MAX1926—Blinking (LED on 50% 0.5Hz)
NONE	Initial power-up or enable with battery not present.	Blinking at rapid rate as charger cycles through RESET, PREQUAL1, and DONE.

Table 1. CHG Output States





PART	V _{IN}	ACON	CHARGING	CHG LED
	V_{IN} > $V_{\overline{\text{ACON}}}$ threshold (4.5V nom) and < 6.1V, and V_{IN} > V_{BATT}	LOW	YES	ON (until charge complete)
MAX1925	V _{IN} > V _{ACON} threshold and V _{IN} < V _{BATT} (Note: This state should never occur)	High Z	NO	OFF
	$V_{IN} < V_{\overline{ACON}}$ threshold	High Z	NO	OFF
	V_{IN} > $V_{\overline{\text{ACON}}}$ threshold (4.25V nom) and V_{IN} > $V_{\overline{\text{BATT}}}$	LOW	YES	ON (until charge complete)
MAX1926	$V_{IN} > V_{\overline{ACON}}$ threshold and $V_{IN} < V_{BATT}$ (Note: This state should never occur)	High Z	NO	OFF
	$V_{IN} < V_{\overline{ACON}}$ Threshold	High Z	NO	OFF

Table 2. ACON Behavior vs. VIN

ing when the battery voltage drops, the MAX1925/MAX1926 ensure that the cell does not remain partially charged after use when charger power is available.

Charging also restarts if input power is cycled or if the charger is restarted by the EN or THRM input. If a new battery is inserted, the charger must be restarted. If the THRM functionality is used, the charger is automatically restarted upon battery insertion. When THRM is not used, toggle EN or connect THRM through a resistor to be grounded with a battery-door latch switch.

_Applications Information

Timer Capacitor and Fault Modes

The on-chip timer checks charge progress and issues an alarm signal through a blinking CHG output when one of the safety timers times out (see Table 1). All timers are set by one external capacitor at CT. A 100nF value sets the full-charge timer (tFULLCHG) to 3 hours, the tPREQUAL1 timer to (tFULLCHG)/1088 (10s), and the tPREQUAL2 timer at (tFULLCHG)/17 (10.67 minutes).

If the charger enters full-charge state (after the charging current has fallen below C/8) before the full-charge timer expires, no fault occurs, but if the timer expires before full charge is reached, a fault is indicated (see Table 1).

A fault is also indicated if the battery voltage exceeds 4.35V. When the cell voltage exceeds 4.35V a fault alarm is set, the CHG output blinks, and the PFET turns off.

To restart the charger after a fault occurs, the fault state must be cleared by toggling EN, or by cycling input power at IN (see Figure 1). Temperature faults do not need to be cleared by EN. The MAX1925/MAX1926 resume charging after the temperature returns to within the set window.

Inductor Selection

Because the MAX1925/MAX1926 is hysteretic, the constant-current mode switching frequency is a function of the inductance, sense resistance, and current-sense hysteresis (30mV, from the *Electrical Characteristics*). To minimize charge-current error:

$$L > \frac{(V_{IN} - 2 \times V_{BATT}) \times t_{Delay}}{2 \times \Delta I_{CHG}}$$

where ΔI_{CHG} is the acceptable charge-current error and should usually be less than 1/4th the full charge current. t_{IDelay} is the current-sense comparator delay (300ns typical). Calculate L for V_{IN} = V_{IN,MAX}, V_{BATT} = V_{BATT,MIN}, with positive ΔI_{CHG} and V_{IN} = V_{IN,MIN}, V_{BATT} = V_{BATT,MAX}, with negative ΔI_{CHG} . Use the larger calculated value for L.

The resulting switching frequency in CCM is:

$$f_{Switch} > \left(\frac{I_{HYST} \times L + t_{IDelay}V_{BATT}}{V_{IN} - V_{BATT}} + 2 \times t_{IDelay} + \frac{I_{HYST} \times L + t_{IDelay} \times (V_{IN} - V_{BATT})}{V_{BATT}}\right)^{-1}$$

Choose an inductor with an RMS and saturation current rating according to the following equation:

$$V_{SAT/RMS} > \frac{V_{IPK}}{R_{SET}} + \frac{(V_{IN} - V_{BATT})t_{IDelay}}{L}$$

where VIPK is the peak current-sense threshold (158mV typ).

Output Capacitor Selection

The ESR of the output capacitor influences the switching frequency of the charger during voltage regulation



mode. To ensure stable transition from CCM to CVM choose a capacitor with the following ESR:

$$R_{ESR} > \frac{V_{VHIST}}{V_{IHIST}} \times R_{SET}$$

where V_{VHIST} is the voltage hysteresis (15mV typ) and V_{IHIST} is the current-sense threshold hysteresis (typically 30mV). Tantalum capacitors are recommended. However a ceramic capacitor (typically 10 μ F) with a series resistor can also be used.

MOSFET Selection

The MAX1925/MAX1926 drive an external P-channel MOSFET's gate from IN to GND. Choose a P-channel MOSFET with a IV_{DS,MAX}I > V_{IN}. Since EXT drives from rail to rail the MOSFET must also be rated for IV_{GS,MAX}I > V_{IN}. At the lower operating frequencies and currents for typical MAX1925/MAX1926 applications resistive and diode losses dominate switching losses. For this reason choose a MOSFET with a low R_{DSON}. The resistive losses are:

 $\begin{array}{l} \mathsf{P}_{\mathsf{Resistive_losses}} \cong \mathsf{D} \times \mathsf{I}_{\mathsf{CHG}^2} \times \mathsf{R}_{\mathsf{DSON}} + \mathsf{I}_{\mathsf{CHG}^2} \times \\ (\mathsf{R}_{\mathsf{SET}} + \mathsf{R}_{\mathsf{L}}) \end{array}$

where D is the operating duty cycle (V_{OUT}/V_{IN}) and R_L is the inductor resistance. The MOSFET's power dissipation must exceed $D \times I_{CHG}^2 \times R_{DSON}$.

Diode Selection

In the event of a short-circuited source, the body diode inherent in the external PFET allows the cell to discharge. To prevent this and to protect against negative input voltages, add a Schottky or silicon diode between the power source and IN.

The MAX1925/MAX1926 use a diode for catching the inductor current during the off cycle. Select a Schottky diode with a current rating greater than V_{IPK}/R_{SET} and a voltage rating greater than V_{IN} .

Dropout Behavior

The MAX1925/MAX1926 regulate charging current by ramping inductor current between upper and lower thresholds, typically 128mV and 158mV across R_{SET}.

This results in an average current of 142mV/RSET. At input voltages near dropout (4.6V at IN for the typical circuit), the inductor current ramp waveform becomes somewhat flattened as inductor, MOSFET, input diode, and battery resistance limit inductor current. When the inductor current waveform flattens, it's average value rises with respect to the upper and lower current thresholds. This creates a slight peak (about 5%) in charging current at high battery voltages as seen in the Charging Current vs. Battery Voltage plot in the *Typical Operating Characteristics*. Charging current is still controlled in dropout and the charger operates normally. The dropout current peak can be minimized by reducing MOSFET and inductor resistance, as well as forward voltage in the input diode.

Thermistor Interface

An external thermistor inhibits charging by setting a fault flag when the cell is cold (<0°C) or hot (>+50°C). The THRM time-multiplexes two sense currents to test for both hot and cold qualification. Connect the thermistor between THRM and GND. If no temperature qualification is desired, replace the thermistor with a 10k Ω resistor connected through the battery-latch mechanism. The thermistor should be 10k Ω at +25°C and have a negative temperature coefficient, as defined by the expression below:

$$R_{T} = R_{25^{\circ}C \times e} \left\{ \beta \left[\left(\frac{1}{T + 273} \right) - \left(\frac{1}{298} \right) \right] \right\}$$

Table 3 shows nominal fault detection temperatures that result from a wide range of available thermistor temperature curves.

For a given thermistor characteristic, it is possible to adjust the fault-detection temperatures by adding a resistor in series with the thermistor or a parallel resistor from THRM to GND.

Chip Information


TRANSISTOR COUNT: 5722 PROCESS: BICMOS

Table 3. Fault	l emperature for L	Different Theri	nistors

THERMISTOR BETA	3000	3250	3500	3750
Resistance at +25°C	10000Ω	10000Ω	10000Ω	10000Ω
Resistance at +50°C	4587.78Ω	4299.35Ω	4029.06Ω	3775.75Ω
Resistance at 0°C	25140.55Ω	27148.09Ω	29315.94Ω	31656.90Ω
Nominal Hot Trip Temperature	55.14°C	52.60°C	50.46°C	48.63°C
Nominal Cold Trip Temperature	-3.24°C	-1.26°C	0.46°C	1.97°C

Package Information

(The package drawing(s) in this data sheet may not reflect the most current specifications. For the latest package outline information, go to **www.maxim-ic.com/packages**.)

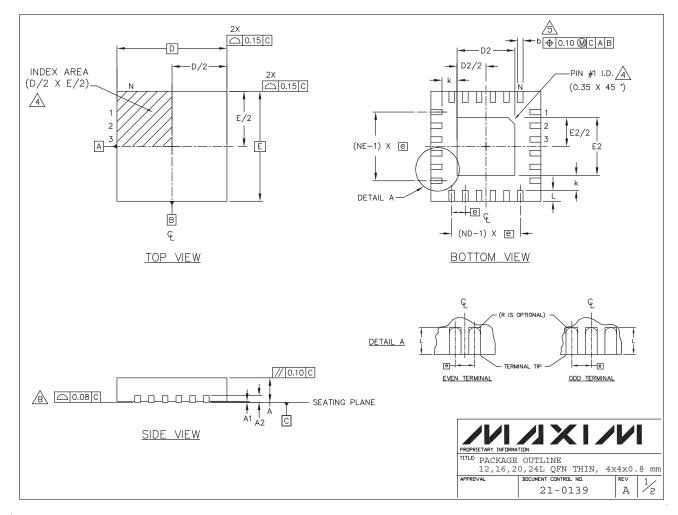

Package Information (continued)

(The package drawing(s) in this data sheet may not reflect the most current specifications. For the latest package outline information, go to www.maxim-ic.com/packages.)

					СОММ	ON DI	MENS	SIONS				
PKG	12L 4×4			16L 4×4			20L 4×4			24L 4×4		
REF.	MIN.	NDM.	MAX.	MIN.	NDM.	MAX.	MIN.	NDM.	MAX.	MIN.	NDM.	MAX.
А	0.70	0.75	0.80	0.70	0.75	0.80	0.70	0.75	0.80	0.70	0.75	0.80
A1	0.0	0.02	0.05	0.0	0.02	0.05	0.0	0.02	0.05	0.0	0.02	0.05
A2	0.20 REF			0.20 REF			0.20 REF			0.20 REF		
b	0.25	0.30	0.35	0.25	0.30	0.35	0.20	0.25	0.30	0.18	0.23	0.30
D	3.90	4.00	4.10	3.90	4.00	4.10	3.90	4.00	4.10	3.90	4.00	4.10
E	3.90	4.00	4.10	3.90	4.00	4.10	3.90	4.00	4.10	3.90	4.00	4.10
e	0.80 BSC.			0.65 BSC.			0.50 BSC.			0.50 BSC.		
k	0.25	-	-	0.25	-	-	0.25	-	-	0.25	-	-
L	0.45	0.55	0.65	0.45	0.55	0.65	0.45	0.55	0.65	0.30	0.40	0.50
N	12			16			20			24		
ND	3			4			5			6		
NE	3			4			5			6		
Jedec Var.	WGGB			WGGC			WGGD-1			WGGD-2		

EXPD:	SED	PAD	VARIATIONS				
PKG.		D2		E2			
CODES	MIN.	NDM.	MAX.	MIN.	NDM.	MAX.	
T1244-2	1.95	2.10	2.25	1.95	2.10	2.25	
T1644-2	1.95	2.10	2.25	1.95	2.10	2.25	
T2044-1	1.95	2.10	2.25	1.95	2.10	2.25	
T2444-1	2.45	2.60	2.63	2.45	2.60	2.63	

NOTES:

MAX1925/MAX1926

- 1. DIMENSIONING & TOLERANCING CONFORM TO ASME Y14.5M-1994.
- 2. ALL DIMENSIONS ARE IN MILLIMETERS. ANGLES ARE IN DEGREES.
- 3. N IS THE TOTAL NUMBER OF TERMINALS.
- A THE TERMINAL #1 IDENTIFIER AND TERMINAL NUMBERING CONVENTION SHALL CONFORM TO JESD 95-1 SPP-012. DETAILS OF TERMINAL #1 IDENTIFIER ARE OPTIONAL, BUT MUST BE LOCATED WITHIN THE ZONE INDICATED. THE TERMINAL #1 IDENTIFIER MAY BE EITHER A MOLD OR MARKED FEATURE.
- $\underline{\&}$ dimension 6 applies to metallized terminal and is measured between 0.25 mm and 0.30 mm from terminal tip.

Printed USA

- 6. ND AND NE REFER TO THE NUMBER OF TERMINALS ON EACH D AND E SIDE RESPECTIVELY.
- 7. DEPOPULATION IS POSSIBLE IN A SYMMETRICAL FASHION.
- & COPLANARITY APPLIES TO THE EXPOSED HEAT SINK SLUG AS WELL AS THE TERMINALS.
- 9. DRAWING CONFORMS TO JEDEC MO220.

ROPRIETARY INFORMATION TTLE PACKAGE OUTLINE 12,16,20,24L QFN THIN, 4x4x0.8 mm 2/2 21-0139 Α

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

16

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600

© 2002 Maxim Integrated Products

MAXIM is a registered trademark of Maxim Integrated Products.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Maxim Integrated: <u>MAX1925ETC+</u> MAX1925ETC+T MAX1926ETC+ MAX1926ETC+T