


Mini-Mac Applicator Rear Feed

Application Tooling Specification Sheet

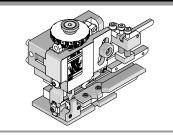

Order No. 63802-7400

FEATURES

- Quick set-up time; plus the crimp height, track and feed adjustments can be preset in applicator
- Conductor and insulation rings allow quick adjustment for conductor and insulation diameter change
- Applicator designed to industry standard mounting and shut height 135.80mm (5.346")
- Directly adapts to most automatic wire processing machines

SCOPE

Products: VibraKrimp™ Quick Disconnect Female Terminals, 18-22 AWG.

Terminal Terminal		Wire Size		Tab	Size	Insulation	Strip Length		
Order No.	Eng. No.	AWG	mm²	mm	ln.	mm	ln.	mm	ln.
19009-0007	AAZ-4168	18-22	0.80-0.35	6.35 by 0.81	.250 by .032	3.40	.135	5.95	.234
19009-0008	AAZ-4170	18-22	0.80-0.35	4.75 by 0.51	.187 by .020	3.40	.135	5.95	.234
19009-0009	AAZ-4170-032	18-22	0.80-0.35	4.75 by 0.81	.187 by .032	3.40	.135	5.95	.234

DEFINITION OF TERMS WIRE STRIP LENGTH INSULATION **CUT-OFF TAB CRIMP BEND UP** CONDUCTOR **CRIMP ROLLING TWISTING BEND DOWN CRIMP HEIGHT**

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

UNCONTROLLED COPY Doc No: ATS-638027400 Release Date: 08-18-09 Page 1 of 5 Revision Date: 11-04-14

Revision: C

CRIMP SPECIFICATIONS


	Terminal Eng. No.	Wire Size		Conductor Crimp Height						Pull Force	
Terminal Order No.				Mean		Go		No Go		Minimum	
		AWG	mm²	mm	ln.	mm	ln.	mm	ln.	N	Lb.
	AAZ-4168	18	0.80	1.27	.050	1.14	.045	1.40	.055	89.0	20.0
19009-0007		20	0.50	1.27	.050	1.14	.045	1.40	.055	57.9	13.0
		22	0.35	1.27	.050	1.14	.045	1.40	.055	35.6	8.0
	AAZ-4170	18	0.80	1.27	.050	1.14	.045	1.40	.055	89.0	20.0
19009-0008		20	0.50	1.27	.050	1.14	.045	1.40	.055	57.9	13.0
		22	0.35	1.27	.050	1.14	.045	1.40	.055	35.6	8.0
		18	0.80	1.27	.050	1.14	.045	1.40	.055	89.0	20.0
19009-0009	AAZ-4170-032	20	0.50	1.27	.050	1.14	.045	1.40	.055	57.9	13.0
		22	0.35	1.27	.050	1.14	.045	1.40	.055	35.6	8.0
Seam											
Seam shall not be open and no wire allowed out of the crimping											

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.

Tool Calibration

To recalibrate this applicator, make sure the power is completely shut off on the press.

- 1. The Applicator must be properly installed in the press.
- 2. Crimping dies must be properly installed in the Applicator.
- The recommended method of measuring the crimp height of the conductor dies is the soft metal slug method. See Figure 1.
- 4. The slug must have a diameter 0.51mm (.020") larger than the "X" No Go dimension before crimping.
- 5. Place the soft metal slug (solder) into the nest of the bottom die and crimp (by hand cycling the press) similar to a terminal. The crimp height can be measured with a blade type micrometer or dial caliper, (Dimension "X").
- 6. Adjustment of the crimp height can be accomplished by indexing the conductor cam. The letter "A" gives the loosest position and "K" gives the tightest position. A total adjustment of 0.50mm (.020") can be achieved by adjusting the conductor cam.

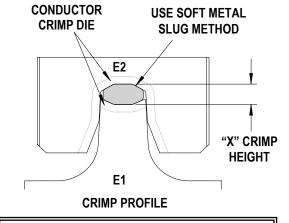

Use soft metal slug (solder) method to Measure the "X" dimension. Verify tooling crimp height calibration by referring to the Go/No Go dimensions shown in the chart.

Note: If the crimp height is too tight on the setting "A", check the shut height of the press. See the Industrial Mini-Mac Applicator Manual Section 2.1 for adjustments.

Molex does not sell gauge pins contact your local industrial supplier.


Doc No: ATS-638027400 Release Date: 08-18-09 **UNCONTROLLED COPY** Page 2 of 5 Revision: C Revision Date: 11-04-14

PARTS LIST

Rear Feed Applicator 63802-7400								
Item	Order No	Engineering No.	Description	Quantity				
Perishable Tooling								
	63802-7470	63802-7470	Tool Kit (All "Y" Items)	REF				
1	63801-5514	63801-5514	Conductor Punch (E2 Die)	1 Y				
2	63801-5612	63801-5612	Insulation Punch (I2 Die)	1 Y				
3	19230-0086	19230-0086	Conductor Anvil (Indenter Die)	1 Y				
4	19229-0120	19229-0120	Cutter Housing	1 Y				
5	19229-0121	19229-0121	Cutter Plunger	1 Y				
Other Components								
6	19229-0095	19229-0095	Cutter Back Plate	1				
7	19230-0038	19230-0038	Feed Finger	1				
8	19230-0085	19230-0085	Guide and Hold Down	1				
9	19230-0101	19230-0101	Guide Rail	1				
10	19250-0038	19250-0038	Compression Spring	1				
11	63801-7160	63801-7160	Terminal Drag Assembly	1				
12	63801-7701	63801-7701	Cutter Striker	1				
13	63802-7401	63802-7401	Shoulder Bushing	1				
14	63803-5109	63803-5109	Conductor Bushing	1				
Frame								
15	19230-0084	19230-0084	Slide (Terminal Track)	1				
16	63801-2600	63801-2600	Rear Feed Frame	1				
17	63801-2603	63801-2603	Base	1				
Hardware								
18	N/A	N/A	M3 by 10 Long SHCS	2**				
19	N/A	N/A	M4 by 8 Long SHCS	6**				
20	N/A	N/A	M4 by 10 Long BHCS	2**				
21	N/A	N/A	M4 by 12 Long SHCS	2**				
22	N/A	N/A	M6 by 10 Long BHCS	6**				
23	N/A	N/A	M8 by 25 Long BHCS	1**				
24								
** A	** Available from an industrial supply company such as MSC (1-800-645-7270).							

Doc No: ATS-638027400 Release Date: 08-18-09 UNCONTROLLED COPY
Revision: C Revision Date: 11-04-14

Page 3 of 5

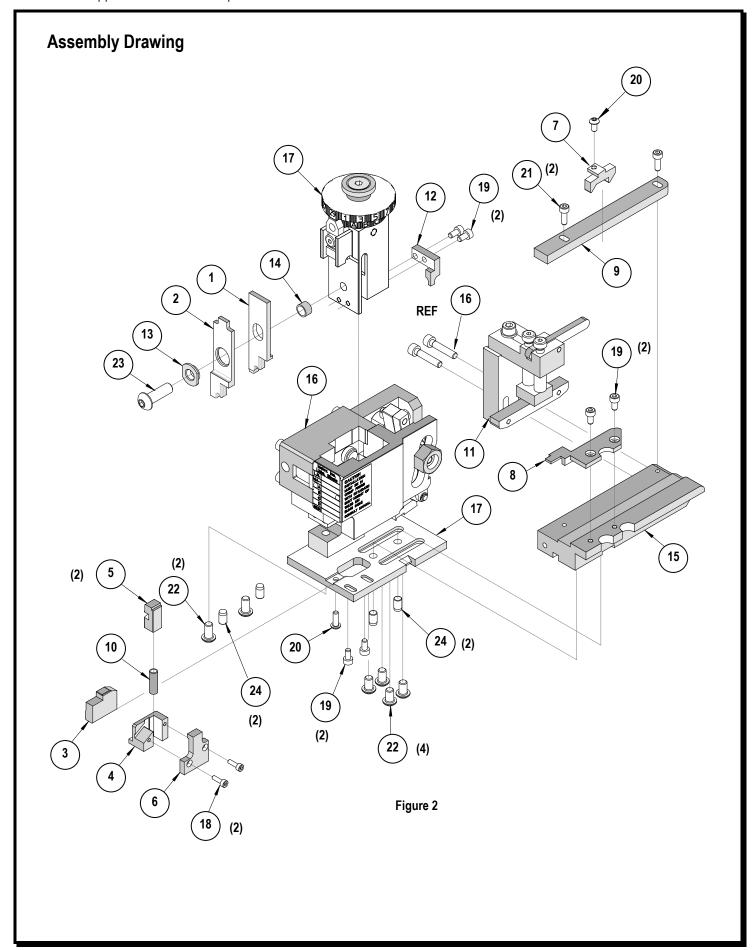

Doc No: ATS-638027400 Revision: C Release Date: 08-18-09 Revision Date: 11-04-14

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Applicator before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the Mini-Mac Manual.

CAUTION: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

CAUTION: To prevent injury never operate this Applicator without the guards supplied with the press or wire-processing machine in place. Reference the press or wire processing manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Wear Safety Glasses At All Times.

Visit our Web site at http://www.molex.com

UNCONTROLLED COPY Doc No: ATS-638027400 Release Date: 08-18-09 Page 5 of 5 Revision Date: 11-04-14

Revision: C

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex:

63801-5612 63802-7470