

Automotive SDR SDRAM

MT48LC64M4A2 – 16 Meg x 4 x 4 banks MT48LC32M8A2 - 8 Meg x 8 x 4 banks MT48LC16M16A2 - 4 Meg x 16 x 4 banks

. ا

Features		Options	Marking
 PC100- and PC133-compliant Fully synchronous; all signals registere edge of system clock Internal, pipelined operation; column to be changed every clock cycle Internal banks for hiding row access/p Programmable burst lengths: 1, 2, 4, 8, Auto precharge, includes concurrent at and auto refresh modes Self refresh mode (not available on AAT) Auto refresh 64ms, 8192-cycle (commercial and i 16ms, 8192-cycle (automotive) IVTTL-compatible inputs and outputs Single 3.3V ±0.3V power supply AEC-Q100 PPAP submission 8D response time 	address can recharge or full page uto precharge C devices) ndustrial)	 54-pin TSOP II OCPL¹ (400 mil) Pb-free 60-ball FBGA (x4, x8) (8mm x 16mm) Pb-free 54-ball VFBGA (x16) (8mm x 14 mm) Pb-free 54-ball VFBGA (x16) (8mm x 14 mm) Pb-free 54-ball VFBGA (x16) (8mm x 8 mm) 54-ball VFBGA (x16) (8mm x 8 mm) Pb-free Timing – cycle time 6ns @ CL = 3 (x8, x16 only) 7.5ns @ CL = 3 (PC133) Self refresh Standard Low power Operating temperature range 	P FB BB FG^2 BG^2 $F4^3$ B4^3 -6A -75 -7E None L ⁴
 Options Configurations 64 Meg x 4 (16 Meg x 4 x 4 banks) 32 Meg x 8 (8 Meg x 8 x 4 banks) 16 Meg x 16 (4 Meg x 16 x 4 banks) Write recovery (^tWR) ^tWR = 2 CLK Plastic package – OCPL¹ 54-pin TSOP II OCPL¹ (400 mil) 	Marking 64M4 32M8 16M16 A2 TG	 Industrial (-40°C to +85°C) Automotive (-40°C to +105°C) Revision Notes: 1. Off-center parting line. 2. Only available on Revision D. 3. Only available on Revision G. 4. Contact Micron for availability. 	AIT AAT ⁴ :D/:G

Table 1: Key Timing Parameters

CI = CAS (READ) latency

(standard)

	Clock	Access Time			
Speed Grade	Frequency	CL = 2	CL = 3	Setup Time	Hold Time
-6A	167 MHz	-	5.4ns	1.5ns	0.8ns
-7E	143 MHz	-	5.4ns	1.5ns	0.8ns
-75	133 MHz	-	5.4ns	1.5ns	0.8ns
-7E	133 MHz	5.4ns	_	1.5ns	0.8ns
-75	100 MHz	6ns	_	1.5ns	0.8ns

09005aef848d99e8 256Mb_ait_aat_sdr_esg.pdf - Rev. D 6/18 EN 1

Micron Technology, Inc. reserves the right to change products or specifications without notice. © 2012 Micron Technology, Inc. All rights reserved.

Products and specifications discussed herein are subject to change by Micron without notice.



Table 2: Address Table

Parameter	64 Meg x 4	32 Meg x 8	16 Meg x 16
Configuration	16 Meg x 4 x 4 banks	8 Meg x 8 x 4 banks	4 Meg x 16 x 4 banks
Refresh count	8K	8K	8K
Row addressing	8K A[12:0]	8K A[12:0]	8K A[12:0]
Bank addressing	4 BA[1:0]	4 BA[1:0]	4 BA[1:0]
Column addressing	2K A[9:0, 11]	1K A[9:0]	512 A[8:0]

Table 3: 256Mb SDR Part Numbering

Part Numbers	Architecture	Package
MT48LC64M4A2TG	64 Meg x 4	54-pin TSOP II
MT48LC64M4A2P	64 Meg x 4	54-pin TSOP II
MT48LC64M4A2FB ¹	64 Meg x 4	60-ball FBGA
MT48LC64M4A2BB ¹	64 Meg x 4	60-ball FBGA
MT48LC32M8A2TG	32 Meg x 8	54-pin TSOP II
MT48LC32M8A2P	32 Meg x 8	54-pin TSOP II
MT48LC32M8A2FB ¹	32 Meg x 8	60-ball FBGA
MT48LC32M8A2BB ¹	32 Meg x 8	60-ball FBGA
MT48LC16M16A2TG	16 Meg x 16	54-pin TSOP II
MT48LC16M16A2P	16 Meg x 16	54-pin TSOP II
MT48LC16M16A2FG	16 Meg x 16	54-ball FBGA
MT48LC16M16A2BG	16 Meg x 16	54-ball FBGA

Note: 1. FBGA Device Decoder: www.micron.com/decoder.



Contents

Important Notes and Warnings	7
General Description	
Automotive Temperature	8
Functional Block Diagrams	
Pin and Ball Assignments and Descriptions	12
Package Dimensions	16
Temperature and Thermal Impedance	20
Electrical Specifications	24
Electrical Specifications – I _{DD} Parameters	26
Electrical Specifications – AC Operating Conditions	
Functional Description	
Commands	
COMMAND INHIBIT	
NO OPERATION (NOP)	
LOAD MODE REGISTER (LMR)	
ACTIVE	
READ	
WRITE	
PRECHARGE	
BURST TERMINATE	
AUTO REFRESH	
SELF REFRESH	
Truth Tables	
Initialization	
Mode Register	
Burst Length	
Burst Type	
CAS Latency	
Operating Mode	
Write Burst Mode	
Bank/Row Activation	
READ Operation	
WRITE Operation	
Burst Read/Single Write	67
PRECHARGE Operation	68
Auto Precharge	
AUTO REFRESH Operation	
SELF REFRESH Operation	
Power-Down	
Clock Suspend	
Revision History	
Rev. D – $6/18$	
Rev. C – 1/14	
Rev. B – 11/13	
Rev. A – 04/12	88



List of Figures

	54 Meg x 4 Functional Block Diagram	
Figure 2: 3	32 Meg x 8 Functional Block Diagram	10
Figure 3:	16 Meg x 16 Functional Block Diagram	11
Figure 4: 5	54-Pin TSOP (Top View)	12
Figure 5: 6	60-Ball FBGA (Top View)	13
Figure 6: 5	54-Ball VFBGA (Top View)	14
Figure 7: 5	54-Pin Plastic TSOP "TG/P" (400 mil)	16
Figure 8: 6	60-Ball TFBGA "BB/FB" (8mm x 16mm) (x4, x8)	17
	54-Ball VFBGA "BG/FG" (8mm x 14mm) (x16)	
	54-Ball VFBGA "B4/F4" (8mm x 8mm) (x16)	
	Example: Temperature Test Point Location, 54-Pin TSOP (Top View)	
	Example: Temperature Test Point Location, 54-Ball VFBGA (Top View)	
	Example: Temperature Test Point Location, 60-Ball FBGA (Top View)	
	ACTIVE Command	
	READ Command	
	WRITE Command	
	PRECHARGE Command	
	Initialize and Load Mode Register	
	Mode Register Definition	
	CAS Latency	
	Example: Meeting ^t RCD (MIN) When $2 < {}^{t}RCD$ (MIN)/ ${}^{t}CK \le 3$	
	Consecutive READ Bursts	
0	Random READ Accesses	
	READ-to-WRITE	
0	READ-to-WRITE With Extra Clock Cycle	
	READ-to-PRECHARGE	
	Terminating a READ Burst	
0	Alternating Bank Read Accesses	
0	READ Continuous Page Burst	
0	READ – DQM Operation	
	WRITE Burst	
	WRITE buist	
	Random WRITE Cycles	
Figure 33.	WRITE-to-READ	62
	WRITE-to-PRECHARGE	
	Terminating a WRITE Burst	
0	0	
	Alternating Bank Write Accesses	
	WRITE – Continuous Page Burst	
	WRITE – DQM Operation	
	READ With Auto Precharge Interrupted by a READ	
	READ With Auto Precharge Interrupted by a WRITE	
Figure 42:	READ With Auto Precharge	71
Figure 43:	READ Without Auto Precharge	72
Figure 44:	Single READ With Auto Precharge	73
Figure 45:	Single READ Without Auto Precharge	74
	WRITE With Auto Precharge Interrupted by a READ	
	WRITE With Auto Precharge Interrupted by a WRITE	
	WRITE With Auto Precharge	
	WRITE Without Auto Precharge	
Figure 50:	Single WRITE With Auto Precharge	78



256Mb: x4, x8, x16 Automotive SDRAM Features

Figure 51:	Single WRITE Without Auto Precharge	79
	Auto Refresh Mode	
	Self Refresh Mode	
Figure 54:	Power-Down Mode	84
Figure 55:	Clock Suspend During WRITE Burst	85
	Clock Suspend During READ Burst	
Figure 57:	Clock Suspend Mode	87



List of Tables

Table 1: Key Timing Parameters	1
Table 2: Address Table	
Table 3: 256Mb SDR Part Numbering	2
Table 4: Pin and Ball Descriptions	
Table 5: Temperature Limits	20
Table 6: Thermal Impedance Simulated Values	
Table 7: Absolute Maximum Ratings	
Table 8: DC Electrical Characteristics and Operating Conditions	24
Table 9: Capacitance	25
Table 10: I _{DD} Specifications and Conditions (x4, x8, x16) Revision D Only	26
Table 11: I _{DD} Specifications and Conditions (x4, x8, x16) Revision G Only	26
Table 12: Electrical Characteristics and Recommended AC Operating Conditions	28
Table 13: AC Functional Characteristics	29
Table 14: Truth Table – Commands and DQM Operation	32
Table 15: Truth Table – Current State Bank n, Command to Bank n	
Table 16: Truth Table – Current State Bank n, Command to Bank m	
Table 17: Truth Table – CKE	
Table 18: Burst Definition Table	48



Important Notes and Warnings

Micron Technology, Inc. ("Micron") reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions. This document supersedes and replaces all information supplied prior to the publication hereof. You may not rely on any information set forth in this document if you obtain the product described herein from any unauthorized distributor or other source not authorized by Micron.

Automotive Applications. Products are not designed or intended for use in automotive applications unless specifically designated by Micron as automotive-grade by their respective data sheets. Distributor and customer/distributor shall assume the sole risk and liability for and shall indemnify and hold Micron harmless against all claims, costs, damages, and expenses and reasonable attorneys' fees arising out of, directly or indirectly, any claim of product liability, personal injury, death, or property damage resulting directly or indirectly from any use of nonautomotive-grade products in automotive applications. Customer/distributor shall ensure that the terms and conditions of sale between customer/distributor and any customer of distributor/customer (1) state that Micron products are not designed or intended for use in automotive applications unless specifically designated by Micron as automotive-grade by their respective data sheets and (2) require such customer of distributor/customer to indemnify and hold Micron harmless against all claims, costs, damages, and expenses and reasonable attorneys' fees arising out of, directly or indirectly, any claim of product liability, personal injury, death, or property damage resulting from any use of non-automotive-grade products in automotive applications.

Critical Applications. Products are not authorized for use in applications in which failure of the Micron component could result, directly or indirectly in death, personal injury, or severe property or environmental damage ("Critical Applications"). Customer must protect against death, personal injury, and severe property and environmental damage by incorporating safety design measures into customer's applications to ensure that failure of the Micron component will not result in such harms. Should customer or distributor purchase, use, or sell any Micron component for any critical application, customer and distributor shall indemnify and hold harmless Micron and its subsidiaries, subcontractors, and affiliates and the directors, officers, and employees of each against all claims, costs, damages, and expenses and reasonable attorneys' fees arising out of, directly or indirectly, any claim of product liability, personal injury, or death arising in any way out of such critical application, whether or not Micron or its subsidiaries, subcontractors, or affiliates were negligent in the design, manufacture, or warning of the Micron product.

Customer Responsibility. Customers are responsible for the design, manufacture, and operation of their systems, applications, and products using Micron products. ALL SEMICONDUCTOR PRODUCTS HAVE INHERENT FAIL-URE RATES AND LIMITED USEFUL LIVES. IT IS THE CUSTOMER'S SOLE RESPONSIBILITY TO DETERMINE WHETHER THE MICRON PRODUCT IS SUITABLE AND FIT FOR THE CUSTOMER'S SYSTEM, APPLICATION, OR PRODUCT. Customers must ensure that adequate design, manufacturing, and operating safeguards are included in customer's applications and products to eliminate the risk that personal injury, death, or severe property or environmental damages will result from failure of any semiconductor component.

Limited Warranty. In no event shall Micron be liable for any indirect, incidental, punitive, special or consequential damages (including without limitation lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort, warranty, breach of contract or other legal theory, unless explicitly stated in a written agreement executed by Micron's duly authorized representative.

General Description

The 256Mb SDRAM is a high-speed CMOS, dynamic random-access memory containing 268,435,456 bits. It is internally configured as a quad-bank DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x4's 67,108,864-bit banks is organized as 8192 rows by 2048 columns by 4 bits. Each of the x8's 67,108,864-bit banks is organized as 8192 rows by 1024 columns by



8 bits. Each of the x16's 67,108,864-bit banks is organized as 8192 rows by 512 columns by 16 bits.

Read and write accesses to the SDRAM are burst-oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA[1:0] select the bank; A[12:0] select the row). The address bits registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

The SDRAM provides for programmable read or write burst lengths (BL) of 1, 2, 4, or 8 locations, or the full page, with a burst terminate option. An auto precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence.

The 256Mb SDRAM uses an internal pipelined architecture to achieve high-speed operation. This architecture is compatible with the 2*n* rule of prefetch architectures, but it also allows the column address to be changed on every clock cycle to achieve a highspeed, fully random access. Precharging one bank while accessing one of the other three banks will hide the PRECHARGE cycles and provide seamless, high-speed, random-access operation.

The 256Mb SDRAM is designed to operate in 3.3V memory systems. An auto refresh mode is provided, along with a power-saving, power-down mode. All inputs and outputs are LVTTL-compatible.

SDRAM devices offer substantial advances in DRAM operating performance, including the ability to synchronously burst data at a high data rate with automatic column-address generation, the ability to interleave between internal banks to hide precharge time, and the capability to randomly change column addresses on each clock cycle during a burst access.

Automotive Temperature


The automotive temperature (AAT) option adheres to the following specifications:

- 16ms refresh rate
- Self refresh not supported
- Ambient and case temperature cannot be less than -40° C or greater than $+105^{\circ}$ C



Functional Block Diagrams

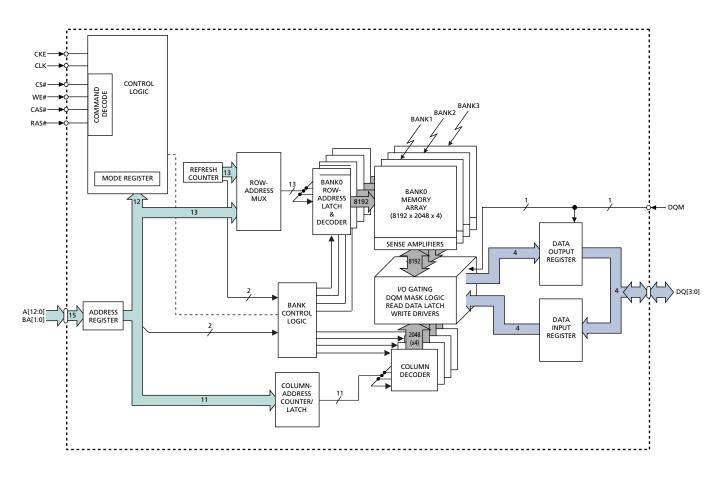
Figure 1: 64 Meg x 4 Functional Block Diagram





256Mb: x4, x8, x16 Automotive SDRAM Functional Block Diagrams

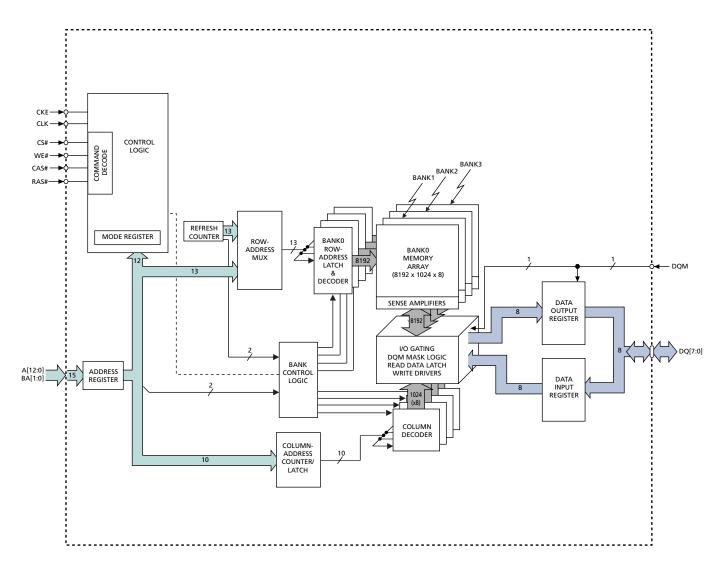
Figure 2: 32 Meg x 8 Functional Block Diagram





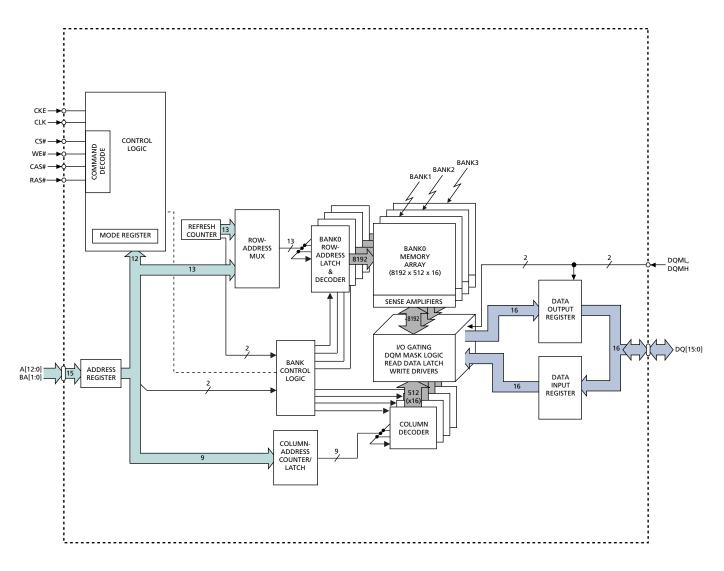256Mb: x4, x8, x16 Automotive SDRAM Functional Block Diagrams








Pin and Ball Assignments and Descriptions

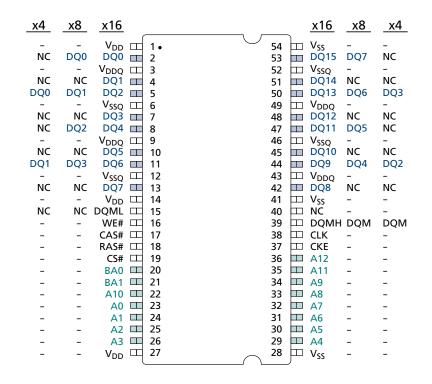Figure 4: 54-Pin TSOP (Top View)




- Notes: 1. The # symbol indicates that the signal is active LOW. A dash (-) indicates that the x8 and x4 pin function is the same as the x16 pin function.
 - 2. Package may or may not be assembled with a location notch.



256Mb: x4, x8, x16 Automotive SDRAM Pin and Ball Assignments and Descriptions

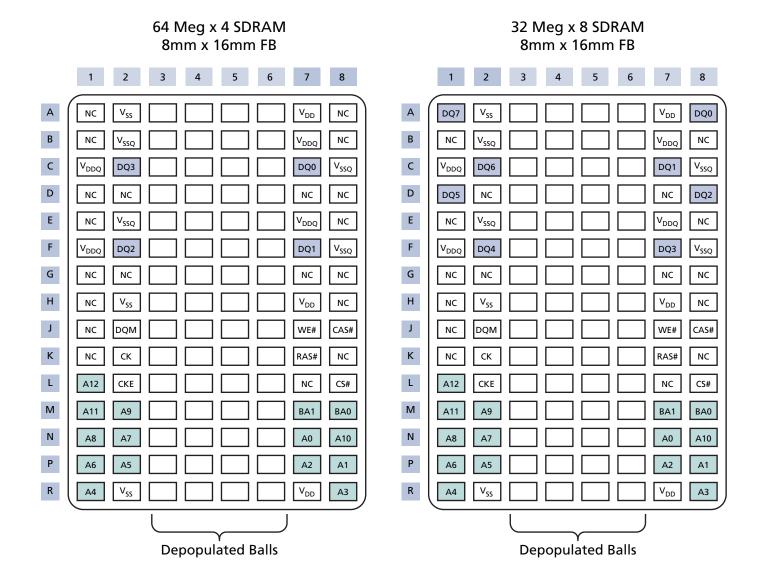
Figure 5: 60-Ball FBGA (Top View)





256Mb: x4, x8, x16 Automotive SDRAM Pin and Ball Assignments and Descriptions

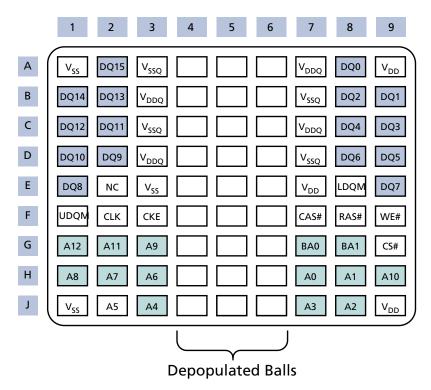Figure 6: 54-Ball VFBGA (Top View)



Note: 1. The balls at A4, A5, and A6 are absent from the physical package. They are included to illustrate that rows 4, 5, and 6 exist, but contain no solder balls.




Table 4: Pin and Ball Descriptions

Symbol	Туре	Description
CLK	Input	Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.
CKE	Input	Clock enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. Deactivating the clock provides precharge power-down and SELF REFRESH operation (all banks idle), active power-down (row active in any bank), or CLOCK SUSPEND operation (burst/access in pro- gress). CKE is synchronous except after the device enters power-down and self refresh modes, where CKE becomes asynchronous until after exiting the same mode. The input buffers, in- cluding CLK, are disabled during power-down and self refresh modes, providing low standby power. CKE may be tied HIGH.
CS#	Input	Chip select: CS# enables (registered LOW) and disables (registered HIGH) the command decod- er. All commands are masked when CS# is registered HIGH, but READ/WRITE bursts already in progress will continue, and DQM operation will retain its DQ mask capability while CS# is HIGH. CS# provides for external bank selection on systems with multiple banks. CS# is consid- ered part of the command code.
CAS#, RAS#, WE#	Input	Command inputs: RAS#, CAS#, and WE# (along with CS#) define the command being entered.
x4, x8: DQM x16: DQML, DQMH LDQM, UDQM (54-ball)	Input	Input/output mask: DQM is sampled HIGH and is an input mask signal for write accesses and an output enable signal for read accesses. Input data is masked during a WRITE cycle. The output buffers are High-Z (two-clock latency) during a READ cycle. LDQM corresponds to DQ[7:0], and UDQM corresponds to DQ[15:8]. LDQM and UDQM are considered same-state when referenced as DQM.
BA[1:0]	Input	Bank address input(s): BA[1:0] define to which bank the ACTIVE, READ, WRITE, or PRECHARGE command is being applied.
A[12:0]	Input	Address inputs: A[12:0] are sampled during the ACTIVE command (row address A[12:0]) and READ or WRITE command (column address A[9:0] and A11 for x4; A[9:0] for x8; A[8:0] for x16; with A10 defining auto precharge) to select one location out of the memory array in the respective bank. A10 is sampled during a PRECHARGE command to determine if all banks are to be precharged (A10 HIGH) or bank selected by BA[1:0] (LOW). The address inputs also provide the op-code during a LOAD MODE REGISTER command.
x16: DQ[15:0]	I/O	Data input/output: Data bus for x16 (pins 4, 7, 10, 13, 42, 45, 48, and 51 are NC for x8; and pins 2, 4, 7, 8, 10, 13, 42, 45, 47, 48, 51, and 53 are NC for x4).
x8: DQ[7:0]	I/O	Data input/output: Data bus for x8 (pins 2, 8, 47, 53 are NC for x4).
x4: DQ[3:0]	I/O	Data input/output: Data bus for x4.
V _{DDQ}	Supply	DQ power: DQ power to the die for improved noise immunity.
V _{SSQ}	Supply	DQ ground: DQ ground to the die for improved noise immunity.
V _{DD}	Supply	Power supply: +3.3V ±0.3V.
V _{SS}	Supply	Ground.
NC	_	These should be left unconnected. For x4 and x8 parts, G1 is a no connect, but may be used as A12 in future designs.



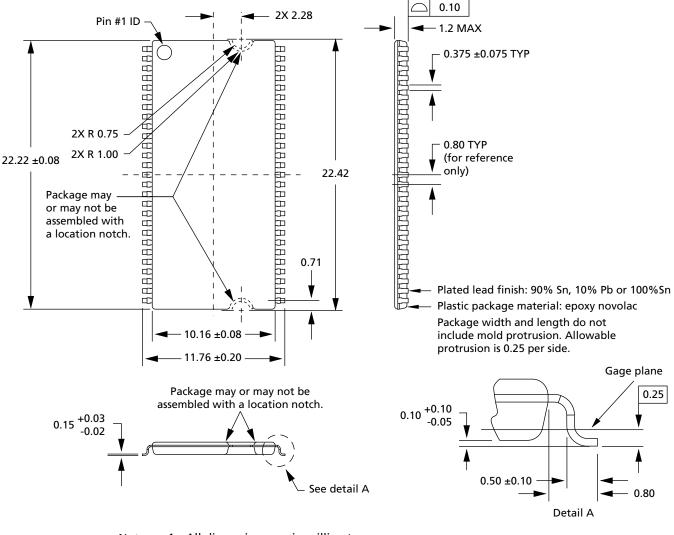Package Dimensions






- Notes: 1. All dimensions are in millimeters.
 - 2. Package width and length do not include mold protrusion; allowable mold protrusion is 0.25mm per side.
 - 3. 2X means the notch is present in two locations (both ends of the device).
 - 4. Package may or may not be assembled with a location notch.



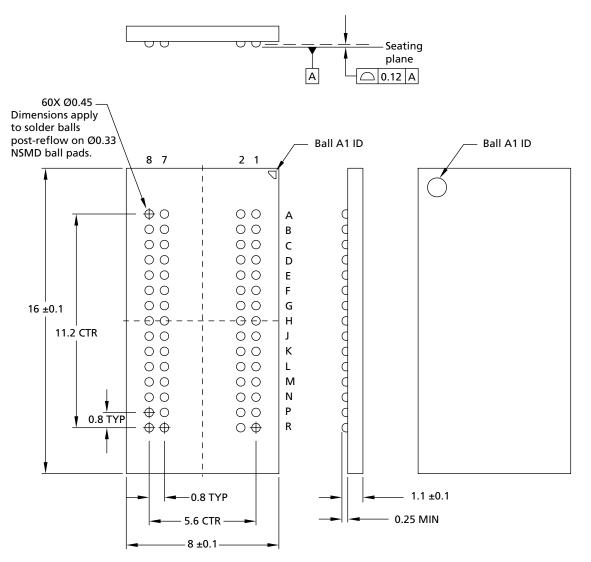Figure 8: 60-Ball TFBGA "BB/FB" (8mm x 16mm) (x4, x8)




Notes: 1. All dimensions are in millimeters.

- 2. Recommended pad size for PCB is 0.33mm ±0.025mm.
- 3. Solder ball material: SAC305 (96.5% Sn, 3% Ag, 0.5% Cu) or 62% Sn, 2% Ag, 36% Pb.
- 4. Topside part-marking decoder is available at www.micron.com/decoder.



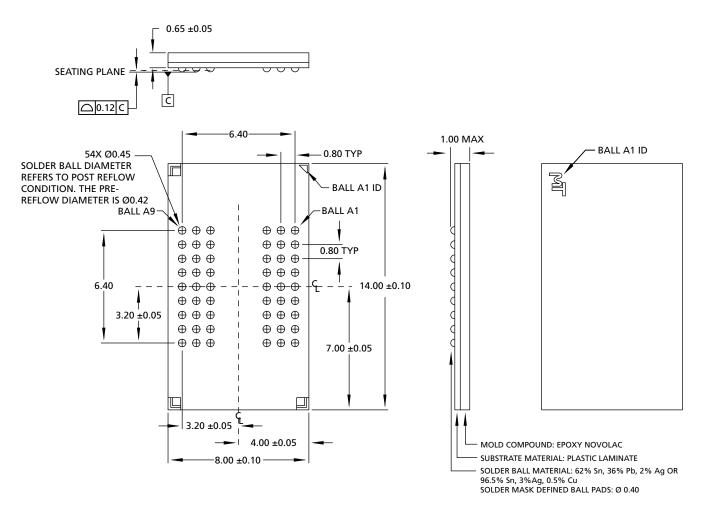Figure 9: 54-Ball VFBGA "BG/FG" (8mm x 14mm) (x16)





Notes: 1. All dimensions are in millimeters.

- 2. Recommended pad size for PCB is 0.4mm ±0.065mm.
- 3. Solder ball material: SAC305 (96.5% Sn, 3% Ag, 0.5% Cu) or 62% Sn, 2% Ag, 36% Pb.
- 4. Topside part-marking decoder is available at www.micron.com/decoder.



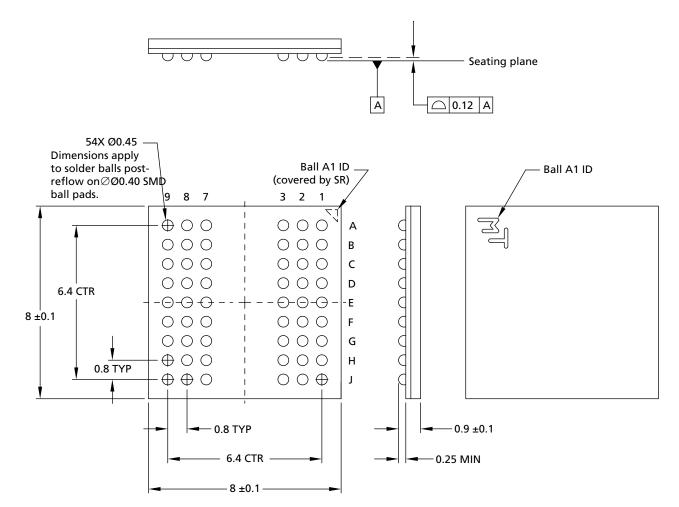Figure 10: 54-Ball VFBGA "B4/F4" (8mm x 8mm) (x16)





- 2. Recommended pad size for PCB is 0.4mm ±0.065mm.
- 3. Solder ball material: SAC305 (96.5% Sn, 3% Ag, 0.5% Cu) or 62% Sn, 2% Ag, 36% Pb.
- 4. Topside part-marking decoder is available at www.micron.com/decoder.



Temperature and Thermal Impedance

It is imperative that the SDRAM device's temperature specifications, shown in Table 5 (page 20), be maintained to ensure the junction temperature is in the proper operating range to meet data sheet specifications. An important step in maintaining the proper junction temperature is using the device's thermal impedances correctly. The thermal impedances are listed in Table 6 (page 21) for the applicable die revision and packages being made available. These thermal impedance values vary according to the density, package, and particular design used for each device.

Incorrectly using thermal impedances can produce significant errors. Read Micron technical note TN-00-08, "Thermal Applications" prior to using the thermal impedances listed in Table 6 (page 21). To ensure the compatibility of current and future designs, contact Micron Applications Engineering to confirm thermal impedance values.

The SDRAM device's safe junction temperature range can be maintained when the $T_{\rm C}$ specification is not exceeded. In applications where the device's ambient temperature is too high, use of forced air and/or heat sinks may be required to satisfy the case temperature specifications.

Parameter	Symbol	Min	Мах	Unit	Notes	
Operating case temperature Commercial		T _C	0	80	°C	1, 2, 3, 4
	Industrial		-40	90		
	Automotive		-40	105		
Junction temperature	Commercial	Тյ	0	85	°C	3
	Industrial		-40	95		
	Automotive		-40	110		
Ambient temperature	Commercial	T _A	0	70	°C	3, 5
	Industrial		-40	85		
	Automotive	1	-40	105	1	
Peak reflow temperature		T _{PEAK}	-	260	°C	

Table 5: Temperature Limits

Notes: 1. MAX operating case temperature, T_C, is measured in the center of the package on the top side of the device, as shown in Figure 11 (page 22), Figure 12 (page 22), and Figure 13 (page 23).

2. Device functionality is not guaranteed if the device exceeds maximum $T_{\rm C}$ during operation.

- 3. All temperature specifications must be satisfied.
- 4. The case temperature should be measured by gluing a thermocouple to the top-center of the component. This should be done with a 1mm bead of conductive epoxy, as defined by the JEDEC EIA/JESD51 standards. Take care to ensure that the thermocouple bead is touching the case.

5. Operating ambient temperature surrounding the package.



Table 6: Thermal Impedance Simulated Values

Die Revision	Package	Substrate	Θ JA (°C/W) Airflow = 0m/s	Θ JA (°C/W) Airflow = 1m/s	Θ JA (°C/W) Airflow = 2m/s	Θ JB (°C/W)	Θ JC (°C/W)
D	54-pin TSOP (TG, P)	Low Con- ductivity	81	63.8	57.6	45.3	10.3
		High Con- ductivity	55	47.3	44.5	39.1	
	54-ball VFBGA (BG, FG)	Low Con- ductivity	64.9	50.8	44.8	31.4	3.2
		High Con- ductivity	51.5	41.6	38.1	31.4	
	60-ball FBGA (BB, FB)	Low Con- ductivity	67	51.2	47.8	19.7	6.7
		High Con- ductivity	40.9	35.1	32.2	18.6	
G	54-pin TSOP (TG, P)	Low Con- ductivity	122.3	105.6	98.1	89.5	20.7
		High Con- ductivity	101.9	93.5	88.8	87.6	
	54-ball VFBGA (B4, F4)	Low Con- ductivity	96.9	81.9	81.9	69.5	11.5
		High Con- ductivity	74.0	66.3	62.7	60.7	
	60-ball FBGA (BB, FB)	Low Con- ductivity	68.8	55.9	51.1	42.1	10.9
		High Con- ductivity	47.9	42.0	39.9	34.9	

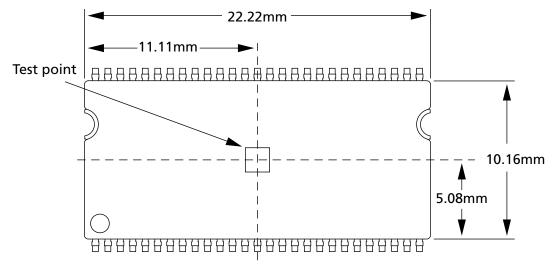
Notes: 1. For designs expected to last beyond the die revision listed, contact Micron Applications Engineering to confirm thermal impedance values.

2. Thermal resistance data is sampled from multiple lots, and the values should be viewed as typical.

3. These are estimates; actual results may vary.

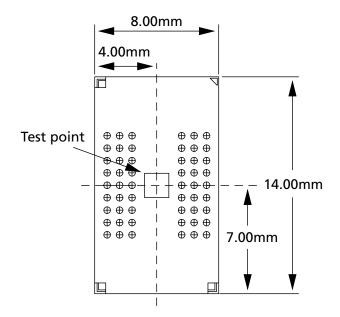


Figure 11: Example: Temperature Test Point Location, 54-Pin TSOP (Top View)




Note: 1. Package may or may not be assembled with a location notch.

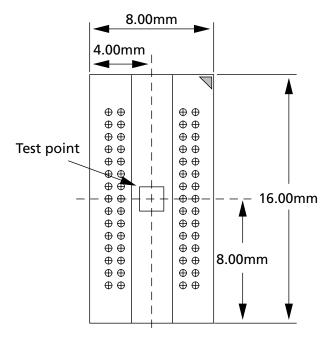Figure 12: Example: Temperature Test Point Location, 54-Ball VFBGA (Top View)











Electrical Specifications

Stresses greater than those listed may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

Table 7: Absolute Maximum Ratings

Voltage/Temperature	Symbol	Min	Мах	Unit	Notes
Voltage on V_{DD}/V_{DDQ} supply relative to V_{SS}	V _{DD} /V _{DDQ}	-1	4.6	V	1
Voltage on inputs, NC, or I/O balls relative to V _{SS}	V _{IN}	-1	4.6		
Storage temperature (plastic)	T _{STG}	-55	150	°C	
Power dissipation	-	_	1	W	

Note: 1. V_{DD} and V_{DDQ} must be within 300mV of each other at all times. V_{DDQ} must not exceed V_{DD} .

Table 8: DC Electrical Characteristics and Operating Conditions

Parameter/Condition		Symbol	Min	Max	Unit	Notes
Supply voltage		V _{DD} , V _{DDQ}	3	3.6	V	
Input high voltage: Logic 1; All inputs		V _{IH}	2	V _{DD} + 0.3	V	4
Input low voltage: Logic 0; All inputs		V _{IL}	-0.3	0.8	V	4
Output high voltage: I _{OUT} = –4mA		V _{OH}	2.4	-	V	
Output low voltage: I _{OUT} = 4mA		V _{OL}	_	0.4	V	
Input leakage current: Any input $0V \le V_{IN} \le V_{DD}$ (All other balls not under test = 0V)		ΙL	-5	5	μA	
Output leakage current: DQ are disabled; $0V \le V_{OUT} \le V_{DDQ}$		I _{OZ}	-5	5	μA	
Operating temperature:	Commercial	T _A	0	70	°C	
	Industrial	T _A	-40	85	°C	
	Automotive	T _A	-40	105	°C	

Notes 1–3 apply to all parameters and conditions; $V_{DD}/V_{DDQ} = 3.3V \pm 0.3V$

Notes: 1. All voltages referenced to V_{SS}.

- 2. The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range is ensured; ($0^{\circ}C \le T_A \le +70^{\circ}C$ (commercial), $-40^{\circ}C \le T_A \le +85^{\circ}C$ (industrial), and $-40^{\circ}C \le T_A \le +105^{\circ}C$ (automotive)).
- 3. An initial pause of 100µs is required after power-up, followed by two AUTO REFRESH commands, before proper device operation is ensured. (V_{DD} and V_{DDQ} must be powered up simultaneously. V_{SS} and V_{SSQ} must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the ^tREF refresh requirement is exceeded.
- V_{IH} overshoot: V_{IH,max} = V_{DDQ} + 2V for a pulse width ≤ 3ns, and the pulse width cannot be greater than one-third of the cycle rate. V_{IL} undershoot: V_{IL,min} = -2V for a pulse width ≤3ns.



Table 9: Capacitance

Note 1 applies to all parameters and conditions

Package	Parameter	Symbol	Min	Max	Unit	Notes
TSOP package	Input capacitance: CLK	C _{L1}	2.5	3.5	pF	2
	Input capacitance: All other input-only balls	C _{L2}	2.5	3.8	pF	3
	Input/output capacitance: DQ	C _{L0}	4	6	pF	4
FBGA package	Input capacitance: CLK	C _{L1}	1.5	3.5	pF	5
	Input capacitance: All other input-only balls	C _{L2}	1.5	3.8	pF	6
	Input/output capacitance: DQ	C _{L0}	3	6	pF	7

Notes: 1. This parameter is sampled. V_{DD} , $V_{DDQ} = 3.3V$; f = 1 MHz, $T_A = 25^{\circ}$ C; pin under test biased at 1.4V.

2. PC100 specifies a maximum of 4pF.

3. PC100 specifies a maximum of 5pF.

4. PC100 specifies a maximum of 6.5pF.

5. PC133 specifies a minimum of 2.5pF.

6. PC133 specifies a minimum of 2.5pF.

7. PC133 specifies a minimum of 3.0pF.



Electrical Specifications – I_{DD} Parameters

Table 10: I_{DD} Specifications and Conditions (x4, x8, x16) Revision D Only

Notes 1–5 apply to all parameters and conditions; $V_{DD}/V_{DDO} = 3.3V \pm 0.3V$

		Мах					
Parameter/Condition		Symbol	-6A	-7E	-75	Unit	Notes
Operating current: Active mode; Burst = 2; READ or WRITE; ^t RC = ^t RC (MIN)			135	135	125	mA	6, 9, 10, 13
Standby current: Power-down mode; All banks i	idle; CKE = LOW	I _{DD2}	2	2	2	mA	13
Standby current: Active mode; CKE = HIGH; CS# = HIGH; All banks active after ^t RCD met; No accesses in progress		I _{DD3}	40	40	40	mA	6, 8, 10, 13
Operating current: Burst mode; Page burst; READ or WRITE; All banks active		I _{DD4}	135	135	135	mA	6, 9, 10, 13
Auto refresh current: CKE = HIGH; CS# = HIGH	^t RFC = ^t RFC (MIN)	I _{DD5}	285	285	270	mA	6, 8, 9, 10, 13,
	^t RFC = 7.813µs	I _{DD6}	3.5	3.5	3.5	mA	14
	^t RFC = 1.953µs (AAT)	I _{DD6}	8	8	8	mA	
Self refresh current: CKE \leq 0.2V	Standard	I _{DD7}	2.5	2.5	2.5	mA	
(Not supported for AAT)	Low power (L)	I _{DD7}	-	1.5	1.5	mA	7

Table 11: I_{DD} Specifications and Conditions (x4, x8, x16) Revision G Only

Notes 1–5 apply to all parameters and conditions; $V_{DD}/V_{DDO} = 3.3V \pm 0.3V$

				Max			
Parameter/Condition			-6A	-7E	-75	Unit	Notes
Operating current: Active mode; Burst = 2; READ or WRITE; ^t RC = ^t RC (MIN)			100	100	125	mA	6, 9, 10, 13
Standby current: Power-down mode; All banks i	dle; CKE = LOW	I _{DD2}	2.5	2.5	2	mA	13
Standby current: Active mode; CKE = HIGH; CS# = HIGH; All banks active after ^t RCD met; No accesses in progress			35	35	40	mA	6, 8, 10, 13
Operating current: Burst mode; Page burst; READ or WRITE; All banks active		I _{DD4}	100	100	135	mA	6, 9, 10, 13
Auto refresh current: CKE = HIGH; CS# = HIGH	^t RFC = ^t RFC (MIN)	I _{DD5}	150	150	270	mA	6, 8, 9, 10, 13,
	^t RFC = 7.813µs	I _{DD6}	4	4	3.5	mA	14
	^t RFC = 1.953µs (AAT)	I _{DD6}	8	8	8	mA	
Self refresh current: CKE \leq 0.2V	Standard	I _{DD7}	3	3	2.5	mA	15
	Low power (L)	I _{DD7}	1.5	1.5	1.5	mA	7, 15

Notes: 1. All voltages referenced to V_{SS}.

2. The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range is ensured; $(0^{\circ}C \le T_A \le +70^{\circ}C \text{ (commercial)}, -40^{\circ}C \le T_A \le +85^{\circ}C \text{ (industrial)}, \text{ and } -40^{\circ}C \le T_A \le +105^{\circ}C \text{ (automotive)}).$



256Mb: x4, x8, x16 Automotive SDRAM Electrical Specifications – I_{DD} Parameters

- 3. An initial pause of 100µs is required after power-up, followed by two AUTO REFRESH commands, before proper device operation is ensured. (V_{DD} and V_{DDQ} must be powered up simultaneously. V_{SS} and V_{SSQ} must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the ^tREF refresh requirement is exceeded.
- 4. AC operating and I_{DD} test conditions have $V_{IL} = 0V$ and $V_{IH} = 3.0V$ using a measurement reference level of 1.5V. If the input transition time is longer than 1ns, then the timing is measured from $V_{IL, max}$ and $V_{IH,min}$ and no longer from the 1.5V midpoint. CLK should always be 1.5V referenced to crossover. Refer to Micron technical note TN-48-09.
- 5. I_{DD} specifications are tested after the device is properly initialized.
- 6. I_{DD} is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 7. Enables on-chip refresh and address counters.
- 8. Other input signals are allowed to transition no more than once every two clocks and are otherwise at valid V_{IH} or V_{IL} levels.
- 9. The I_{DD} current will increase or decrease proportionally according to the amount of frequency alteration for the test condition.
- 10. Address transitions average one transition every two clocks.
- 11. PC100 specifies a maximum of 4pF.
- 12. PC100 specifies a maximum of 5pF.
- 13. For -75, CL = 3 and tCK = 7.5ns; for -7E, CL = 2 and tCK = 7.5ns.
- 14. CKE is HIGH during REFRESH command period ^tRFC (MIN) else CKE is LOW. The I_{DD6} limit is actually a nominal value and does not result in a fail value.
- 15. Not supported for AAT.



Electrical Specifications – AC Operating Conditions

Table 12: Electrical Characteristics and Recommended AC Operating Conditions

Notes 1–5 apply to all parameters and conditions

			-6	A	-7	-7E -75					
Parameter		Symbol	Min	Max	Min	Мах	Min	Max	Unit	Notes	
Access time from CLK	CL = 3	tAC(3)	_	5.4	_	5.4	-	5.4	ns	7	
(positive edge)	CL = 2	^t AC(2)	_	7.5 ⁶	_	5.4	-	6	ns	7	
	CL = 1	^t AC(1)	_	17 ⁶	_	_	_	_	ns	7	
Address hold time		^t AH	0.8	_	0.8	_	0.8	_	ns		
Address setup time		^t AS	1.5	_	1.5	_	1.5	_	ns		
CLK high-level width		^t CH	2.5	_	2.5	_	2.5	_	ns		
CLK low-level width		^t CL	2.5	_	2.5	_	2.5	_	ns		
Clock cycle time	CL = 3	^t CK(3)	6	_	7	_	7.5	_	ns	8	
	CL = 2	^t CK(2)	10 ⁶	_	7.5	_	10	_	ns	8	
	CL = 1	^t CK(1)	20 ⁶	_	_	-	-	_	ns	8	
CKE hold time		^t CKH	0.8	_	0.8	_	0.8	_	ns		
CKE setup time		^t CKS	1.5	_	1.5	_	1.5	_	ns		
CS#, RAS#, CAS#, WE#, DQM ho	old time	^t CMH	0.8	_	0.8	_	0.8	_	ns		
CS#, RAS#, CAS#, WE#, DQM se	tup time	^t CMS	1.5	_	1.5	-	1.5	_	ns		
Data-in hold time		^t DH	0.8	_	0.8	-	0.8	_	ns		
Data-in setup time		^t DS	1.5	_	1.5	-	1.5	_	ns		
Data-out High-Z time	CL = 3	^t HZ(3)	_	5.4	_	5.4	-	5.4	ns	9	
	CL = 2	^t HZ(2)	_	7.5 ⁶	_	5.4	-	6	ns	9	
	CL = 1	^t HZ(1)	_	17 ⁶	_	_	_	_	ns	9	
Data-out Low-Z time		^t LZ	1	_	1	_	1	_	ns		
Data-out hold time (load)		tOH	3	_	3	_	3	_	ns		
Data-out hold time (no load)		^t OH <i>n</i>	1.8	_	1.8	_	1.8	_	ns	10	
ACTIVE-to-PRECHARGE comma	nd	^t RAS	42	120,000	37	120,000	44	120,000	ns		
ACTIVE-to-ACTIVE command pe	eriod	^t RC	60	_	60	_	66	_	ns	11	
ACTIVE-to-READ or WRITE dela	у	^t RCD	18	_	15	_	20	_	ns		
Refresh period (8192 rows)		tREF	_	64	_	64	-	64	ms		
Refresh period – automotive (8	192 rows)	^t REF _{AT}	_	16	_	16	-	16	ms		
AUTO REFRESH period		^t RFC	60	_	66	-	66	_	ns		
PRECHARGE command period		^t RP	18	_	15	-	20	_	ns		
ACTIVE bank <i>a</i> to ACTIVE bank mand	b com-	^t RRD	12	-	14	-	15	-	ns		
Transition time		^t Τ	0.3	1.2	0.3	1.2	0.3	1.2	ns	12	
WRITE recovery time		tWR	1 CLK + 6ns	-	1 CLK + 7ns	-	1 CLK + 7.5ns	-	ns	13	
			12	_	14	_	15	_	ns	14	



Table 12: Electrical Characteristics and Recommended AC Operating Conditions (Continued)

Notes 1–5 apply to all parameters and conditions

		-6A		-7E		-75			
Parameter	Symbol	Min	Мах	Min	Мах	Min	Мах	Unit	Notes
Exit SELF REFRESH-to-ACTIVE command	^t XSR	67	-	67	_	75	_	ns	15

Table 13: AC Functional Characteristics

Notes 2-5 apply to all parameters and conditions

Parameter	Symbol	-6A	-7E	-75	Unit	Notes	
Last data-in to burst STOP command		^t BDL	1	1	1	^t CK	16
READ/WRITE command to READ/WRITE comma	nd	^t CCD	1	1	1	^t CK	16
Last data-in to new READ/WRITE command		^t CDL	1	1	1	^t CK	16
CKE to clock disable or power-down entry mod	e	^t CKED	1	1	1	^t CK	17
Data-in to ACTIVE command		^t DAL	5	4	5	^t CK	18, 19
Data-in to PRECHARGE command			2	2	2	^t CK	19, 20
DQM to input data delay			0	0	0	^t CK	16
DQM to data mask during WRITEs			0	0	0	^t CK	16
DQM to data High-Z during READs		^t DQZ	2	2	2	^t CK	16
WRITE command to input data delay		^t DWD	0	0	0	^t CK	16
LOAD MODE REGISTER command to ACTIVE or	REFRESH command	^t MRD	2	2	2	^t CK	21
CKE to clock enable or power-down exit setup	mode	^t PED	1	1	1	^t CK	17
Last data-in to PRECHARGE command		^t RDL	2	2	2	^t CK	19, 20
Data-out High-Z from PRECHARGE command	CL = 3	^t ROH(3)	3	3	3	^t CK	16
	CL = 2	^t ROH(2)	2	2	2	^t CK	16
	CL = 1	^t ROH(1)	1	-	-	^t CK	16

Notes: 1. Minimum specifications are used only to indicate the cycle time at which proper operation over the full temperature range is ensured: $0^{\circ}C \le T_{A} \le +70^{\circ}C$ (commercial)

 $-40^{\circ}C \le T_A \le +85^{\circ}C$ (industrial)

 $-40^{\circ}C \le T_A \le +105^{\circ}C$ (automotive)

- 2. An initial pause of 100µs is required after power-up, followed by two AUTO REFRESH commands, before proper device operation is ensured. (V_{DD} and V_{DDQ} must be powered up simultaneously. V_{SS} and V_{SSQ} must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the ^tREF refresh requirement is exceeded.
- 3. In addition to meeting the transition rate specification, the clock and CKE must transit between V_{IH} and V_{IL} (or between V_{IL} and V_{IH}) in a monotonic manner.
- 4. Outputs measured at 1.5V with equivalent load:



Q -

5. AC operating and I_{DD} test conditions have $V_{IL} = 0V$ and $V_{IH} = 3.0V$ using a measurement reference level of 1.5V. If the input transition time is longer than 1ns, then the timing is



256Mb: x4, x8, x16 Automotive SDRAM Electrical Specifications – AC Operating Conditions

measured from $V_{IL,max}$ and $V_{IH,min}$ and no longer from the 1.5V midpoint. CLK should always be 1.5V referenced to crossover. Refer to Micron technical note TN-48-09.

- 6. Not applicable for Revision D.
- 7. ^tAC for -75/-7E at CL = 3 with no load is 4.6ns and is guaranteed by design.
- 8. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including ^tWR, and PRECHARGE commands). CKE may be used to reduce the data rate.
- ^tHZ defines the time at which the output achieves the open circuit condition; it is not a reference to V_{OH} or V_{OL}. The last valid data element will meet ^tOH before going High-Z.
- 10. Parameter guaranteed by design.
- 11. DRAM devices should be evenly addressed when being accessed. Disproportionate accesses to a particular row address may result in reduction of the product lifetime.
- 12. AC characteristics assume ${}^{t}T = 1ns$.
- 13. Auto precharge mode only. The precharge timing budget (^tRP) begins at 6ns for -6A, 7ns for -7E, and 7.5ns for -75 after the first clock delay, after the last WRITE is executed.
- 14. Precharge mode only.
- 15. CLK must be toggled a minimum of two times during this period.
- 16. Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- 17. Timing is specified by ^tCKS. Clock(s) specified as a reference only at minimum cycle rate.
- 18. Timing is specified by ^tWR plus ^tRP. Clock(s) specified as a reference only at minimum cycle rate.
- 19. Based on ${}^{t}CK = 7.5$ ns for -75 and -7E, 6ns for -6A.
- 20. Timing is specified by ^tWR.
- 21. JEDEC and PC100 specify three clocks.



Functional Description

In general, 256Mb SDRAM devices (16 Meg x 4 x 4 banks, 8 Meg x 8 x 4 banks, and 4 Meg x 16 x 4 banks) are quad-bank DRAM that operate at 3.3V and include a synchronous interface. All signals are registered on the positive edge of the clock signal, CLK. Each of the x4's 67,108,864-bit banks is organized as 8192 rows by 2048 columns by 4 bits. Each of the x8's 67,108,864-bit banks is organized as 8192 rows by 1024 columns by 8 bits. Each of the x16's 67,108,864-bit banks is organized as 8192 rows by 512 columns by 16 bits.

Read and write accesses to the SDRAM are burst-oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0 and BA1 select the bank, A[12:0] select the row). The address bits (x4: A[9:0], A11; x8: A[9:0]; x16: A[8:0]) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions, and device operation.



Commands

The following table provides a quick reference of available commands, followed by a written description of each command. Additional Truth Tables (Table 15 (page 38), Table 16 (page 40), and Table 17 (page 42)) provide current state/next state information.

Table 14: Truth Table – Commands and DQM Operation

Note 1 applies to all parameters and conditions

Name (Function)	CS#	RAS#	CAS#	WE#	DQM	ADDR	DQ	Notes
COMMAND INHIBIT (NOP)	Н	Х	Х	Х	Х	Х	х	
NO OPERATION (NOP)	L	Н	Н	н	Х	Х	х	
ACTIVE (select bank and activate row)	L	L	Н	н	Х	Bank/row	х	2
READ (select bank and column, and start READ burst)	L	Н	L	н	L/H	Bank/col	х	3
WRITE (select bank and column, and start WRITE burst)	L	Н	L	L	L/H	Bank/col	Valid	3
BURST TERMINATE	L	Н	Н	L	Х	Х	Active	4
PRECHARGE (Deactivate row in bank or banks)	L	L	Н	L	Х	Code	х	5
AUTO REFRESH or SELF REFRESH (enter self refresh mode)	L	L	L	н	Х	Х	х	6, 7
LOAD MODE REGISTER	L	L	L	L	Х	Op-code	х	8
Write enable/output enable	X	Х	Х	Х	L	Х	Active	9
Write inhibit/output High-Z	X	Х	Х	Х	Н	Х	High-Z	9

Notes: 1. CKE is HIGH for all commands shown except SELF REFRESH.

- 2. A[0:n] provide row address (where An is the most significant address bit), BA0 and BA1 determine which bank is made active.
- A[0:i] provide column address (where i = the most significant column address for a given device configuration). A10 HIGH enables the auto precharge feature (nonpersistent), while A10 LOW disables the auto precharge feature. BA0 and BA1 determine which bank is being read from or written to.
- 4. The purpose of the BURST TERMINATE command is to stop a data burst, thus the command could coincide with data on the bus. However, the DQ column reads a "Don't Care" state to illustrate that the BURST TERMINATE command can occur when there is no data present.
- 5. A10 LOW: BA0, BA1 determine the bank being precharged. A10 HIGH: all banks precharged and BA0, BA1 are "Don't Care."
- 6. This command is AUTO REFRESH if CKE is HIGH, SELF REFRESH if CKE is LOW.
- 7. Internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 8. A[11:0] define the op-code written to the mode register.
- 9. Activates or deactivates the DQ during WRITEs (zero-clock delay) and READs (two-clock delay).

COMMAND INHIBIT

The COMMAND INHIBIT function prevents new commands from being executed by the device, regardless of whether the CLK signal is enabled. The device is effectively deselected. Operations already in progress are not affected.



NO OPERATION (NOP)

The NO OPERATION (NOP) command is used to perform a NOP to the selected device (CS# is LOW). This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.


LOAD MODE REGISTER (LMR)

The mode registers are loaded via inputs A[n:0] (where An is the most significant address term), BA0, and BA1(see Mode Register (page 45)). The LOAD MODE REGISTER command can only be issued when all banks are idle and a subsequent executable command cannot be issued until ^tMRD is met.

ACTIVE

The ACTIVE command is used to activate a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided selects the row. This row remains active for accesses until a PRECHARGE command is issued to that bank. A PRECHARGE command must be issued before opening a different row in the same bank.

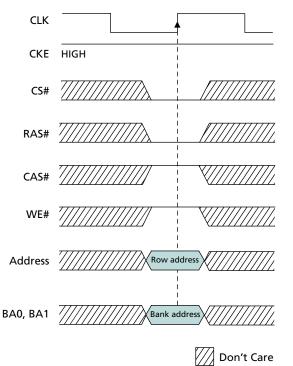Figure 14: ACTIVE Command






READ

The READ command is used to initiate a burst read access to an active row. The values on the BA0 and BA1 inputs select the bank; the address provided selects the starting column location. The value on input A10 determines whether auto precharge is used. If auto precharge is selected, the row being accessed is precharged at the end of the READ burst; if auto precharge is not selected, the row remains open for subsequent accesses. Read data appears on the DQ subject to the logic level on the DQM inputs two clocks earlier. If a given DQM signal was registered HIGH, the corresponding DQ will be High-Z two clocks later; if the DQM signal was registered LOW, the DQ will provide valid data.

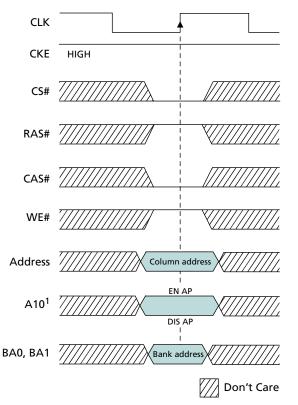Figure 15: READ Command




Note: 1. EN AP = enable auto precharge, DIS AP = disable auto precharge.



WRITE

The WRITE command is used to initiate a burst write access to an active row. The values on the BA0 and BA1 inputs select the bank; the address provided selects the starting column location. The value on input A10 determines whether auto precharge is used. If auto precharge is selected, the row being accessed is precharged at the end of the write burst; if auto precharge is not selected, the row remains open for subsequent accesses. Input data appearing on the DQ is written to the memory array, subject to the DQM input logic level appearing coincident with the data. If a given DQM signal is registered LOW, the corresponding data is written to memory; if the DQM signal is registered HIGH, the corresponding data inputs are ignored and a WRITE is not executed to that byte/column location.

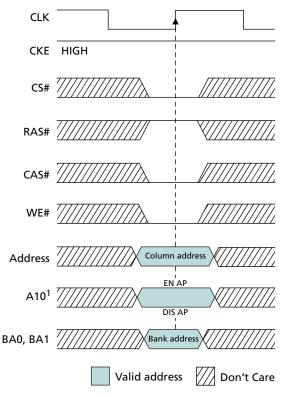Figure 16: WRITE Command




Note: 1. EN AP = enable auto precharge, DIS AP = disable auto precharge.



PRECHARGE

The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access a specified time (^tRP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is precharged, inputs BA0 and BA1 select the bank. Otherwise BA0 and BA1 are treated as "Don't Care." After a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands are issued to that bank.

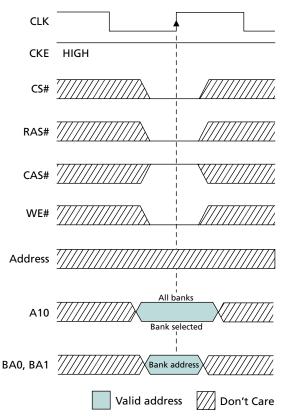Figure 17: PRECHARGE Command



BURST TERMINATE

The BURST TERMINATE command is used to truncate either fixed-length or continuous page bursts. The most recently registered READ or WRITE command prior to the BURST TERMINATE command is truncated.



AUTO REFRESH

AUTO REFRESH is used during normal operation of the SDRAM and is analogous to CAS#-BEFORE-RAS# (CBR) refresh in conventional DRAMs. This command is nonpersistent, so it must be issued each time a refresh is required. All active banks must be precharged prior to issuing an AUTO REFRESH command. The AUTO REFRESH command should not be issued until the minimum ^tRP has been met after the PRECHARGE command, as shown in Bank/Row Activation (page 50).

The addressing is generated by the internal refresh controller. This makes the address bits a "Don't Care" during an AUTO REFRESH command. Regardless of device width, the 256Mb SDRAM requires 8192 AUTO REFRESH cycles every 64ms (commercial and industrial) or 16ms (automotive). Providing a distributed AUTO REFRESH command every 7.813µs (commercial and industrial) or 1.953µs (automotive) will meet the refresh requirement and ensure that each row is refreshed. Alternatively, 8192 AUTO REFRESH commands can be issued in a burst at the minimum cycle rate (^tRFC), once every 64ms (commercial and industrial) or 16ms (automotive).

SELF REFRESH

The SELF REFRESH command can be used to retain data in the SDRAM, even if the rest of the system is powered-down. When in the self refresh mode, the SDRAM retains data without external clocking.

The SELF REFRESH command is initiated like an AUTO REFRESH command except CKE is disabled (LOW). After the SELF REFRESH command is registered, all the inputs to the SDRAM become a "Don't Care" with the exception of CKE, which must remain LOW.

After self refresh mode is engaged, the SDRAM provides its own internal clocking, causing it to perform its own AUTO REFRESH cycles. The SDRAM must remain in self refresh mode for a minimum period equal to ^tRAS and may remain in self refresh mode for an indefinite period beyond that.

The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) prior to CKE going back HIGH. After CKE is HIGH, the SDRAM must have NOP commands issued (a minimum of two clocks) for ^tXSR because time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands must be issued every 7.81µs or less, as both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.

Self refresh is not supported on automotive temperature (AAT) devices.



Truth Tables

Table 15: Truth Table – Current State Bank n, Command to Bank n

Current State	CS#	RAS#	CAS#	WE#	Command/Action	Notes
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/continue previous operation)	
			NO OPERATION (NOP/continue previous operation)			
Idle	L	L	н	н	ACTIVE (select and activate row)	
	L	L	L	н	AUTO REFRESH	
	L	L	L	L	LOAD MODE REGISTER	7
	L	L	Н	L	PRECHARGE	8
Row active	L	н	L	н	READ (select column and start READ burst)	
	L	н	L	L	WRITE (select column and start WRITE burst)	9
	L	L	Н	L	PRECHARGE (deactivate row in bank or banks)	10
Read	L	н	L	н	READ (select column and start new READ burst)	
(auto precharge disabled)	L	н	L	L	WRITE (select column and start WRITE burst)	9
	L	L	Н	L	PRECHARGE (truncate READ burst, start PRECHARGE)	10
	L	н	Н	L	BURST TERMINATE	11
Write	L	н	L	н	READ (select column and start READ burst)	9
(auto precharge disabled)	L	н	L	L	WRITE (select column and start new WRITE burst)	9
	L	L	Н	L	PRECHARGE (truncate WRITE burst, start PRECHARGE)	10
	L	н	Н	L	BURST TERMINATE	11

Notes 1–6 apply to all parameters and conditions

Notes: 1. This table applies when CKE_{n-1} was HIGH and CKE_n is HIGH (see Table 17 (page 42)) and after ^tXSR has been met (if the previous state was self refresh).

- 2. This table is bank-specific, except where noted (for example, the current state is for a specific bank and the commands shown can be issued to that bank when in that state). Exceptions are covered below.
- 3. Current state definitions:

Idle: The bank has been precharged, and ^tRP has been met.

Row active: A row in the bank has been activated, and ^tRCD has been met. No data bursts/accesses and no register accesses are in progress.

Read: A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.

Write: A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.

4. The following states must not be interrupted by a command issued to the same bank. COMMAND INHIBIT or NOP commands, or supported commands to the other bank should be issued on any clock edge occurring during these states. Supported commands to any other bank are determined by the bank's current state and the conditions described in this and the following table.

Precharging: Starts with registration of a PRECHARGE command and ends when ^tRP is met. After ^tRP is met, the bank will be in the idle state.

Row activating: Starts with registration of an ACTIVE command and ends when ^tRCD is met. After ^tRCD is met, the bank will be in the row active state.



Read with auto precharge enabled: Starts with registration of a READ command with auto precharge enabled and ends when ^tRP has been met. After ^tRP is met, the bank will be in the idle state.

Write with auto precharge enabled: Starts with registration of a WRITE command with auto precharge enabled and ends when ^tRP has been met. After ^tRP is met, the bank will be in the idle state.

 The following states must not be interrupted by any executable command; COMMAND INHIBIT or NOP commands must be applied on each positive clock edge during these states.

Refreshing: Starts with registration of an AUTO REFRESH command and ends when ^tRFC is met. After ^tRFC is met, the device will be in the all banks idle state.

Accessing mode register: Starts with registration of a LOAD MODE REGISTER command and ends when ^tMRD has been met. After ^tMRD is met, the device will be in the all banks idle state.

Precharging all: Starts with registration of a PRECHARGE ALL command and ends when ^tRP is met. After ^tRP is met, all banks will be in the idle state.

- 6. All states and sequences not shown are illegal or reserved.
- 7. Not bank specific; requires that all banks are idle.
- 8. Does not affect the state of the bank and acts as a NOP to that bank.
- 9. READs or WRITEs listed in the Command/Action column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 10. May or may not be bank specific; if all banks need to be precharged, each must be in a valid state for precharging.
- 11. Not bank-specific; BURST TERMINATE affects the most recent READ or WRITE burst, regardless of bank.



Table 16: Truth Table – Current State Bank n, Command to Bank m

Notes 1–6 apply to all parameters and conditions

Current State		RAS#	CAS#	WE#	Command/Action	
Any	н	Х	Х	Х	COMMAND INHIBIT (NOP/continue previous operation)	
	L	н	н	Н	NO OPERATION (NOP/continue previous operation)	
Idle	Х	Х	Х	Х	Any command otherwise supported for bank m	
Row activating, active, or	L	L	Н	н	ACTIVE (select and activate row)	
precharging	L	н	L	Н	READ (select column and start READ burst)	
	L	н	L	L	WRITE (select column and start WRITE burst)	7
	L	L	н	L	PRECHARGE	
Read	L	L	н	Н	ACTIVE (select and activate row)	
(auto precharge disabled)	L	н	L	н	READ (select column and start new READ burst)	
	L	н	L	L	WRITE (select column and start WRITE burst)	7, 11
	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (select and activate row)	
(auto precharge disabled)	L	н	L	н	READ (select column and start READ burst)	7, 12
	L	н	L	L	WRITE (select column and start new WRITE burst)	7, 13
	L	L	н	L	PRECHARGE	9
Read L		L	н	н	ACTIVE (select and activate row)	
(with auto precharge)	L	н	L	Н	READ (select column and start new READ burst)	7, 8, 14
	L	н	L	L	WRITE (select column and start WRITE burst)	7, 8, 15
	L	L	Н	L	PRECHARGE	9
Write	L	L	н	н	ACTIVE (select and activate row)	
(with auto precharge)	L	н	L	н	READ (select column and start READ burst)	7, 8, 16
	L	н	L	L	WRITE (select column and start new WRITE burst)	7, 8, 17
	L	L	Н	L	PRECHARGE	9

Notes: 1. This table applies when CKE_{n-1} was HIGH and CKE_n is HIGH (Table 17 (page 42)), and after ^tXSR has been met (if the previous state was self refresh).

- 2. This table describes alternate bank operation, except where noted; for example, the current state is for bank *n* and the commands shown can be issued to bank *m*, assuming that bank *m* is in such a state that the given command is supported. Exceptions are covered below.
- 3. Current state definitions:

Idle: The bank has been precharged, and ^tRP has been met.

Row active: A row in the bank has been activated, and ^tRCD has been met. No data bursts/accesses and no register accesses are in progress.

Read: A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.

Write: A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.



Read with auto precharge enabled: Starts with registration of a READ command with auto precharge enabled and ends when ^tRP has been met. After ^tRP is met, the bank will be in the idle state.

Write with auto precharge enabled: Starts with registration of a WRITE command with auto precharge enabled and ends when ^tRP has been met. After ^tRP is met, the bank will be in the idle state.

- 4. AUTO REFRESH, SELF REFRESH, and LOAD MODE REGISTER commands can only be issued when all banks are idle.
- 5. A BURST TERMINATE command cannot be issued to another bank; it applies to the bank represented by the current state only.
- 6. All states and sequences not shown are illegal or reserved.
- 7. READs or WRITEs to bank *m* listed in the Command/Action column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 8. Concurrent auto precharge: Bank *n* will initiate the auto precharge command when its burst has been interrupted by bank *m* burst.
- 9. The burst in bank *n* continues as initiated.
- 10. For a READ without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CAS latency (CL) later.
- 11. For a READ without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered. DQM should be used one clock prior to the WRITE command to prevent bus contention.
- 12. For a WRITE without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered, with the data-out appearing CL later. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 13. For a WRITE without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 14. For a READ with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CL later. The PRE-CHARGE to bank *n* will begin when the READ to bank *m* is registered.
- 15. For a READ with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The PRECHARGE to bank *n* will begin when the WRITE to bank *m* is registered.
- 16. For a WRITE with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered, with the data-out appearing CL later. The PRECHARGE to bank *n* will begin after ^tWR is met, where ^tWR begins when the READ to bank *m* is registered. The last valid WRITE bank *n* will be data-in registered one clock prior to the READ to bank *m*.
- 17. For a WRITE with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank m will interrupt the WRITE on bank n when registered. The PRECHARGE to bank n will begin after ^tWR is met, where ^tWR begins when the WRITE to bank m is registered. The last valid WRITE to bank n will be data registered one clock to the WRITE to bank m.



Table 17: Truth Table – CKE

Notes 1–4 apply to all parameters and conditions

Current State	CKE _{n-1}	CKEn	Command _n	Action _n	Notes
Power-down	L	L	Х	Maintain power-down	
Self refresh			Х	Maintain self refresh	
Clock suspend			Х	Maintain clock suspend	
Power-down	L	Н	COMMAND INHIBIT or NOP	Exit power-down	5
Self refresh			COMMAND INHIBIT or NOP	Exit self refresh	6
Clock suspend			X	Exit clock suspend	7
All banks idle	Н	L	COMMAND INHIBIT or NOP	Power-down entry	
All banks idle			AUTO REFRESH	Self refresh entry	
Reading or writing			VALID	Clock suspend entry	
	Н	Н	See Table 16 (page 40).		

Notes: 1. CKE_n is the logic state of CKE at clock edge n; CKE_{n-1} was the state of CKE at the previous clock edge.

- 2. Current state is the state of the SDRAM immediately prior to clock edge *n*.
- 3. COMMAND_n is the command registered at clock edge *n*, and ACTION_n is a result of COMMAND_n.
- 4. All states and sequences not shown are illegal or reserved.
- 5. Exiting power-down at clock edge n will put the device in the all banks idle state in time for clock edge n + 1 (provided that ^tCKS is met).
- 6. Exiting self refresh at clock edge *n* will put the device in the all banks idle state after ^tXSR is met. COMMAND INHIBIT or NOP commands should be issued on any clock edges occurring during the ^tXSR period. A minimum of two NOP commands must be provided during the ^tXSR period.
- 7. After exiting clock suspend at clock edge n, the device will resume operation and recognize the next command at clock edge n + 1.



Initialization

SDRAM must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. After power is applied to V_{DD} and V_{DDQ} (simultaneously) and the clock is stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a 100µs delay prior to issuing any command other than a COMMAND INHIBIT or NOP. Starting at some point during this 100µs period and continuing at least through the end of this period, COMMAND INHIBIT or NOP commands must be applied.

After the 100µs delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must then be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, at least two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for mode register programming. Because the mode register will power up in an unknown state, it must be loaded prior to applying any operational command. If desired, the two AUTO REFRESH commands can be issued after the LMR command.

The recommended power-up sequence for SDRAM:

- 1. Simultaneously apply power to V_{DD} and V_{DDQ} .
- 2. Assert and hold CKE at a LVTTL logic LOW since all inputs and outputs are LVTTL-compatible.
- 3. Provide stable CLOCK signal. Stable clock is defined as a signal cycling within timing constraints specified for the clock pin.
- 4. Wait at least 100µs prior to issuing any command other than a COMMAND INHIB-IT or NOP.
- 5. Starting at some point during this 100µs period, bring CKE HIGH. Continuing at least through the end of this period, 1 or more COMMAND INHIBIT or NOP commands must be applied.
- 6. Perform a PRECHARGE ALL command.
- 7. Wait at least ^tRP time; during this time NOPs or DESELECT commands must be given. All banks will complete their precharge, thereby placing the device in the all banks idle state.
- 8. Issue an AUTO REFRESH command.
- 9. Wait at least ^tRFC time, during which only NOPs or COMMAND INHIBIT commands are allowed.
- 10. Issue an AUTO REFRESH command.
- 11. Wait at least ^tRFC time, during which only NOPs or COMMAND INHIBIT commands are allowed.
- 12. The SDRAM is now ready for mode register programming. Because the mode register will power up in an unknown state, it should be loaded with desired bit values prior to applying any operational command. Using the LMR command, program the mode register. The mode register is programmed via the MODE REGISTER SET command with BA1 = 0, BA0 = 0 and retains the stored information until it is programmed again or the device loses power. Not programming the mode register upon initialization will result in default settings which may not be desired. Outputs are guaranteed High-Z after the LMR command is issued. Outputs should be High-Z already before the LMR command is issued.
- 13. Wait at least ^tMRD time, during which only NOP or DESELECT commands are allowed.


At this point the DRAM is ready for any valid command.



Note:

More than two AUTO REFRESH commands can be issued in the sequence. After steps 9 and 10 are complete, repeat them until the desired number of AUTO REFRESH + t RFC loops is achieved.

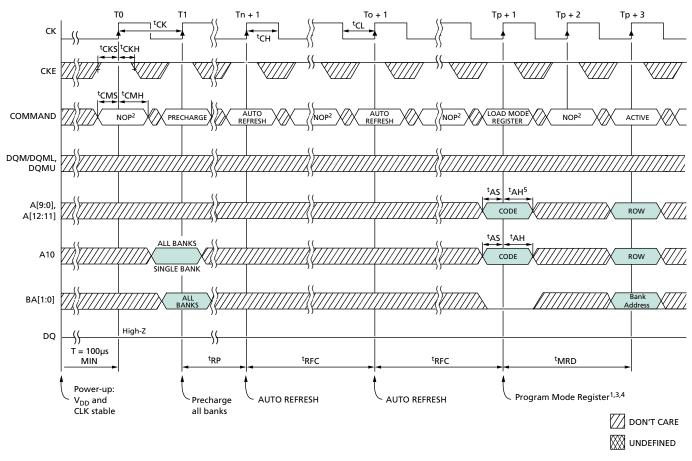Figure 18: Initialize and Load Mode Register



Notes: 1. The mode register may be loaded prior to the AUTO REFRESH cycles if desired.

- 2. If CS is HIGH at clock HIGH time, all commands applied are NOP.
- 3. JEDEC and PC100 specify three clocks.
- 4. Outputs are guaranteed High-Z after command is issued.
- 5. A12 should be a LOW at ${}^{t}P$ + 1.



Mode Register


The mode register defines the specific mode of operation, including burst length (BL), burst type, CAS latency (CL), operating mode, and write burst mode. The mode register is programmed via the LOAD MODE REGISTER command and retains the stored information until it is programmed again or the device loses power.

Mode register bits M[2:0] specify the BL; M3 specifies the type of burst; M[6:4] specify the CL; M7 and M8 specify the operating mode; M9 specifies the write burst mode; and M10–M*n* should be set to zero to ensure compatibility with future revisions. M*n* + 1 and M*n* + 2 should be set to zero to select the mode register.

The mode registers must be loaded when all banks are idle, and the controller must wait ^tMRD before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.



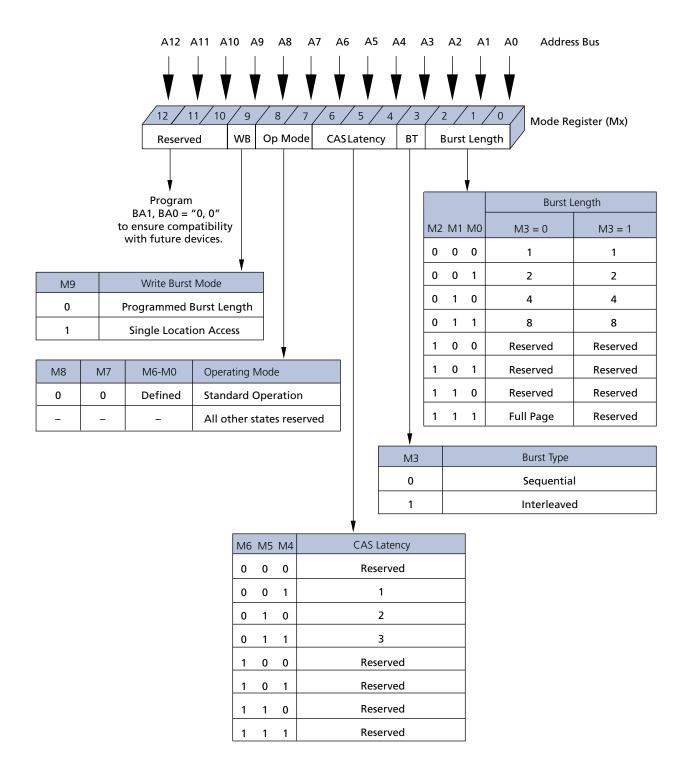Figure 19: Mode Register Definition





Burst Length

Read and write accesses to the device are burst oriented, and the burst length (BL) is programmable. The burst length determines the maximum number of column locations that can be accessed for a given READ or WRITE command. Burst lengths of 1, 2, 4, 8, or continuous locations are available for both the sequential and the interleaved burst types, and a continuous page burst is available for the sequential type. The continuous page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary burst lengths.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a READ or WRITE command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst wraps within the block when a boundary is reached. The block is uniquely selected by A[8:1] when BL = 2, A[8:2] when BL = 4, and A[8:3] when BL = 8. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Continuous page bursts wrap within the page when the boundary is reached.

Burst Type

Accesses within a given burst can be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3.

The ordering of accesses within a burst is determined by the burst length, the burst type, and the starting column address.



Table 18: Burst Definition Table

				Order of Accesses Within a Burst		
Burst Length	Startin	g Column /	Address	Type = Sequential	Type = Interleaved	
2			A0			
			0	0-1	0-1	
			1	1-0	1-0	
4		A1	A0			
		0	0	0-1-2-3	0-1-2-3	
		0	1	1-2-3-0	1-0-3-2	
		1	0	2-3-0-1	2-3-0-1	
		1	1	3-0-1-2	3-2-1-0	
8	A2	A1	A0			
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7	
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6	
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5	
	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4	
	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3	
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2	
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1	
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0	
Continuous						
	n = A0–	An/9/8 (loca	tion 0–y)	Cn, Cn + 1, Cn + 2, Cn + 3Cn - 1, Cn	Not supported	

Notes: 1. For full-page accesses: y = 2048 (x4); y = 1024 (x8); y = 512 (x16).

For BL = 2, A1–A9, A11 (x4); A1–A9 (x8); or A1–A8 (x16) select the block-of-two burst; A0 selects the starting column within the block.

- 3. For BL = 4, A2–A9, A11 (x4); A2–A9 (x8); or A2–A8 (x16) select the block-of-four burst; A0–A1 select the starting column within the block.
- 4. For BL = 8, A3–A9, A11 (x4); A3–A9 (x8); or A3–A8 (x16) select the block-of-eight burst; A0–A2 select the starting column within the block.
- 5. For a full-page burst, the full row is selected and A0–A9, A11 (x4); A0–A9 (x8); or A0–A8 (x16) select the starting column.
- 6. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
- 7. For BL = 1, A0–A9, A11 (x4); A0–A9 (x8); or A0–A8 (x16) select the unique column to be accessed, and mode register bit M3 is ignored.




CAS Latency

The CAS latency (CL) is the delay, in clock cycles, between the registration of a READ command and the availability of the output data. The latency can be set to two or three clocks.

If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n + m. The DQ start driving as a result of the clock edge one cycle earlier (n + m - 1), and provided that the relevant access times are met, the data is valid by clock edge n + m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the DQ start driving after T1 and the data is valid by T2.

Reserved states should not be used as unknown operation or incompatibility with future versions may result.

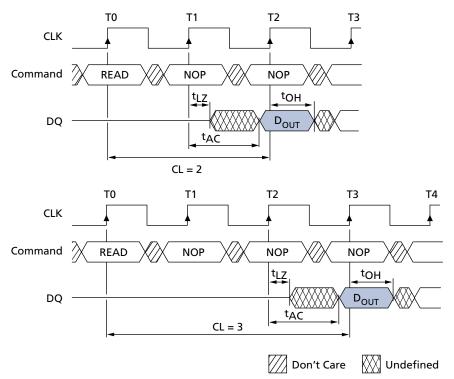Figure 20: CAS Latency



Operating Mode

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved for future use. Reserved states should not be used because unknown operation or incompatibility with future versions may result.

Write Burst Mode

When M9 = 0, the burst length programmed via M[2:0] applies to both READ and WRITE bursts; when M9 = 1, the programmed burst length applies to READ bursts, but write accesses are single-location (nonburst) accesses.



Bank/Row Activation


Before any READ or WRITE commands can be issued to a bank within the SDRAM, a row in that bank must be opened. This is accomplished via the ACTIVE command, which selects both the bank and the row to be activated.

After a row is opened with the ACTIVE command, a READ or WRITE command can be issued to that row, subject to the ^tRCD specification. ^tRCD (MIN) should be divided by the clock period and rounded up to the next whole number to determine the earliest clock edge after the ACTIVE command on which a READ or WRITE command can be entered. For example, a ^tRCD specification of 20ns with a 125 MHz clock (8ns period) results in 2.5 clocks, rounded to 3. This is reflected in Figure 21 (page 50), which covers any case where $2 < {^tRCD} (MIN)/{^tCK} \le 3$. (The same procedure is used to convert other specification limits from time units to clock cycles.)

A subsequent ACTIVE command to a different row in the same bank can only be issued after the previous active row has been precharged. The minimum time interval between successive ACTIVE commands to the same bank is defined by ^tRC.

A subsequent ACTIVE command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive ACTIVE commands to different banks is defined by ^tRRD.

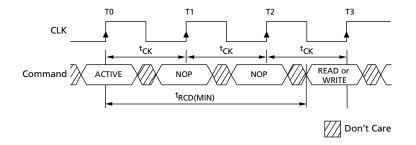Figure 21: Example: Meeting ^tRCD (MIN) When 2 < ^tRCD (MIN)/^tCK \leq 3





READ Operation

READ bursts are initiated with a READ command, as shown in (page 0). The starting column and bank addresses are provided with the READ command, and auto precharge is either enabled or disabled for that burst access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. In the following figures, auto precharge is disabled.

During READ bursts, the valid data-out element from the starting column address is available following the CAS latency after the READ command. Each subsequent dataout element will be valid by the next positive clock edge. Figure 23 (page 53) shows general timing for each possible CAS latency setting.


Upon completion of a burst, assuming no other commands have been initiated, the DQ signals will go to High-Z. A continuous page burst continues until terminated. At the end of the page, it wraps to column 0 and continues.

Data from any READ burst can be truncated with a subsequent READ command, and data from a fixed-length READ burst can be followed immediately by data from a READ command. In either case, a continuous flow of data can be maintained. The first data element from the new burst either follows the last element of a completed burst or the last desired data element of a longer burst that is being truncated. The new READ command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where x = CL - 1. This is shown in Figure 23 (page 53) for CL2 and CL3.

SDRAM devices use a pipelined architecture and therefore do not require the 2*n* rule associated with a prefetch architecture. A READ command can be initiated on any clock cycle following a READ command. Full-speed random read accesses can be performed to the same bank, or each subsequent READ can be performed to a different bank.



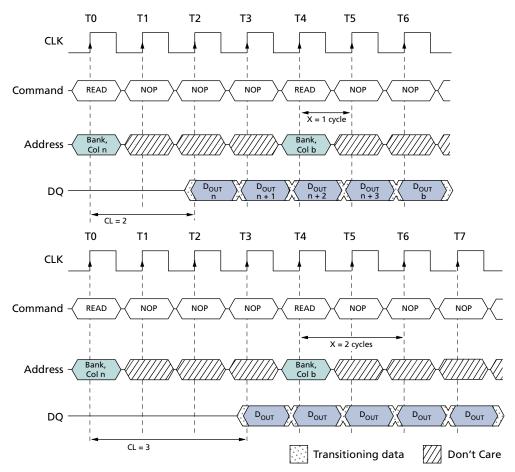
Figure 22: Consecutive READ Bursts



Note: 1. Each READ command can be issued to any bank. DQM is LOW.



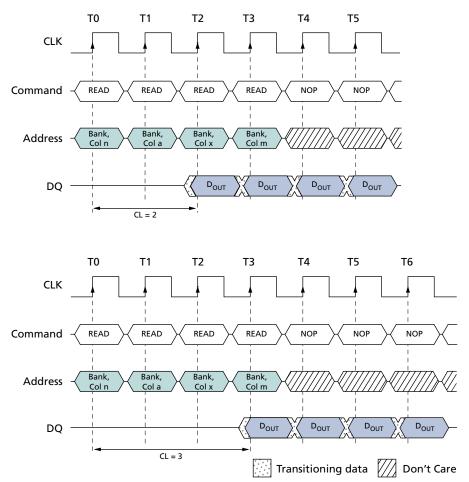Figure 23: Random READ Accesses



Note: 1. Each READ command can be issued to any bank. DQM is LOW.

Data from any READ burst can be truncated with a subsequent WRITE command, and data from a fixed-length READ burst can be followed immediately by data from a WRITE command (subject to bus turnaround limitations). The WRITE burst can be initiated on the clock edge immediately following the last (or last desired) data element from the READ burst, provided that I/O contention can be avoided. In a given system design, there is a possibility that the device driving the input data will go Low-Z before the DQ go High-Z. In this case, at least a single-cycle delay should occur between the last read data and the WRITE command.

The DQM input is used to avoid I/O contention, as shown in Figure 24 (page 54) and Figure 25 (page 55). The DQM signal must be asserted (HIGH) at least two clocks prior to the WRITE command (DQM latency is two clocks for output buffers) to suppress data-out from the READ. After the WRITE command is registered, the DQ will go to High-Z (or remain High-Z), regardless of the state of the DQM signal, provided the DQM was active on the clock just prior to the WRITE command that truncated the READ command. If not, the second WRITE will be an invalid WRITE. For example, if DQM was LOW during T4, then the WRITEs at T5 and T7 would be valid, and the WRITE at T6 would be invalid.




256Mb: x4, x8, x16 Automotive SDRAM READ Operation

The DQM signal must be de-asserted prior to the WRITE command (DQM latency is zero clocks for input buffers) to ensure that the written data is not masked. Figure 24 (page 54) shows where, due to the clock cycle frequency, bus contention is avoided without having to add a NOP cycle, while Figure 25 (page 55) shows the case where an additional NOP cycle is required.

A fixed-length READ burst may be followed by or truncated with a PRECHARGE command to the same bank, provided that auto precharge was not activated. The PRE-CHARGE command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where x = CL - 1. This is shown in Figure 26 (page 55) for each possible CL; data element n + 3 is either the last of a burst of four or the last desired data element of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ^tRP is met. Note that part of the row precharge time is hidden during the access of the last data element(s).

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command. The advantage of the PRECHARGE command is that it can be used to truncate fixed-length or continuous page bursts.

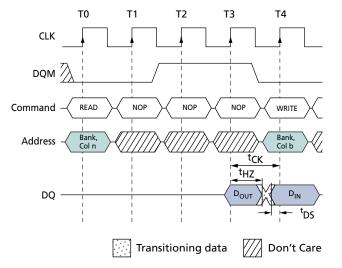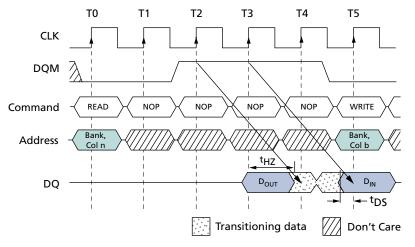
Figure 24: READ-to-WRITE



Note: 1. CL = 3. The READ command can be issued to any bank, and the WRITE command can be to any bank. If a burst of one is used, DQM is not required.

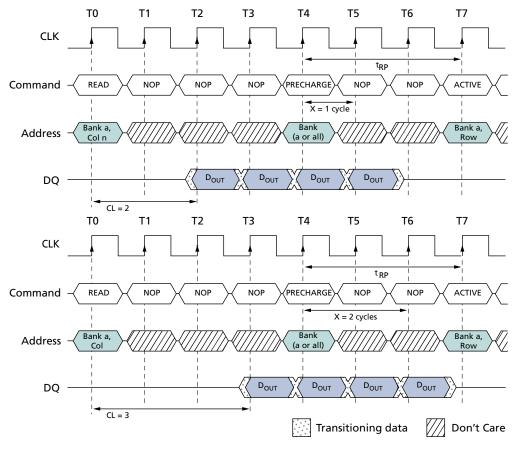



Figure 25: READ-to-WRITE With Extra Clock Cycle



Note: 1. CL = 3. The READ command can be issued to any bank, and the WRITE command can be to any bank.

Figure 26: READ-to-PRECHARGE








256Mb: x4, x8, x16 Automotive SDRAM READ Operation

Continuous-page READ bursts can be truncated with a BURST TERMINATE command and fixed-length READ bursts can be truncated with a BURST TERMINATE command, provided that auto precharge was not activated. The BURST TERMINATE command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where x = CL - 1. This is shown in Figure 27 (page 56) for each possible CAS latency; data element n + 3 is the last desired data element of a longer burst.

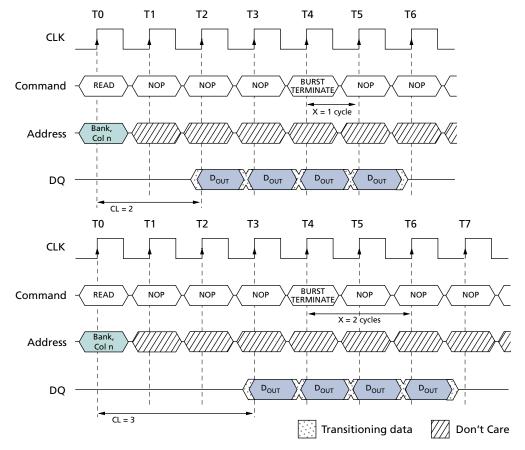
Figure 27: Terminating a READ Burst



Note: 1. DQM is LOW.



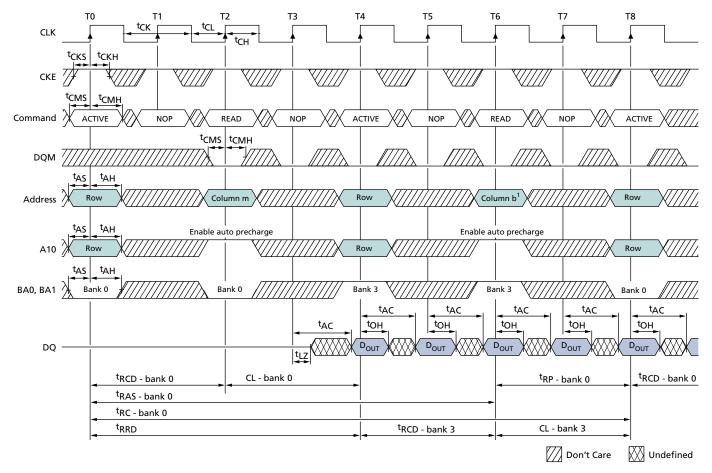
Figure 28: Alternating Bank Read Accesses



Note: 1. For this example, BL = 4 and CL = 2.



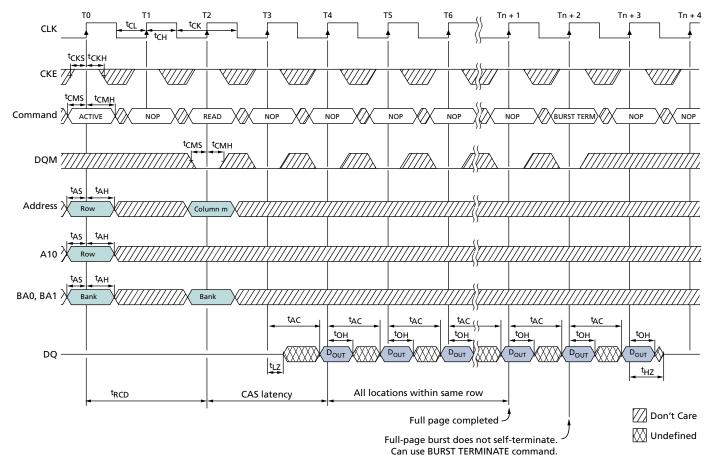
Figure 29: READ Continuous Page Burst



Note: 1. For this example, CL = 2.



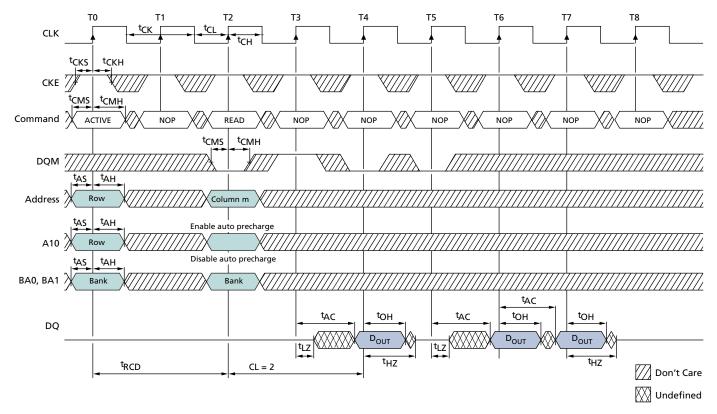Figure 30: READ – DQM Operation



Note: 1. For this example, BL = 4 and CL = 2.



WRITE Operation


WRITE bursts are initiated with a WRITE command, as shown in (page 0). The starting column and bank addresses are provided with the WRITE command and auto precharge is either enabled or disabled for that access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic WRITE commands used in the following figures, auto precharge is disabled.

During WRITE bursts, the first valid data-in element is registered coincident with the WRITE command. Subsequent data elements are registered on each successive positive clock edge. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQ will remain at High-Z and any additional input data will be ignored (see Figure 31 (page 60)). A continuous page burst continues until terminated; at the end of the page, it wraps to column 0 and continues.

Data for any WRITE burst can be truncated with a subsequent WRITE command, and data for a fixed-length WRITE burst can be followed immediately by data for a WRITE command. The new WRITE command can be issued on any clock following the previous WRITE command, and the data provided coincident with the new command applies to the new command (see Figure 32 (page 61)). Data n + 1 is either the last of a burst of two or the last desired data element of a longer burst.

SDRAM devices use a pipelined architecture and therefore do not require the 2*n* rule associated with a prefetch architecture. A WRITE command can be initiated on any clock cycle following a previous WRITE command. Full-speed random write accesses within a page can be performed to the same bank, as shown in Figure 33 (page 62), or each subsequent WRITE can be performed to a different bank.

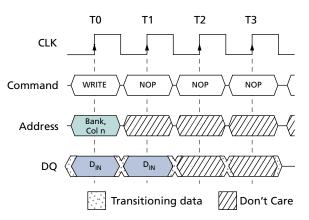
Figure 31: WRITE Burst



Note: 1. BL = 2. DQM is LOW.



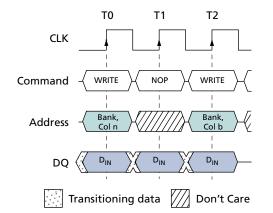Figure 32: WRITE-to-WRITE



Note: 1. DQM is LOW. Each WRITE command may be issued to any bank.

Data for any WRITE burst can be truncated with a subsequent READ command, and data for a fixed-length WRITE burst can be followed immediately by a READ command. After the READ command is registered, data input is ignored and WRITEs will not be executed (see Figure 34 (page 62)). Data n + 1 is either the last of a burst of two or the last desired data element of a longer burst.

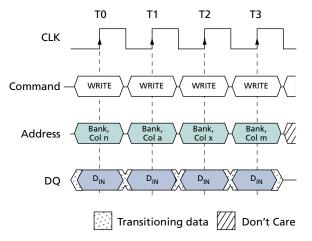
Data for a fixed-length WRITE burst can be followed by or truncated with a PRE-CHARGE command to the same bank, provided that auto precharge was not activated. A continuous-page WRITE burst can be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued ^tWR after the clock edge at which the last desired input data element is registered. The auto precharge mode requires a ^tWR of at least one clock with time to complete, regardless of frequency.

In addition, when truncating a WRITE burst at high clock frequencies (${}^{t}CK < 15ns$), the DQM signal must be used to mask input data for the clock edge prior to and the clock edge coincident with the PRECHARGE command (see Figure 35 (page 63)). Data n + 1 is either the last of a burst of two or the last desired data element of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ${}^{t}RP$ is met.

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command. The advantage of the PRECHARGE command is that it can be used to truncate fixed-length bursts or continuous page bursts.

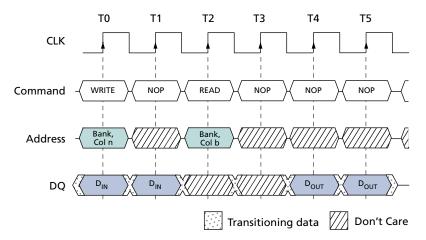


Figure 33: Random WRITE Cycles



Note: 1. Each WRITE command can be issued to any bank. DQM is LOW.


Figure 34: WRITE-to-READ



Note: 1. The WRITE command can be issued to any bank, and the READ command can be to any bank. DQM is LOW. CL = 2 for illustration.



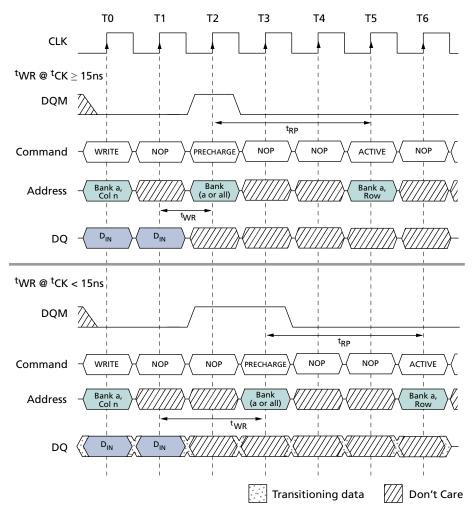Figure 35: WRITE-to-PRECHARGE




Note: 1. In this example DQM could remain LOW if the WRITE burst is a fixed length of two.

Fixed-length WRITE bursts can be truncated with the BURST TERMINATE command. When truncating a WRITE burst, the input data applied coincident with the BURST TERMINATE command is ignored. The last data written (provided that DQM is LOW at that time) will be the input data applied one clock previous to the BURST TERMINATE command. This is shown in Figure 36 (page 64), where data *n* is the last desired data element of a longer burst.



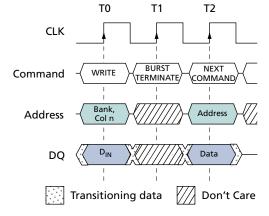
Figure 36: Terminating a WRITE Burst



Note: 1. DQM is LOW.






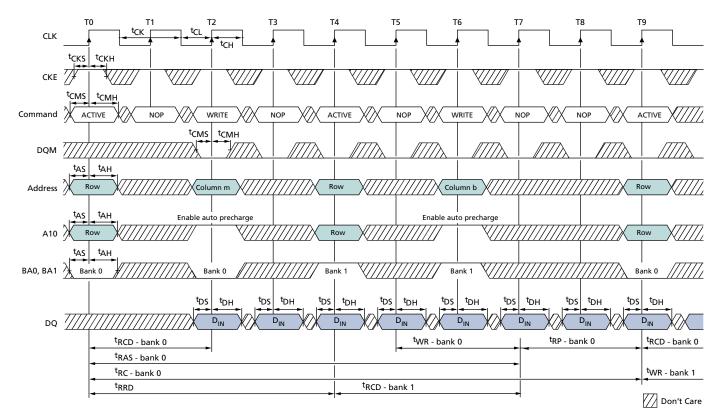

Note: 1. For this example, BL = 4.



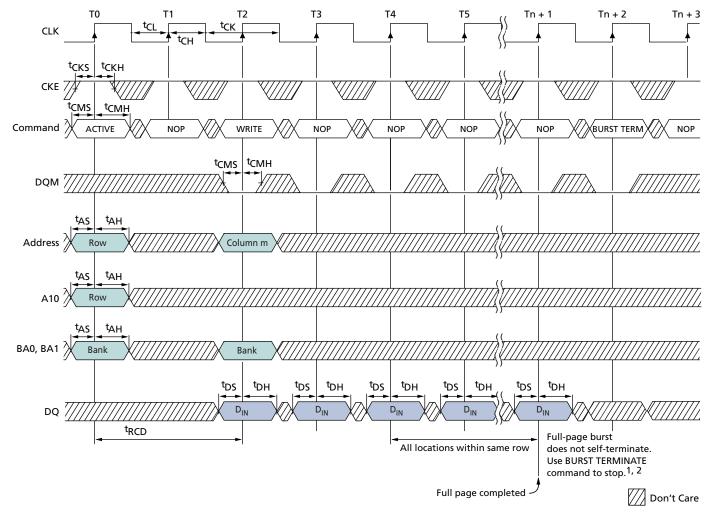Figure 38: WRITE – Continuous Page Burst




Notes: 1. ^tWR must be satisfied prior to issuing a PRECHARGE command.

2. Page left open; no ^tRP.



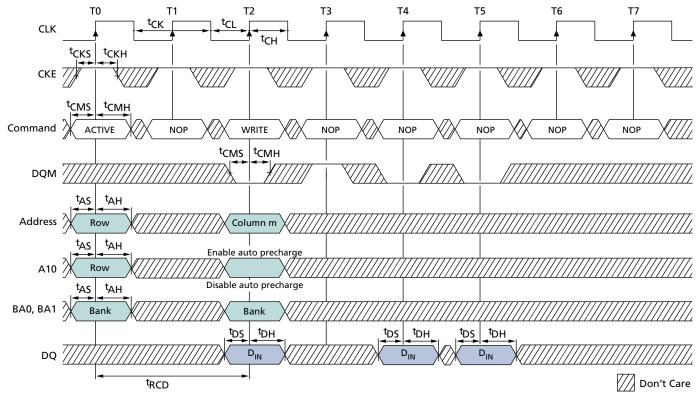Figure 39: WRITE – DQM Operation



Note: 1. For this example, BL = 4.

Burst Read/Single Write

The burst read/single write mode is entered by programming the write burst mode bit (M9) in the mode register to a 1. In this mode, all WRITE commands result in the access of a single column location (burst of one), regardless of the programmed burst length. READ commands access columns according to the programmed burst length and sequence, just as in the normal mode of operation (M9 = 0).



PRECHARGE Operation

The PRECHARGE command (see (page 0)) is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access some specified time (^tRP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged (A10 = LOW), inputs BA0 and BA1 select the bank. When all banks are to be precharged (A10 = HIGH), inputs BA0 and BA1 are treated as "Don't Care." After a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

Auto Precharge

Auto precharge is a feature that performs the same individual-bank PRECHARGE function described previously, without requiring an explicit command. This is accomplished by using A10 to enable auto precharge in conjunction with a specific READ or WRITE command. A precharge of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst, except in the continuous page burst mode where auto precharge does not apply. In the specific case of write burst mode set to single location access with burst length set to continuous, the burst length setting is the overriding setting and auto precharge does not apply. Auto precharge is nonpersistent in that it is either enabled or disabled for each individual READ or WRITE command.

Auto precharge ensures that the precharge is initiated at the earliest valid stage within a burst. Another command cannot be issued to the same bank until the precharge time (^tRP) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time, as described for each burst type in the Burst Type (page 47) section.

Micron SDRAM supports concurrent auto precharge; cases of concurrent auto precharge for READs and WRITEs are defined below.

READ with auto precharge interrupted by a READ (with or without auto precharge)

A READ to bank *m* will interrupt a READ on bank *n* following the programmed CAS latency. The precharge to bank *n* begins when the READ to bank *m* is registered (see Figure 40 (page 69)).

READ with auto precharge interrupted by a WRITE (with or without auto precharge)

A WRITE to bank *m* will interrupt a READ on bank *n* when registered. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The precharge to bank *n* begins when the WRITE to bank *m* is registered (see Figure 41 (page 70)).

WRITE with auto precharge interrupted by a READ (with or without auto precharge)

A READ to bank *m* will interrupt a WRITE on bank *n* when registered, with the data-out appearing CL later. The precharge to bank *n* will begin after ^tWR is met, where ^tWR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (see Figure 46 (page 75)).

WRITE with auto precharge interrupted by a WRITE (with or without auto precharge)

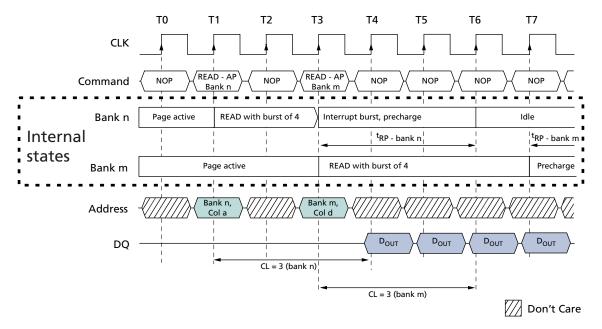
A WRITE to bank m will interrupt a WRITE on bank n when registered. The precharge to bank n will begin after ^tWR is met, where ^tWR begins when the WRITE to bank m is reg-



256Mb: x4, x8, x16 Automotive SDRAM PRECHARGE Operation

istered. The last valid data WRITE to bank *n* will be data registered one clock prior to a WRITE to bank *m* (see Figure 47 (page 75)).






Note: 1. DQM is LOW.



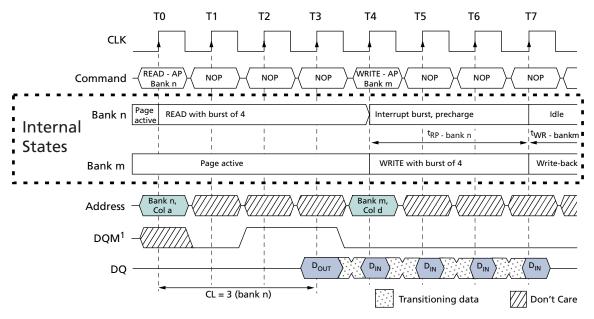Figure 41: READ With Auto Precharge Interrupted by a WRITE




Note: 1. DQM is HIGH at T2 to prevent $D_{OUT}a + 1$ from contending with $D_{IN}d$ at T4.



256Mb: x4, x8, x16 Automotive SDRAM PRECHARGE Operation

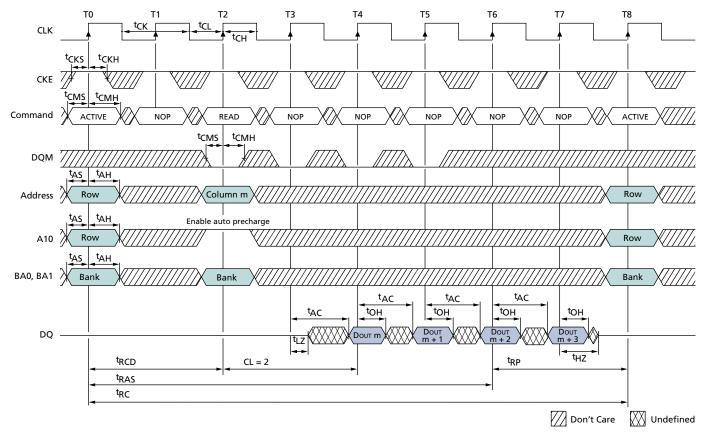
Figure 42: READ With Auto Precharge



Note: 1. For this example, BL = 4 and CL = 2.



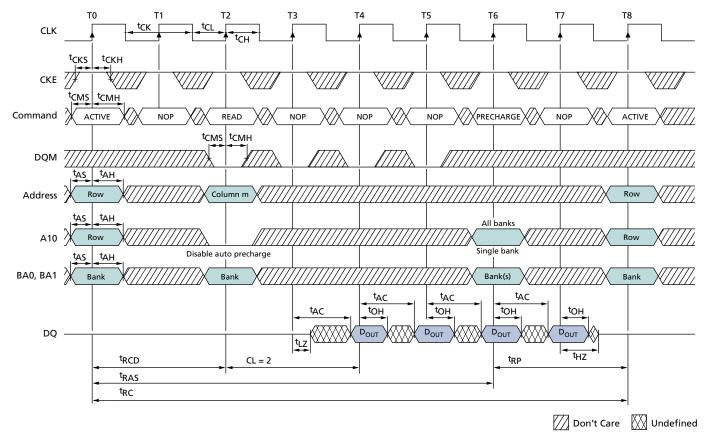Figure 43: READ Without Auto Precharge



Note: 1. For this example, BL = 4, CL = 2, and the READ burst is followed by a manual PRE-CHARGE.



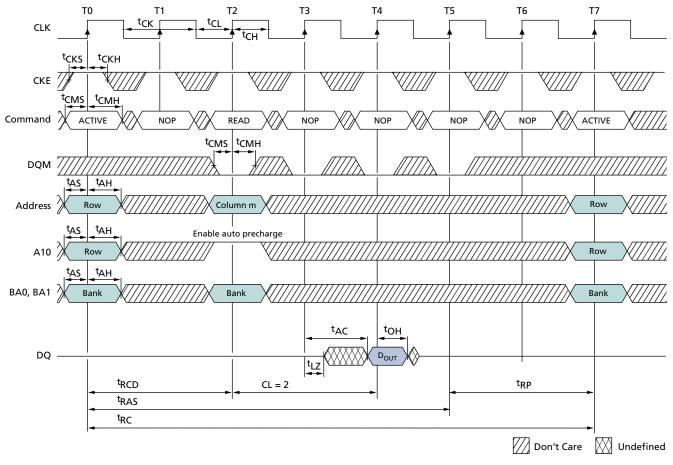


Figure 44: Single READ With Auto Precharge

Note: 1. For this example, BL = 1 and CL = 2.



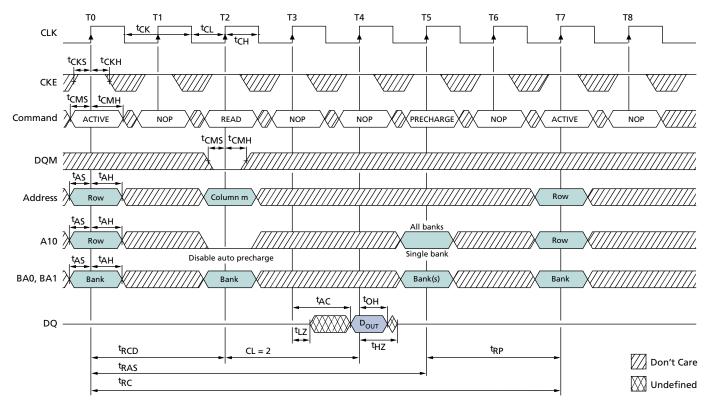


Figure 45: Single READ Without Auto Precharge


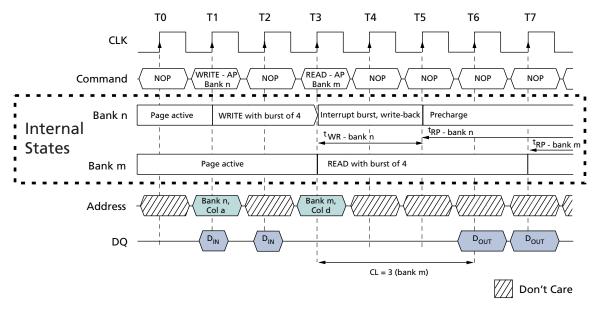


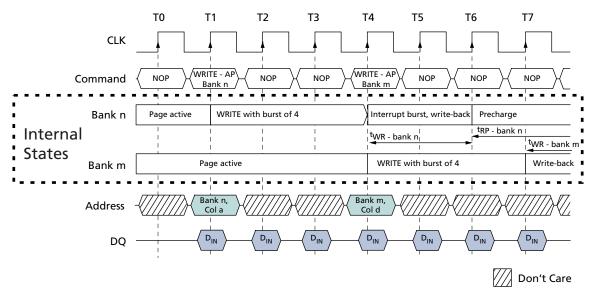


Figure 46: WRITE With Auto Precharge Interrupted by a READ



Note: 1. DQM is LOW.

Figure 47: WRITE With Auto Precharge Interrupted by a WRITE




Note: 1. DQM is LOW.



256Mb: x4, x8, x16 Automotive SDRAM PRECHARGE Operation

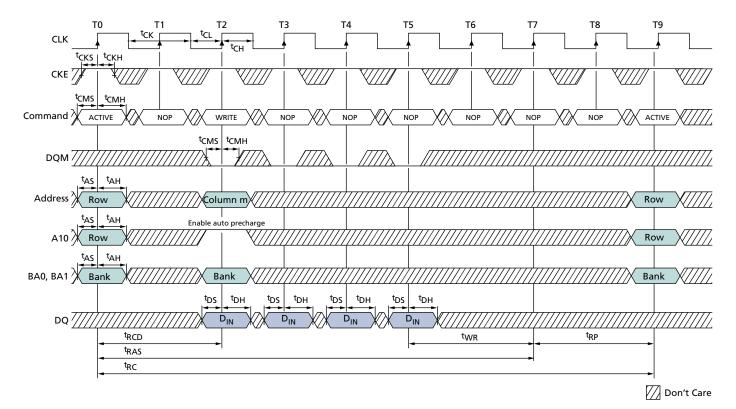
Figure 48: WRITE With Auto Precharge



Note: 1. For this example, BL = 4.



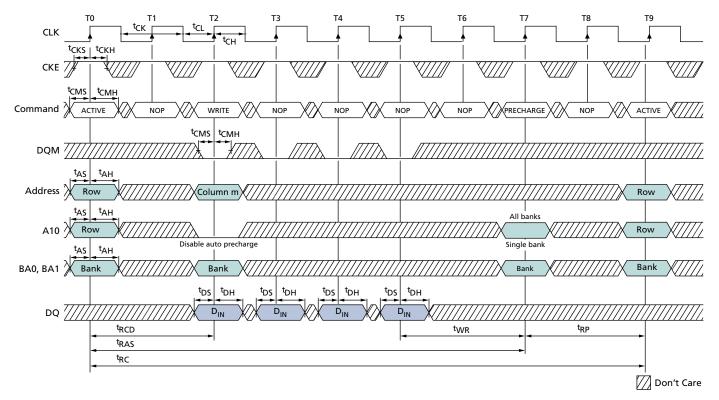
Figure 49: WRITE Without Auto Precharge



Note: 1. For this example, BL = 4 and the WRITE burst is followed by a manual PRECHARGE.



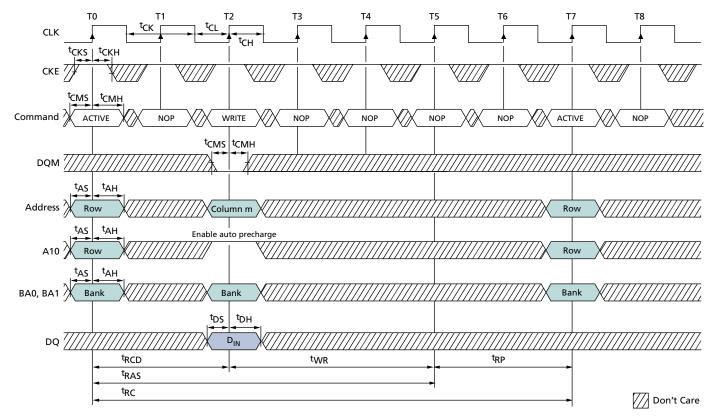
Figure 50: Single WRITE With Auto Precharge



Note: 1. For this example, BL = 1.





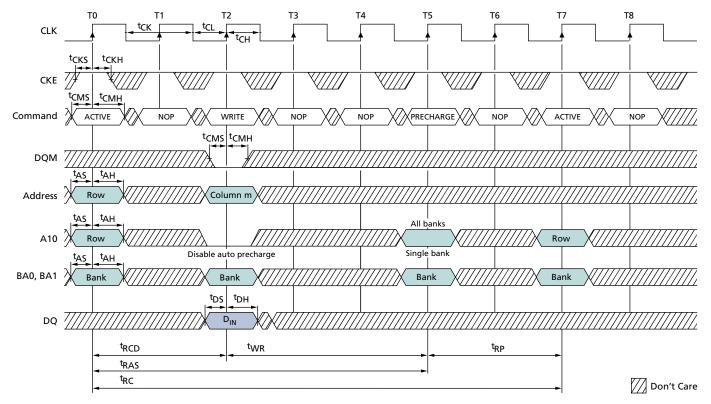

Note: 1. For this example, BL = 1 and the WRITE burst is followed by a manual PRECHARGE.




AUTO REFRESH Operation

The AUTO REFRESH command is used during normal operation of the device to refresh the contents of the array. This command is nonpersistent, so it must be issued each time a refresh is required. All active banks must be precharged prior to issuing an AUTO REFRESH command. The AUTO REFRESH command should not be issued until the minimum ^tRP is met following the PRECHARGE command. Addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an AU-TO REFRESH command.

After the AUTO REFRESH command is initiated, it must not be interrupted by any executable command until ^tRFC has been met. During ^tRFC time, COMMAND INHIBIT or NOP commands must be issued on each positive edge of the clock. The SDRAM requires that every row be refreshed each ^tREF period. Providing a distributed AUTO RE-FRESH command—calculated by dividing the refresh period (^tREF) by the number of rows to be refreshed—meets the timing requirement and ensures that each row is refreshed. Alternatively, to satisfy the refresh requirement a burst refresh can be employed after every ^tREF period by issuing consecutive AUTO REFRESH commands for the number of rows to be refreshed at the minimum cycle rate (^tRFC).



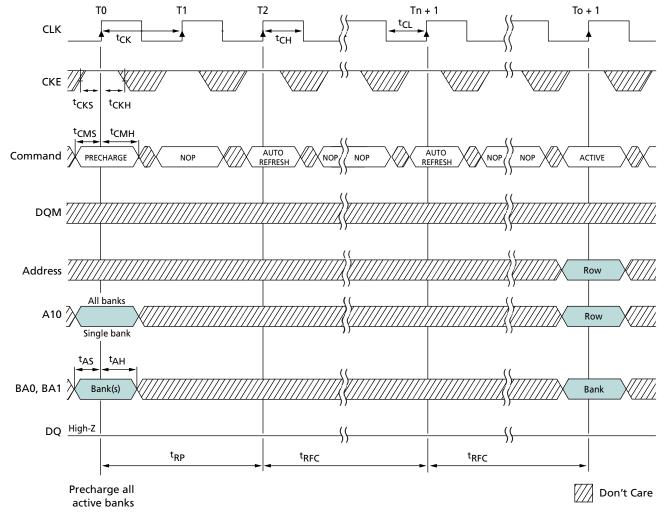Figure 52: Auto Refresh Mode



Note: 1. Back-to-back AUTO REFRESH commands are not required.



SELF REFRESH Operation

The self refresh mode can be used to retain data in the device, even when the rest of the system is powered down. When in self refresh mode, the device retains data without external clocking. The SELF REFRESH command is initiated like an AUTO REFRESH command, except CKE is disabled (LOW). After the SELF REFRESH command is registered, all the inputs to the device become "Don't Care" with the exception of CKE, which must remain LOW.


After self refresh mode is engaged, the device provides its own internal clocking, enabling it to perform its own AUTO REFRESH cycles. The device must remain in self refresh mode for a minimum period equal to ^tRAS and remains in self refresh mode for an indefinite period beyond that.

The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable prior to CKE going back HIGH. (Stable clock is defined as a signal cycling within timing constraints specified for the clock ball.) After CKE is HIGH, the device must have NOP commands issued for a minimum of two clocks for ^tXSR because time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands must be issued according to the distributed refresh rate (^tREF/refresh row count) as both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.



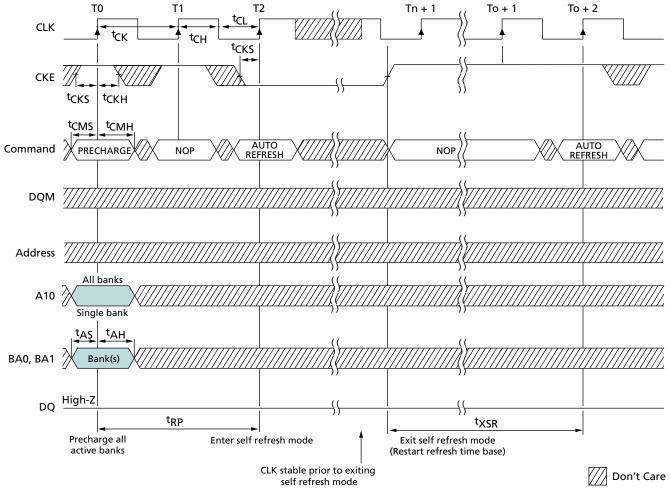Figure 53: Self Refresh Mode



Note: 1. Each AUTO REFRESH command performs a REFRESH cycle. Back-to-back commands are not required.




Power-Down

Power-down occurs if CKE is registered LOW coincident with a NOP or COMMAND IN-HIBIT when no accesses are in progress. If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering powerdown deactivates the input and output buffers, excluding CKE, for maximum power savings while in standby. The device cannot remain in the power-down state longer than the refresh period (64ms) because no REFRESH operations are performed in this mode.

The power-down state is exited by registering a NOP or COMMAND INHIBIT with CKE HIGH at the desired clock edge (meeting ^tCKS).

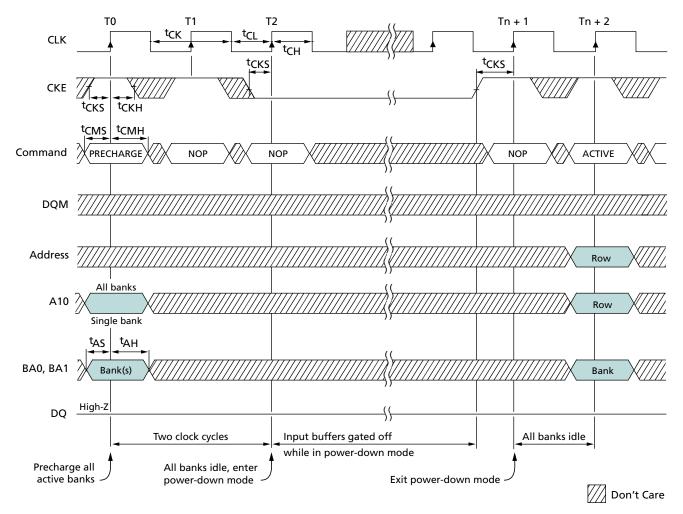Figure 54: Power-Down Mode



Note: 1. Violating refresh requirements during power-down may result in a loss of data.




Clock Suspend

The clock suspend mode occurs when a column access/burst is in progress and CKE is registered LOW. In the clock suspend mode, the internal clock is deactivated, freezing the synchronous logic.

For each positive clock edge on which CKE is sampled LOW, the next internal positive clock edge is suspended. Any command or data present on the input balls when an internal clock edge is suspended will be ignored; any data present on the DQ balls remains driven; and burst counters are not incremented, as long as the clock is suspended.

Exit clock suspend mode by registering CKE HIGH; the internal clock and related operation will resume on the subsequent positive clock edge.

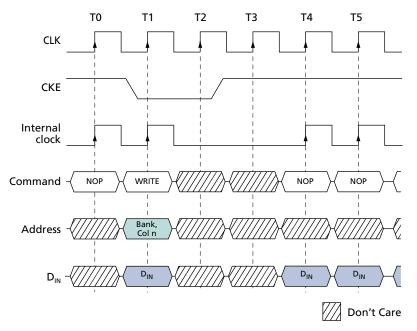
Figure 55: Clock Suspend During WRITE Burst



Note: 1. For this example, BL = 4 or greater, and DQM is LOW.



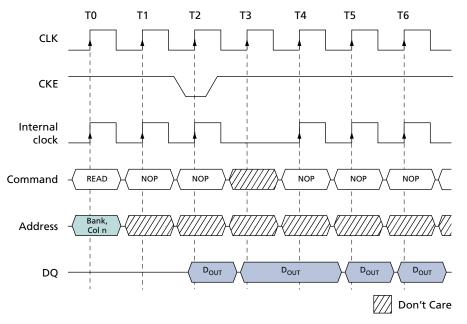
Figure 56: Clock Suspend During READ Burst



Note: 1. For this example, CL = 2, BL = 4 or greater, and DQM is LOW.



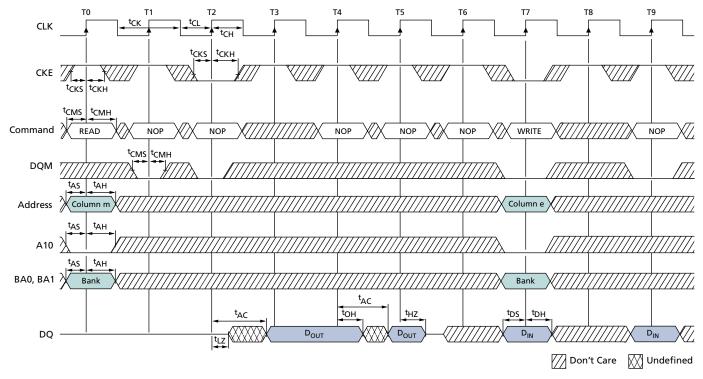Figure 57: Clock Suspend Mode



Note: 1. For this example, BL = 2, CL = 3, and auto precharge is disabled.



Revision History

Rev. D - 6/18

• Added Important Notes and Warnings section for further clarification aligning to industry standards

Rev. C – 1/14

• Corrected typo in 60-ball package drawing to width between outer solder balls: from 6.4 CTR to 5.6 CTR.

Rev. B – 11/13

• Changed to Production status.

Rev. A – 04/12

• Created from DSG 256Mb x4, x8, x16 SDR SDRAM, Rev. P, 9/11 (09005aef8091e6d1).

8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-4000 www.micron.com/products/support Sales inquiries: 800-932-4992 Micron and the Micron logo are trademarks of Micron Technology, Inc. All other trademarks are the property of their respective owners. This data sheet contains minimum and maximum limits specified over the power supply and temperature range set forth herein. Although considered final, these specifications are subject to change, as further product development and data characterization some-

times occur.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Micron Technology:

MT48LC16M16A2B4-6A XIT:G TR MT48LC16M16A2P-6A XIT:G TR MT48LC16M16A2B4-6A AAT:G TR MT48LC16M16A2P-6A AIT:G TR MT48LC16M16A2B4-6A AIT:G TR MT48LC16M16A2P-6A AAT:G TR MT48LC16M16A2B4-7E:G TR MT48LC16M16A2B4-6A AAT:G TR MT48LC16M16A2P-6A AIT:G TR MT48LC16M16A2P-6A IT:G TR MT48LC16M16A2B4-7E IT:G TR MT48LC16M16A2P-6A:G TR MT48LC16M16A2P-7E AIT:G TR MT48LC16M16A2B4-6A AAT:G MT48LC16M16A2B4-6A AIT:G MT48LC16M16A2B4-6A XIT:G MT48LC16M16A2P-6A AAT:G MT48LC16M16A2P-6A AIT:G MT48LC16M16A2P-7E AIT:G TR MT48LC16M16A2P-6A AAT:G MT48LC16M16A2P-6A AIT:G MT48LC16M16A2P-7E AIT:G