




UPS-08-04.0-01-L-V

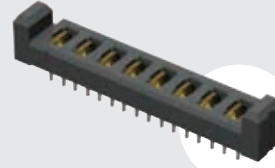

(3.81 mm) .150"

UPS SERIES

DUAL LEAF 20 A POWER SOCKET

SPECIFICATIONS

For complete specifications see www.samtec.com?UPS

Insulator Material:

Black LCP

Contact Material:

BeCu

Plating:

Sn or Au over 50 μ" (1.27 μm) Ni

Operating Temp Range:

-55 °C to +105 °C with Tin;

-55 °C to +125 °C with Gold

Voltage Rating:

438 VAC/620 VDC

Standard Creepage:

(5.8 mm) .228" (with -V)

(2.97 mm) .117" (with -RA)

Standard Clearance:

(1.51 mm) .059"

RoHS Compliant:

Yes

Lead-Free Solderable:

Yes

Mates with:

UPT

PINS	UPT-V/UPS-V	UPT-RA/UPS-RA
	CURRENT RATING (PER CONTACT)	CURRENT RATING (PER CONTACT)
1	23 A	23.5 A
2	18.6 A	20.1 A
3	17.5 A	16.9 A
4	16.7 A	15.5 A
8	14 A	13.3 A
-L PLATING		

Dual leaf blade contacts

Up to 8 power pins

Optional locking clip

(3.81 mm) .150" pitch

Vertical, right-angle or press-fit

RUGGEDIZED
BY SAMTEC

• Locking clip option


RECOGNITIONS

For complete scope of recognitions see www.samtec.com/quality



FILE NO. E111594

CREEPAGE AND CLEARANCE



Selectively loading contacts achieves customer specific creepage and clearance requirements.
Contact asp@samtec.com


ALSO AVAILABLE (MOQ Required)

- Solder leads for (2.36 mm) .093" thick board

TOOLING

Press-fit tooling available.

Note:
Some sizes, styles and options are non-standard, non-returnable.

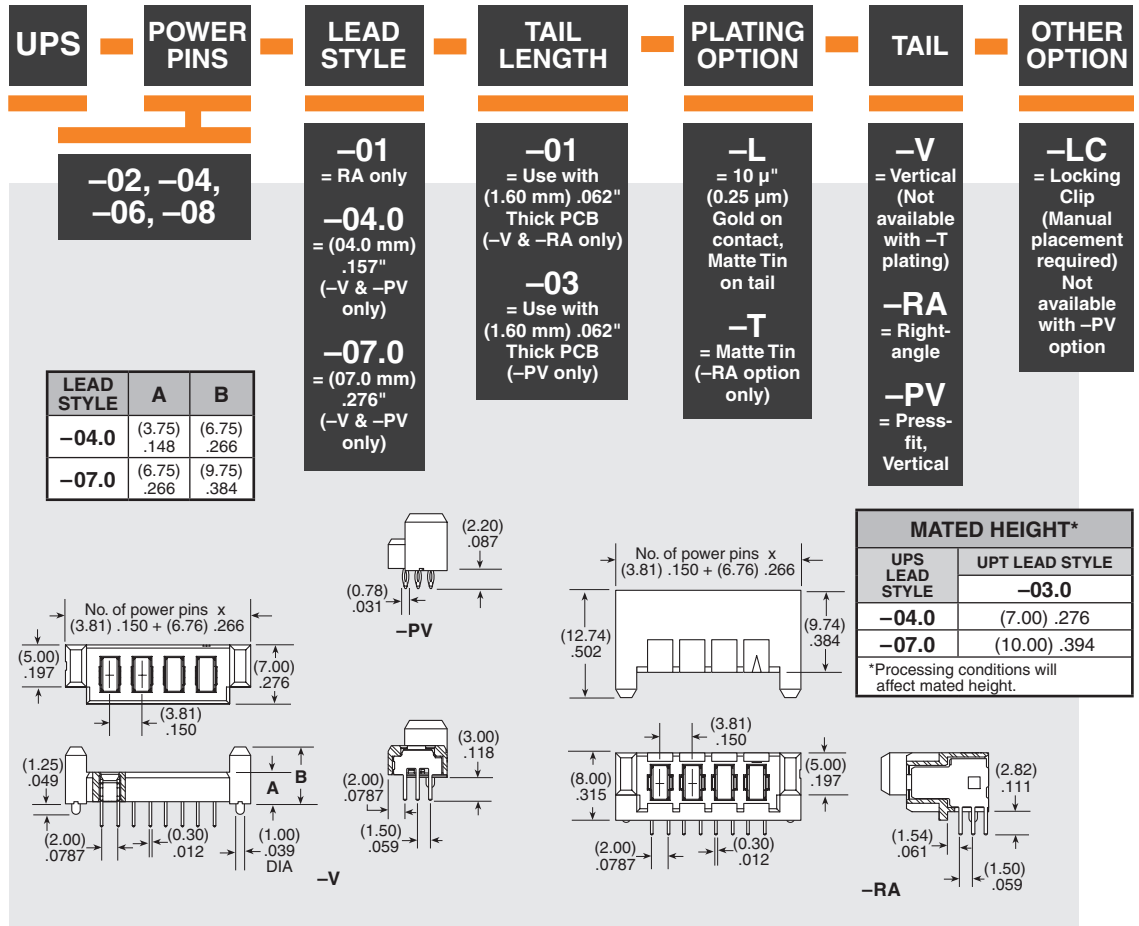

Due to technical progress, all designs, specifications and components are subject to change without notice.

WWW.SAMTEC.COM

All parts within this catalog are built to Samtec's specifications.

Customer specific requirements must be approved by Samtec and identified in a Samtec customer-specific drawing to apply.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Samtec:

[UPS-02-01-01-L-RA-LC-TR](#) [UPS-02-07.0-02-L-V-LC](#) [UPS-04-01-01-L-RA](#) [UPS-04-04.0-01-L-V-TR](#) [UPS-04-07.0-03-L-PV](#) [UPS-06-04.0-01-L-V-LC](#) [UPS-08-01-02-L-RA](#) [UPS-08-07.0-01-L-V-LC](#) [UPS-02-01-01-L-RA-LC](#) [UPS-04-01-02-T-RA](#) [UPS-06-01-01-L-RA-TR](#) [UPS-06-01-01-T-RA-LC-TR](#) [UPS-08-01-01-L-RA-LC](#) [UPS-08-07.0-01-L-V-TR](#) [UPS-08-07.0-02-L-V](#) [UPS-08-07.0-02-L-V-TR](#) [UPS-02-01-01-T-RA-LC-TR](#) [UPS-06-07.0-01-L-V-LC-TR](#) [UPS-08-01-01-T-RA-LC-TR](#) [UPS-04-01-01-L-RA-LC-TR](#) [UPS-04-01-01-L-RA-TR](#) [UPS-04-01-01-T-RA](#) [UPS-04-07.0-02-L-V](#) [UPS-06-04.0-03-L-PV](#) [UPS-06-07.0-01-L-V-LC](#) [UPS-08-04.0-02-L-V](#) [UPS-02-01-01-T-RA](#) [UPS-02-04.0-01-L-V-LC](#) [UPS-02-04.0-01-L-V-TR](#) [UPS-04-01-01-T-RA-TR](#) [UPS-04-01-02-L-RA-LC](#) [UPS-06-01-01-L-RA-LC-TR](#) [UPS-06-04.0-01-L-V-TR](#) [UPS-06-07.0-02-L-V](#) [UPS-08-04.0-03-T-PV](#) [UPS-06-07.0-03-L-PV](#) [UPS-08-04.0-02-L-V-LC](#) [UPS-02-07.0-01-L-V-LC](#) [UPS-06-01-01-T-RA](#) [UPS-06-01-01-T-RA-LC](#) [UPS-06-01-01-T-RA-TR](#) [UPS-08-01-01-L-RA-LC-TR](#) [UPS-08-01-01-L-RA-TR](#) [UPS-08-01-01-T-RA](#) [UPS-02-01-01-T-RA-LC](#) [UPS-02-04.0-01-L-V-LC-TR](#) [UPS-08-07.0-03-L-PV](#) [UPS-02-01-02-L-RA-LC](#) [UPS-04-01-01-L-RA-LC](#) [UPS-04-01-01-T-RA-LC](#) [UPS-04-07.0-01-L-V-TR](#) [UPS-06-04.0-02-L-V](#) [UPS-06-04.0-02-L-V-TR](#) [UPS-08-04.0-01-L-V-LC](#) [UPS-02-07.0-03-L-PV](#) [UPS-04-01-02-L-RA-TR](#) [UPS-04-04.0-02-L-V-LC](#) [UPS-06-04.0-03-L-PV-TR](#) [UPS-08-04.0-03-L-PV-TR](#) [UPS-02-07.0-02-L-V](#) [UPS-08-01-02-L-RA-LC](#) [UPS-08-07.0-03-T-PV](#) [UPS-02-07.0-01-L-V-TR](#) [UPS-04-01-02-L-RA](#) [UPS-04-04.0-02-L-V](#) [UPS-04-07.0-02-L-V-TR](#) [UPS-08-01-01-T-RA-TR](#) [UPS-08-07.0-03-L-PV-TR](#) [UPS-02-04.0-02-L-V](#) [UPS-04-04.0-03-T-PV](#) [UPS-06-01-01-L-RA-LC](#) [UPS-06-07.0-01-L-V-TR](#) [UPS-08-01-01-L-RA](#) [UPS-02-01-01-T-RA-TR](#) [UPS-02-01-02-L-RA-LC-TR](#) [UPS-04-07.0-01-L-V-LC](#) [UPS-08-04.0-01-L-V-LC-TR](#) [UPS-08-04.0-01-L-V-TR](#) [UPS-02-01-01-L-RA](#) [UPS-02-04.0-03-L-PV](#) [UPS-02-04.0-03-T-PV](#) [UPS-04-04.0-01-L-V-LC](#) [UPS-04-04.0-01-L-V-LC-TR](#) [UPS-02-01-01-L-RA-TR](#) [UPS-02-07.0-02-L-V-LC-TR](#) [UPS-04-01-01-T-RA-LC-TR](#) [UPS-06-04.0-01-L-V-LC-TR](#) [UPS-08-01-01-T-RA-LC](#) [UPS-08-04.0-01-L-V](#) [UPS-08-04.0-03-L-PV](#) [UPS-04-04.0-03-L-PV-TR](#) [UPS-08-04.0-02-L-V-LC-TR](#) [UPS-02-01-02-L-RA](#) [UPS-04-07.0-02-L-V-LC-TR](#) [UPS-08-07.0-02-L-V-LC-TR](#) [UPS-06-07.0-02-L-V-LC](#) [UPS-02-04.0-02-L-V-LC-TR](#) [UPS-04-04.0-02-L-V-LC-TR](#) [UPS-06-04.0-02-L-V-LC-TR](#) [UPS-06-07.0-02-L-V-LC-TR](#)