


**Mini-Mac Applicator Specification Sheet** Air Feed-Mylar Tape Order No. 63885-8500

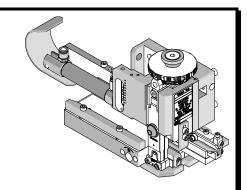

#### **FEATURES**

- Directly adapts to most crimp presses and automatic wire processors
- Applicator designed to industry standard mounting and shut height of 135.80mm (5.346")
- Conductor and insulation rings allow quick adjustment for conductor and insulation crimp height change
- Quick set-up time; plus the crimp height, track and feed adjustments can be set without removing the applicator from the crimp press

#### **SCOPE**

<u>Products</u>: VibraKrimp™ Quick Disconnect Terminals 18-22 AWG.

#### **Testing**

#### Mechanical

The tensile test, or pull test, is a means of evaluating the mechanical properties of the crimped connections. The following chart shows the UL and government specifications (MIL-T-7928) for various wire sizes. The tensile strength is shown in pounds. It indicates the minimum acceptable force to break or separate the terminal from the conductor.

Color Code	Wire Size (AWG)	*UL – 310
Red	22	8
Red	20	13
Red	18	20

<sup>\*</sup>UL - 310 - Quick Disconnects, Flag and Couplers

#### **Product List**

The following is a partial list of the product order numbers and their specifications that this tool is designed to run. Updates to this list are available on www.molex.com


Wire Size: 18 – 22 AWG 0.80 – 0.35 m <sup>2</sup>							
Terminal Order No.	Terminal	Wire Stri	p Length	Insulation Diameter Maximum			
Terminal Order No.	Eng No. (REF)	In	mm	ln	mm		
19018-0003	AA-4173-032T	.218	5.56	.125	3.20		
19018-0004	AA-4173T	.218	5.56	.125	3.20		
19018-0006	AA-4176T	.218	5.56	.125	3.20		
19018-0009	AA-4180-032T	.218	5.56	.125	3.20		
19018-0010	AA-4180T	.218	5.56	.125	3.20		

**UNCONTROLLED COPY** Doc No: ATS-638858500 Release Date: 04-22-09 Page 1 of 6 Revision Date: 04-22-09

Revision: A

## **DEFINITION OF TERMS**

The following illustrations are a generic terminal representation and not an exact image of any terminal listed in the scope.

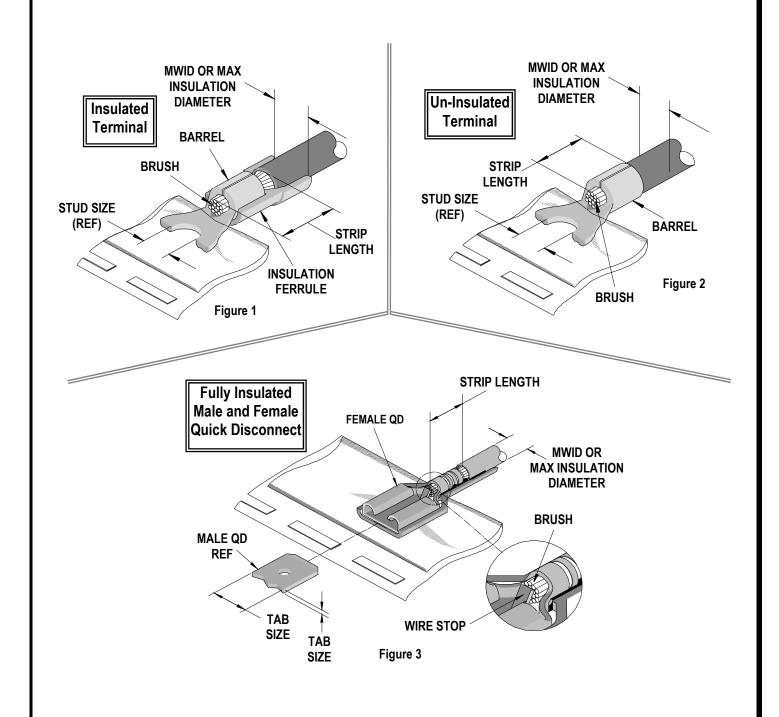

Doc No: ATS-638858500 Revision: A Release Date: 04-22-09 Revision Date: 04-22-09

#### **Tool Calibration**

To recalibrate this applicator, make sure the power is completely shut off on the press.

The Mini-Mac applicator must be properly installed in the press.


Crimping dies must be properly installed in the Mini-Mac applicator.

The recommended method of measuring the crimp height of the conductor dies is the soft metal slug method, (See Figure 4).

- 1. The slug must have a diameter 0.51mm (.020") larger than the "X" No Go dimension before crimping.
- 2. Place the soft metal slug (solder) into the nest of the bottom die and crimp (by hand cycling the press) similar to a terminal. The crimp height can be measured with a blade type micrometer or dial caliper, (Dimension "X").
- 3. Adjustment of the crimp height can be accomplished by indexing the conductor cam. The letter "A" gives the loosest position and "K" gives the tightest position. A total adjustment of 0.50mm (.020") can be achieved by adjusting the conductor cam.

Note: If the crimp height is too tight on the setting "A", check the shut height of the press. See the Industrial Mini-Mac Applicator Manual Section 2.1 for adjustments.

#### **CRIMP SPECIFICATIONS**

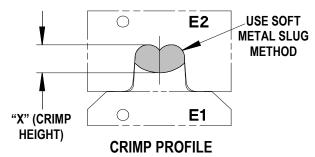

Use soft metal slug (solder) method to measure the "X" dimension. Verify tooling crimp height calibration by referring to the Go/No Go dimensions shown in the chart below.

Figure 4

	Wire Range		"X" Dimension Conductor Crimp						
			Me	Mean Go		ìo	No Go		Crimp Inspection Marking
	AWG	mm²	ln	mm	ln	mm	In	mm	
	18 - 22	0.80 - 0.35	.052	1.32	.049	1.24	.059	1.50	N/A

**UNCONTROLLED COPY** Doc No: ATS-638858500 Release Date: 04-22-09 Page 3 of 6


Revision Date: 04-22-09 Revision: A

# **PARTS LIST**

Mini-Mac Applicator 63885-8500									
Item	Order No	Engineering No.	Description	Quantity					
	Perishable Tooling								
	63885-8570	63885-8570	Tool Kit (All "Y" Items)	REF					
1	63465-0067	63465-0067	Conductor Punch	1 Y					
2	63464-0058	63464-0058	Conductor Anvil	1 Y					
3	63463-0043	63463-0043	Insulation Punch	1 Y					
4	63462-0046	63462-0046	Insulation Anvil	1 Y					
	Other Components (Ref. 850050)								
5	63443-0021	63443-0021	Lower Tooling Key	1					
6	63466-0912	63466-0912	Anvil Mount	1					
7	63466-0913	63466-0913	Terminal Support	1					
8	63466-0921			1					
9	63600-1290	63600-1290	Washer	1					
10	63890-0866	63890-0866	Collar-6.4mm Long	1					
11	63890-0867	0-0867 63890-0867 Collar-7.7mm Long		1					
		F	rame						
12	63801-3301	63801-3301	01-3301 Air Feed Applicator Frame Head						
13	63801-3281	63801-3281	Base	REF					
14	63801-5850	63801-5850 Track Assembly		REF					
15	63801-3390 63801-3390 Air Kit		REF						
		На	ırdware						
16	N/A	N/A	M3 by 12 Long SHCS	1**					
17	N/A	N/A	M4 by 10 Lg SHCS	2**					
18	N/A	N/A	M4 by 16 Long SHCS	1**					
19	N/A	N/A	M4 by 45 Long SHCS	1**					
20	N/A	N/A	M8 by 30 Long BHCS	1**					
21	N/A	N/A	3mm by 6 Long Roll Pin						
**	** Available from an industrial supply company such as MSC (1-800-645-7270).								

<u>Note:</u> Crimp profiles used in 63885-8500 are equivalent to 19027-0046 / ATP-AA-475 (UL file number E32244).

Doc No: ATS-638858500 Release Date: 04-22-09 **UNCONTROLLED COPY** Page 4 of 6 Revision: A Revision Date: 04-22-09

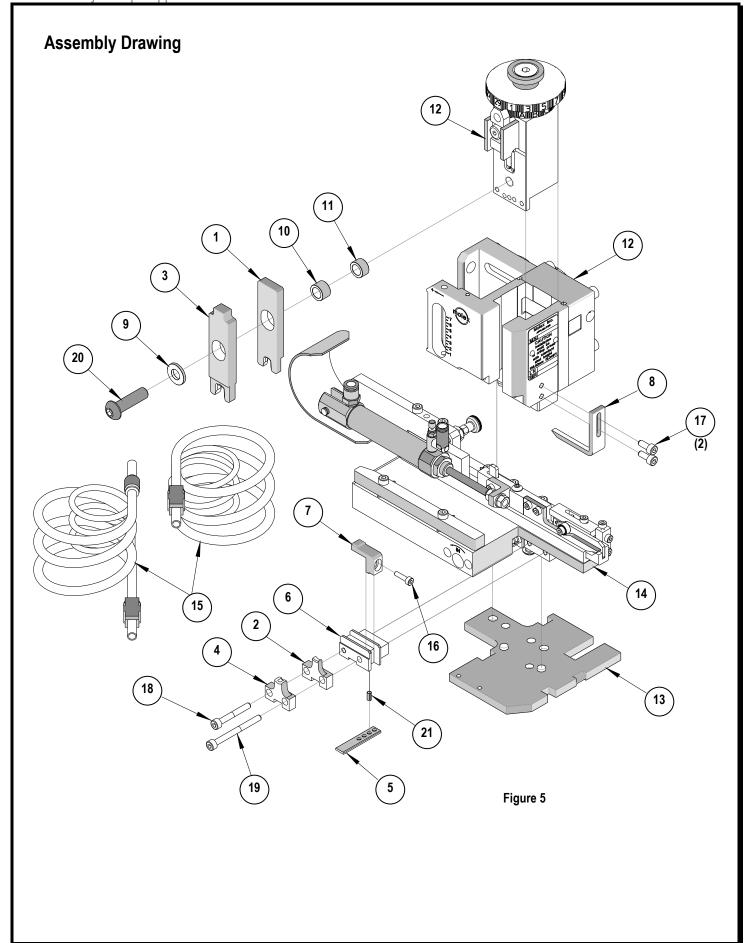

Doc No: ATS-638858500 Revision: A Release Date: 04-22-09 Revision Date: 04-22-09 **UNCONTROLLED COPY** 

#### **NOTES**

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press with applicator before crimping under power. Check that all screws are tight.
- 3. Slugs, terminals, dirt, and oil should be kept clear of work area.
- 4. Wear safety glasses at all times.
- 5. For recommended maintenance refer to the Mini-Mac Applicator Manual (Document no. 63880-0000).

**CAUTION**: This applicator should only be used in a press with a shut height of 135.80 mm (5.346"). Tooling damage could result at a lower setting.

**CAUTION**: To prevent injury, never operate this applicator without the guards supplied with the press or wire-processing machine in place. Reference the press or wire processing manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

## **Contact Information**

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

Americas Headquarters 1-800-78MOLEX amerinfo@molex.com

Far East North Headquarters Lisle, Illinois 60532 U.S.A. Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com

Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com

Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

**UNCONTROLLED COPY** Doc No: ATS-638858500 Release Date: 04-22-09 Page 6 of 6 Revision Date: 04-22-09 Revision: A

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

# Molex:

63462-0046 63463-0043 63464-0058 63465-0067 63885-8570