

Datasheet

mFlexPIFA

2.4 – 2.5 GHz mFlexPIFA +2 dBi Antenna, 100 mm cable length with U.FL or MHF4L connector

Version 2.2



REVISION HISTORY

Version	Date	Notes	Contributors	Approver
2.0	15 Aug 2017	Initial Release on website		Sue White
2.1	20 Mar 2018	Added new antenna connector information; transitioned to new template; updated contact information; updated mounting guidelines		Jay White
2.1	30 Apr 2018	Added X,Y,Z Axis to test setup chamber pictures.	Robert Gosewehr	
2.2	21 Sep 2018	Updated Legal Statement	Robert Gosewehr	

CONTENTS

1	Ordering Information	4
2	Key Features.....	4
3	Specifications	4
4	Physical Dimensions	5
5	Test Setup	6
6	Flat Surface Antenna Measurements.....	7
	Return Loss	7
7	Flat Surface Antenna Radiation Performance.....	8
7.1	Antenna Setup	8
7.2	Results – Flat Surface.....	9
	2400 MHz	9
	2440 MHz	11
	2480 MHz	13
8	Curved Surface Antenna Radiation Performance	15
8.1	Antenna Setup	15
8.2	Results – Curved Surface	16
	2440 MHz	16
9	Optimal Installation Guide	18
9.1	Flex Limits of the mFlexPIFA	20
10	Product Revision History	21
11	Contacting Laird	21

1 ORDERING INFORMATION

Table 1: Ordering information

Order Number	Description
001-0030	mFlexPIFA – 2.4 GHz embedded metal FlexPIFA antenna, 100 mm cable length w/U.FL connector
EFA2400A3S-10MH4L	mFlexPIFA – 2.4 GHz embedded metal FlexPIFA antenna, 100 mm cable length w/MHF4L connector

2 KEY FEATURES

- Designed to be installed directly on metal
- Can be installed on different conductive surfaces and thicknesses
- Can be installed on flat or curved surfaces
- Quick and easy Installation
- Adhesive holds to surface during humidity exposure and hot/cold cycles
- RoHS compliant

3 SPECIFICATIONS

Table 2: mFlexPIFA specifications

Specification	Value
Peak Gain	+2 dBi
Average Gain	>-4.2 dBi
Impedance	50 ohms
Type	Flexible Planar Inverted F Antenna (FlexPIFA)
Polarization	Linear
VSWR	≤ 3.0:1, 2400 - 2480 MHz
Frequency	2400 - 2480 MHz
Weight	1.8 g
Size	25.4 mm × 23.4 mm × 2.5 mm
Antenna Color	Clear Yellow
Adhesive	3M 100MP
Operating Temp	-40°C to +85°C
Connector Height	U.FL: 2.5 mm maximum
Connector Height	MHF4L: 1.7 mm maximum

4 PHYSICAL DIMENSIONS

Note: All measurements are in millimetres (mm).

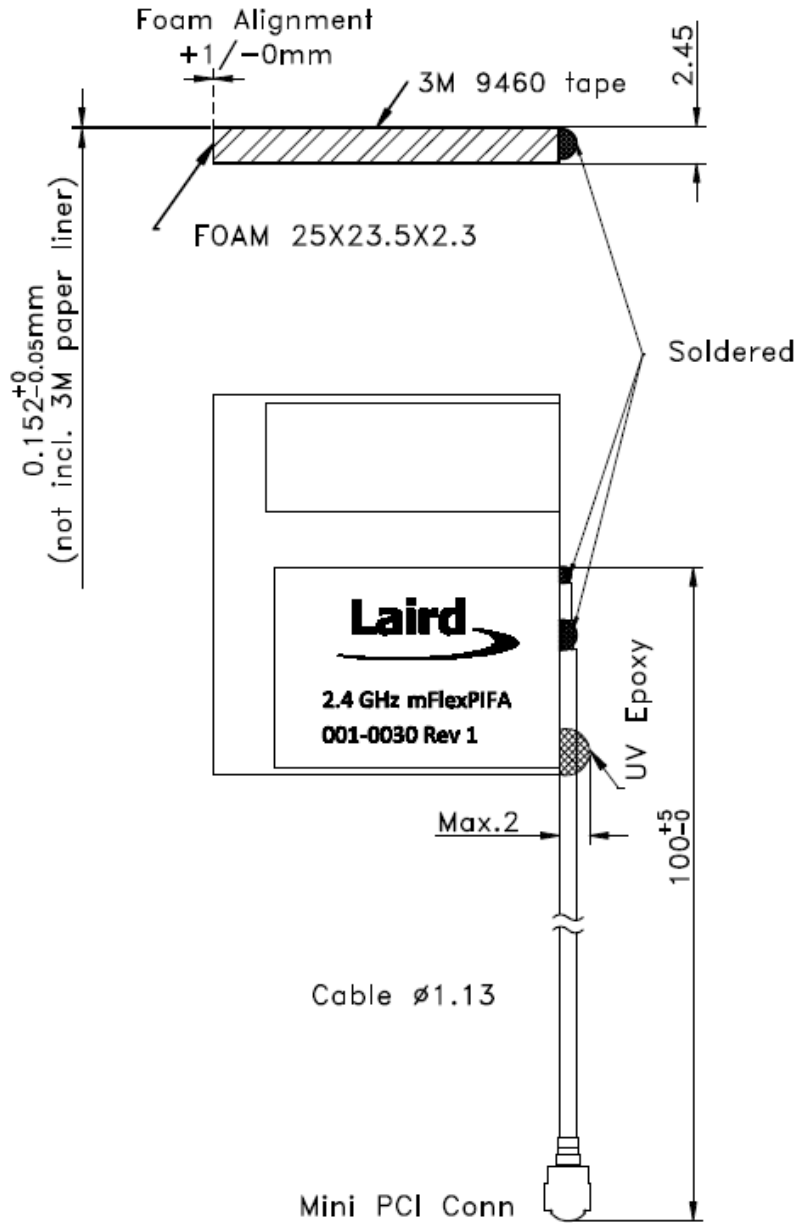


Figure 1: Physical dimensions

5 TEST SETUP

Antenna measurements such as VSWR are measured with an Agilent E5071C Vector Network Analyzer. Radiation patterns are measured with a CMT Planar 804/1 Vector Network Analyzer in a Howland Company 3100 Chamber equivalent. Phase Center is 9 inches above the Phi positioner.

Flat surface measurements are done with the antenna centered on a 100 x 100 mm, 0.35 mm thick brass plate. Curved surface measurements are taken by placing the antenna on a curved surface made of 0.35 mm thick brass.

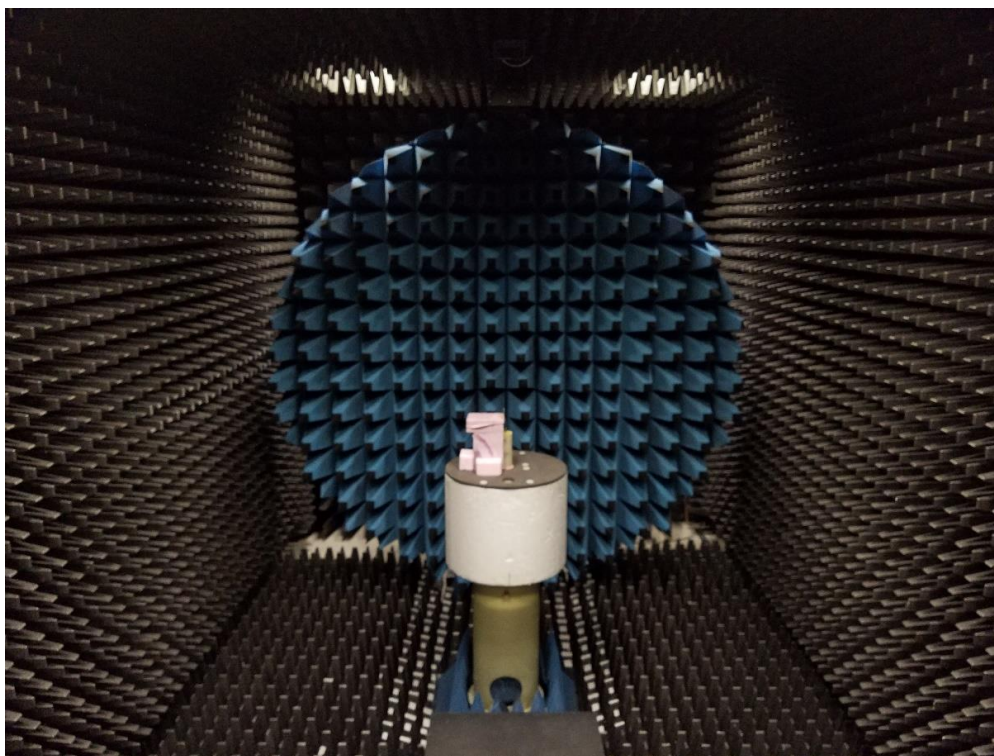


Figure 2 Antenna Chamber

6 FLAT SURFACE ANTENNA MEASUREMENTS

Return Loss

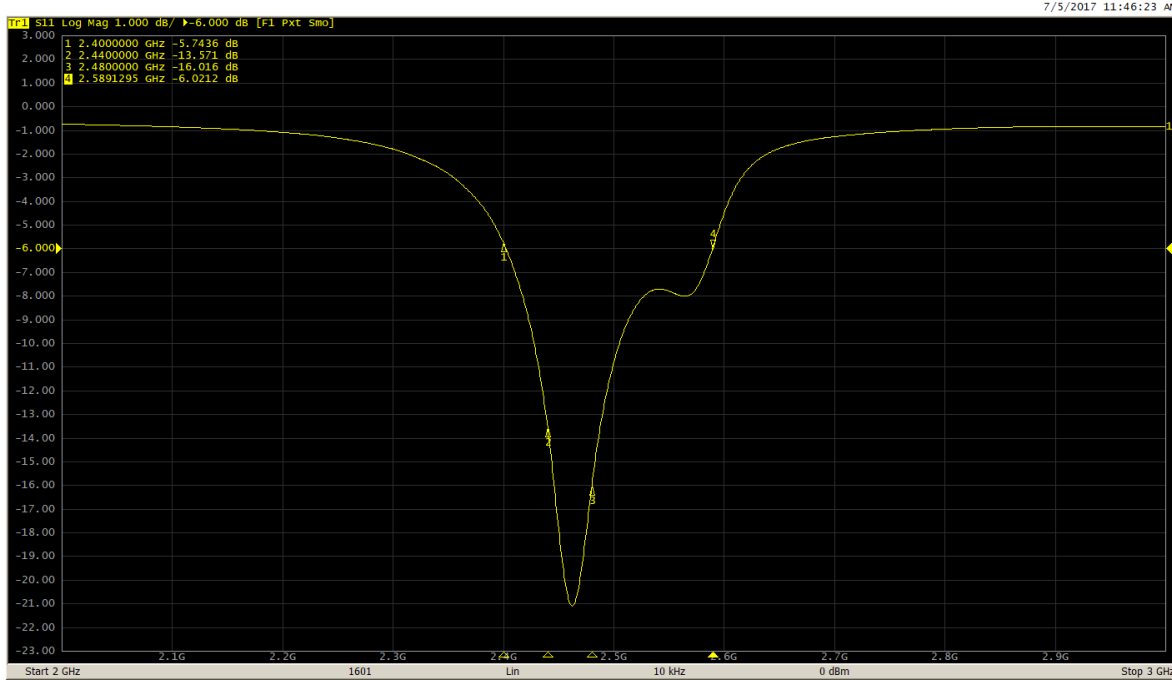


Figure 3: Return loss measured on a 0.35 mm thick, 100 x 100 mm brass plate

7 FLAT SURFACE ANTENNA RADIATION PERFORMANCE

7.1 Antenna Setup

The mFlexPIFA is centered on a 100 x 100 mm brass plate.

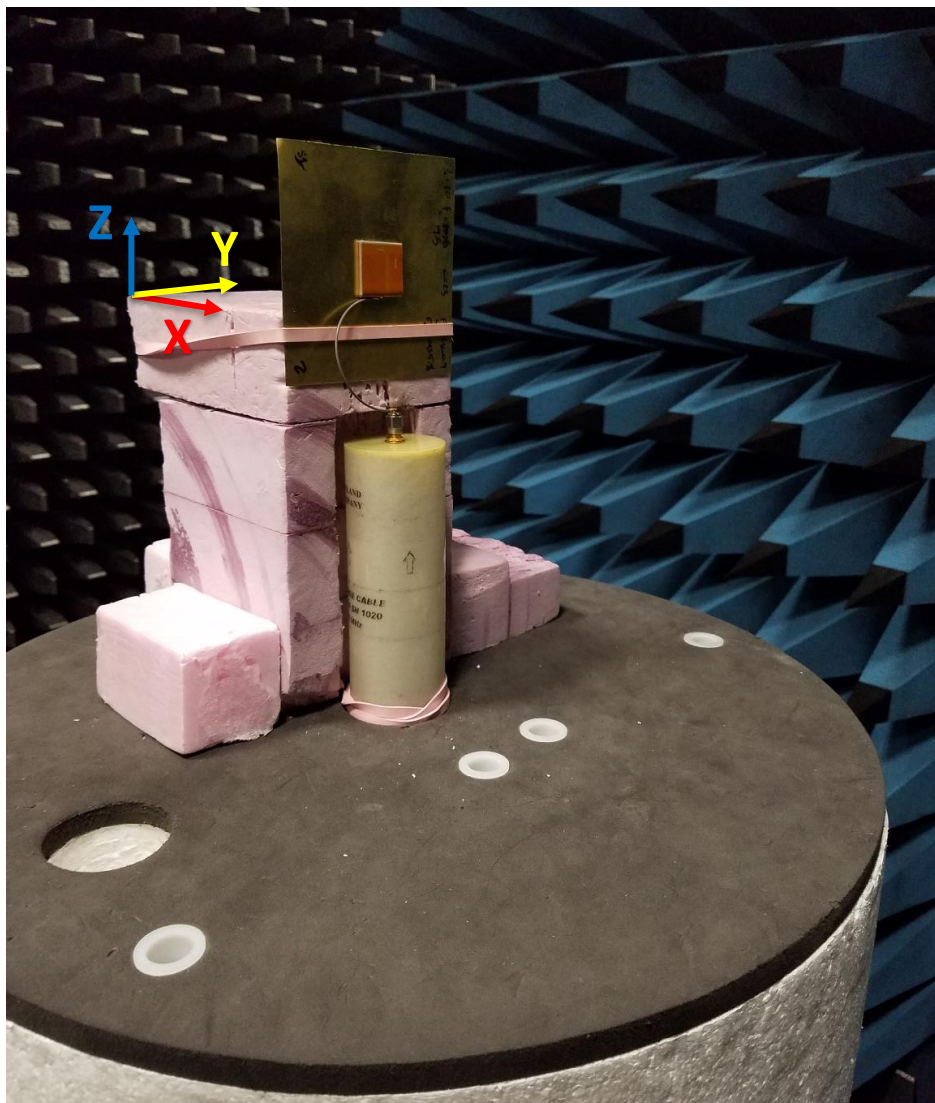


Figure 4: Flat surface setup

7.2 Results – Flat Surface

2400 MHz

Azimuthal Conical Cuts at 2400 MHz

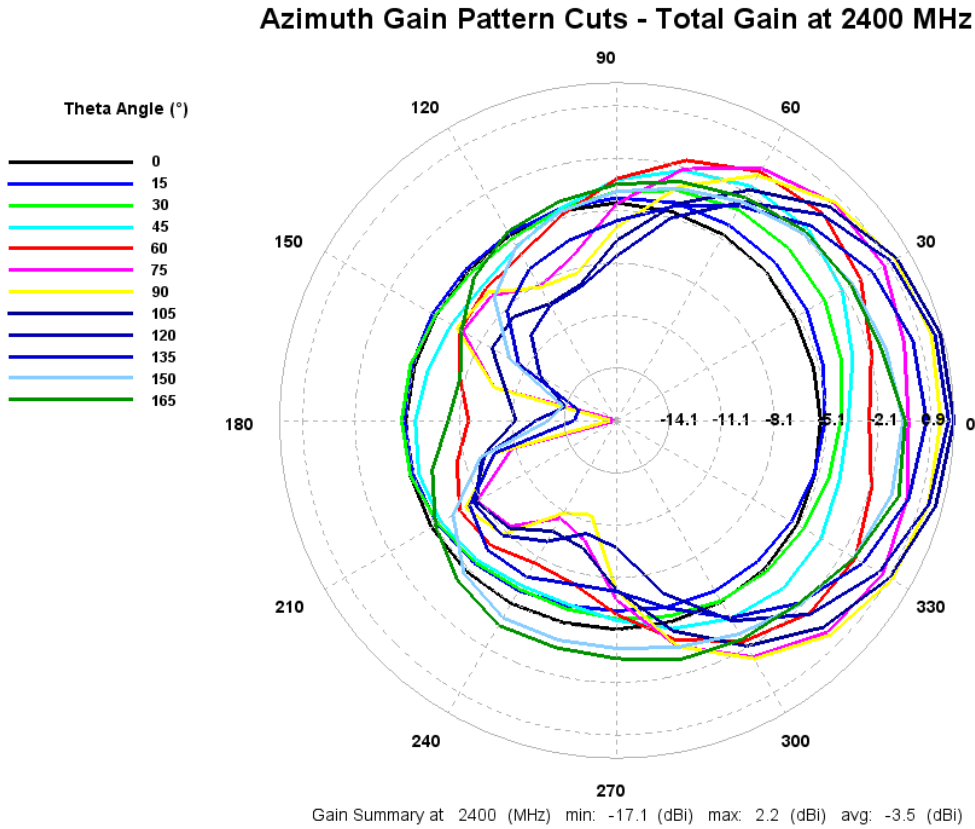


Figure 5: Total gain pattern – 2400 MHz

3D Plots at 2400 MHz

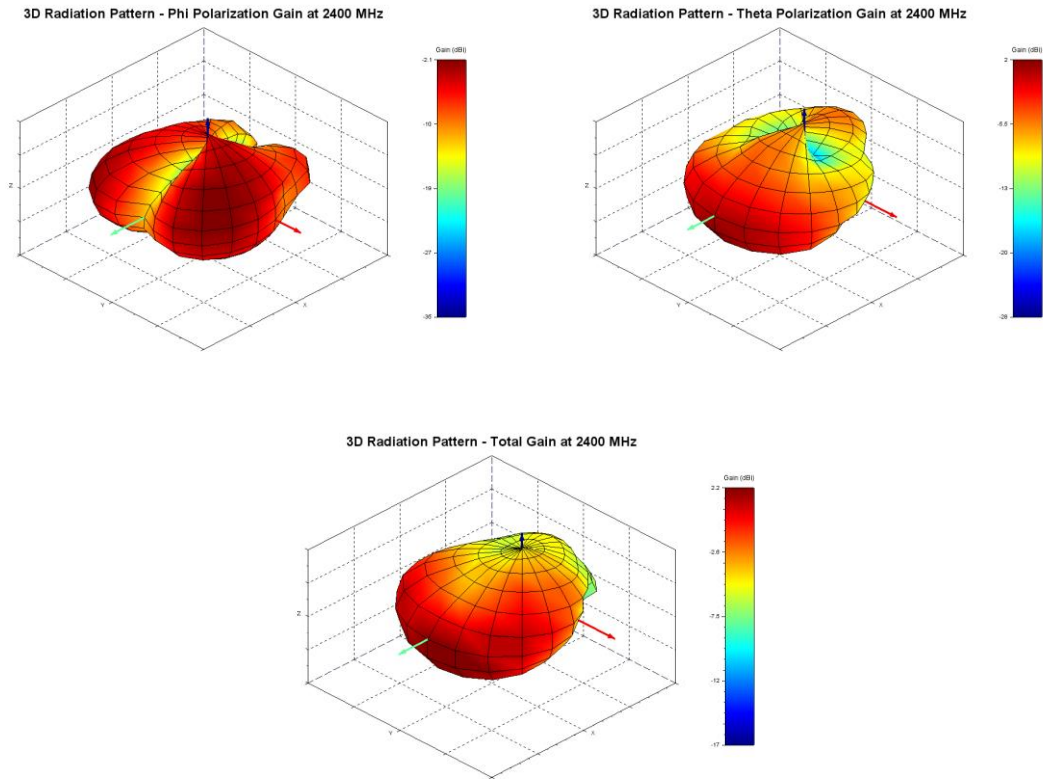


Figure 6: Phi, theta, and total gain plots – 2400 MHz

2440 MHz

Azimuthal Conical Cuts at 2440 MHz

Azimuth Gain Pattern Cuts - Total Gain at 2440 MHz

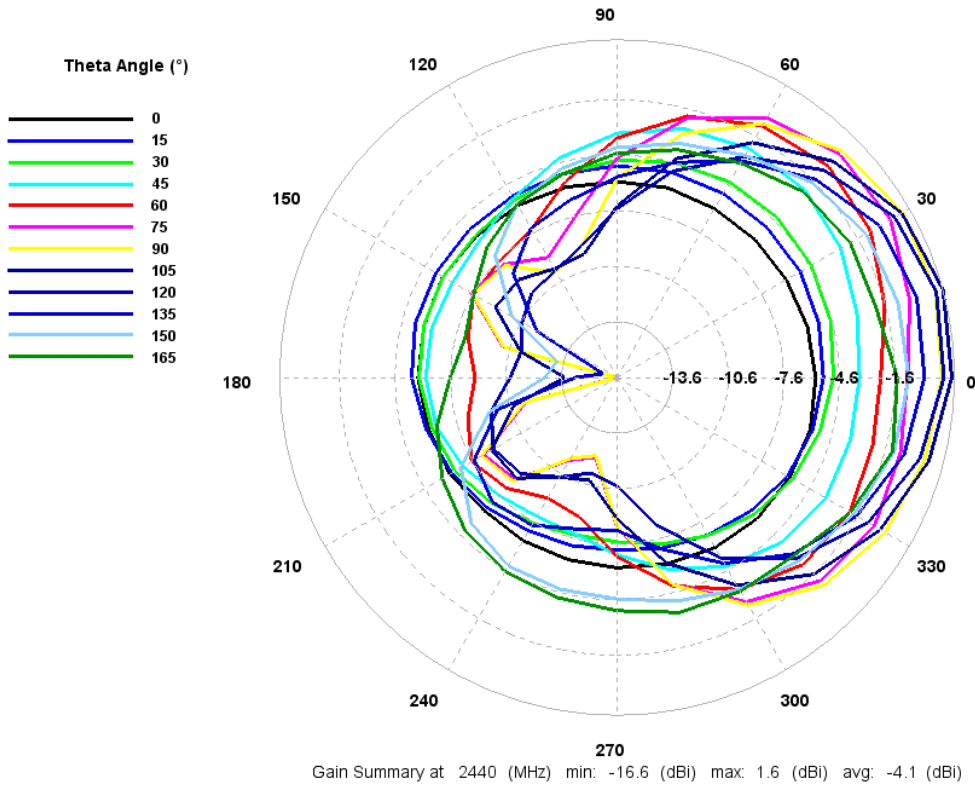


Figure 7: Total gain pattern – 2440 MHz

3D Plots at 2440 MHz

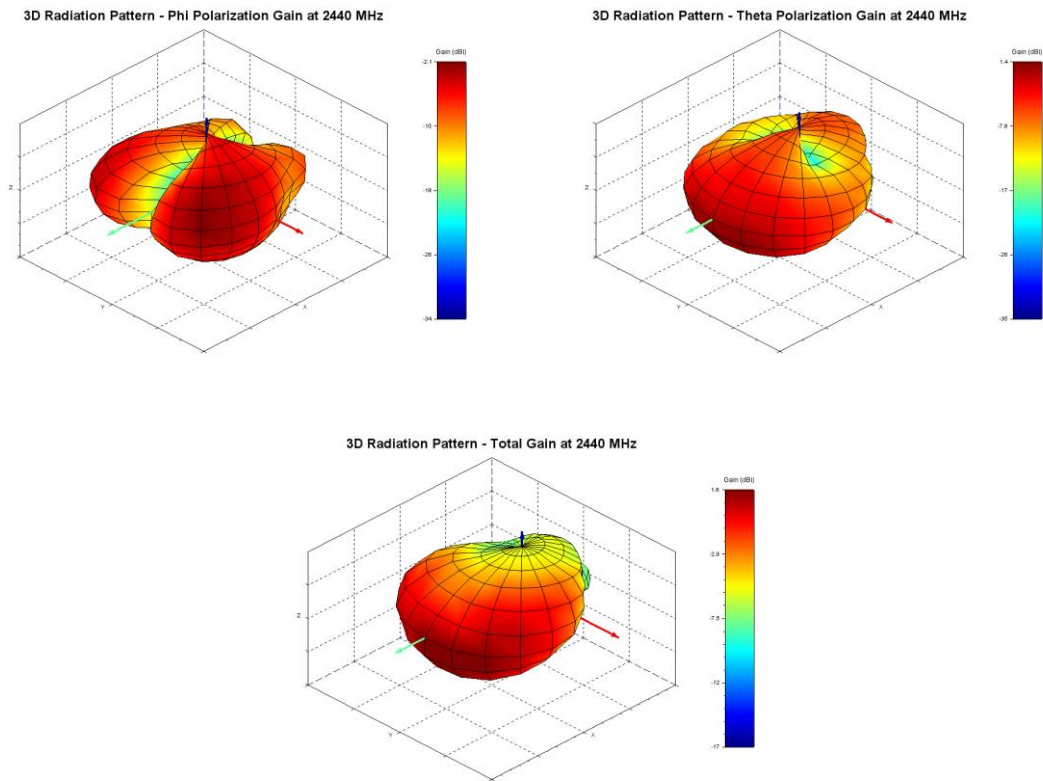


Figure 8: Phi, theta, and total gain plots – 2440 MHz

2480 MHz

Azimuthal Conical Cuts at 2480 MHz

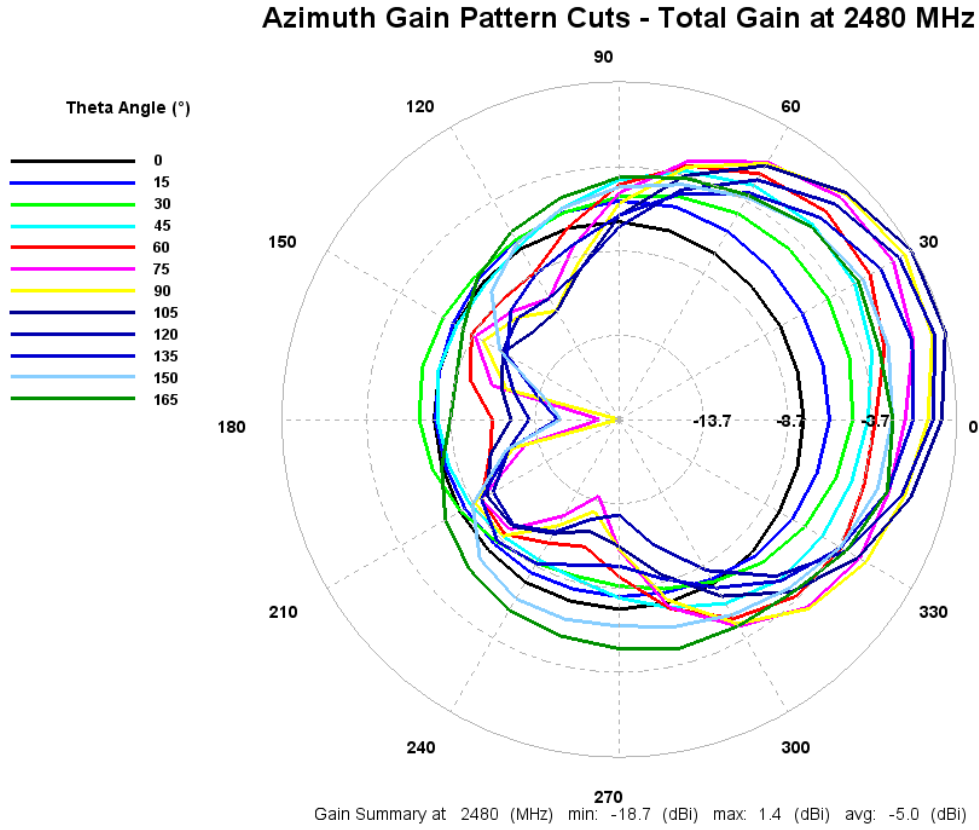


Figure 9: Total gain pattern – 2480 MHz

3D Plots at 2480 MHz

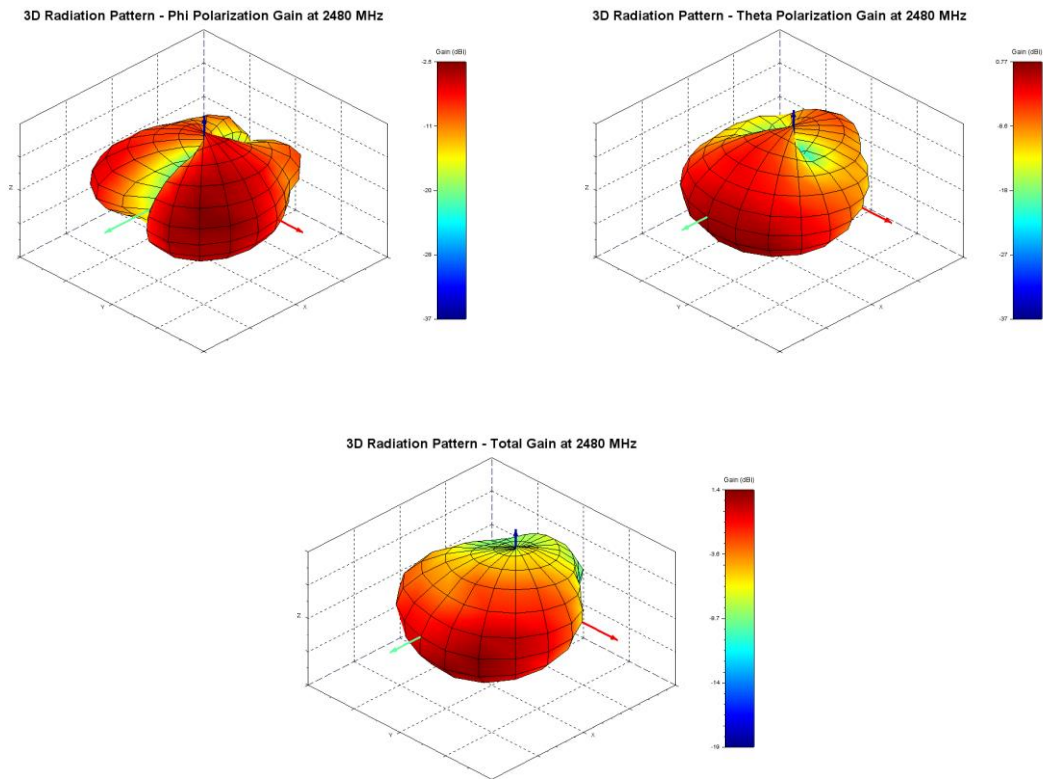


Figure 10: Phi, theta, and total gain plots – 2480 MHz

8 CURVED SURFACE ANTENNA RADIATION PERFORMANCE

8.1 Antenna Setup

The mFlexPIFA is placed on the outside of a 60-mm outer diameter metal tube.

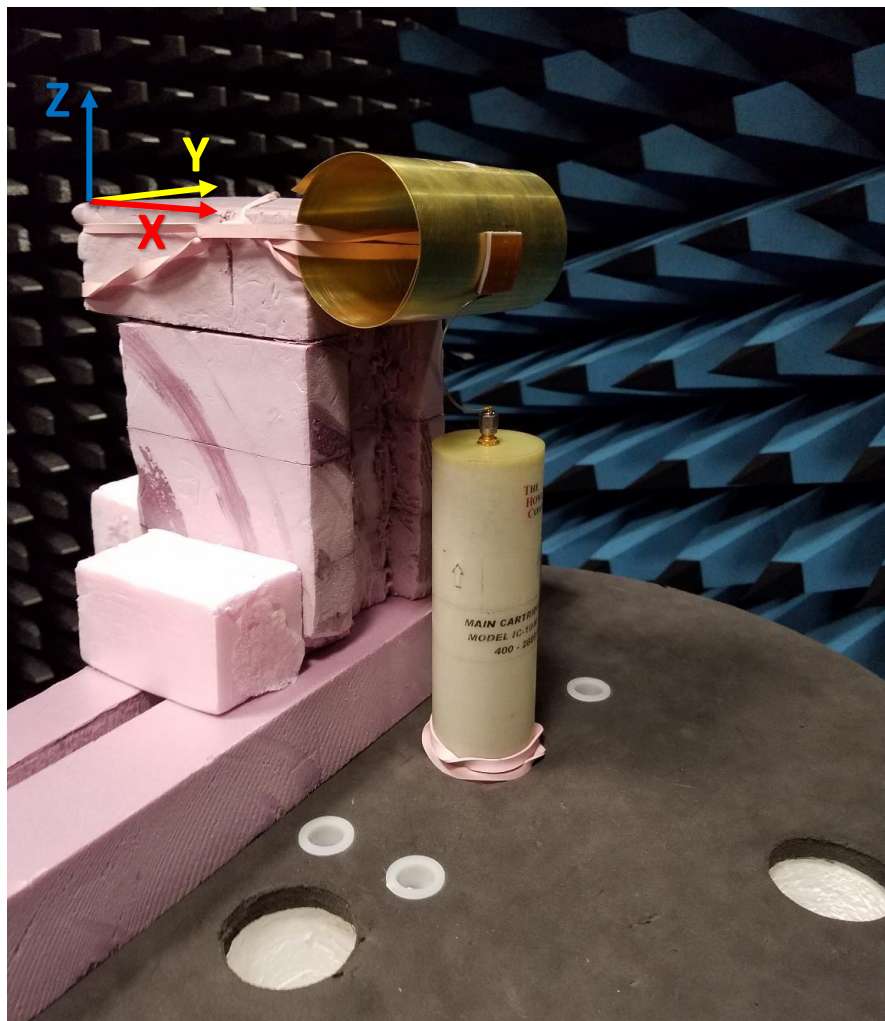


Figure 11: Convex curve setup

8.2 Results – Curved Surface

2440 MHz

Azimuthal Conical Cuts at 2440 MHz

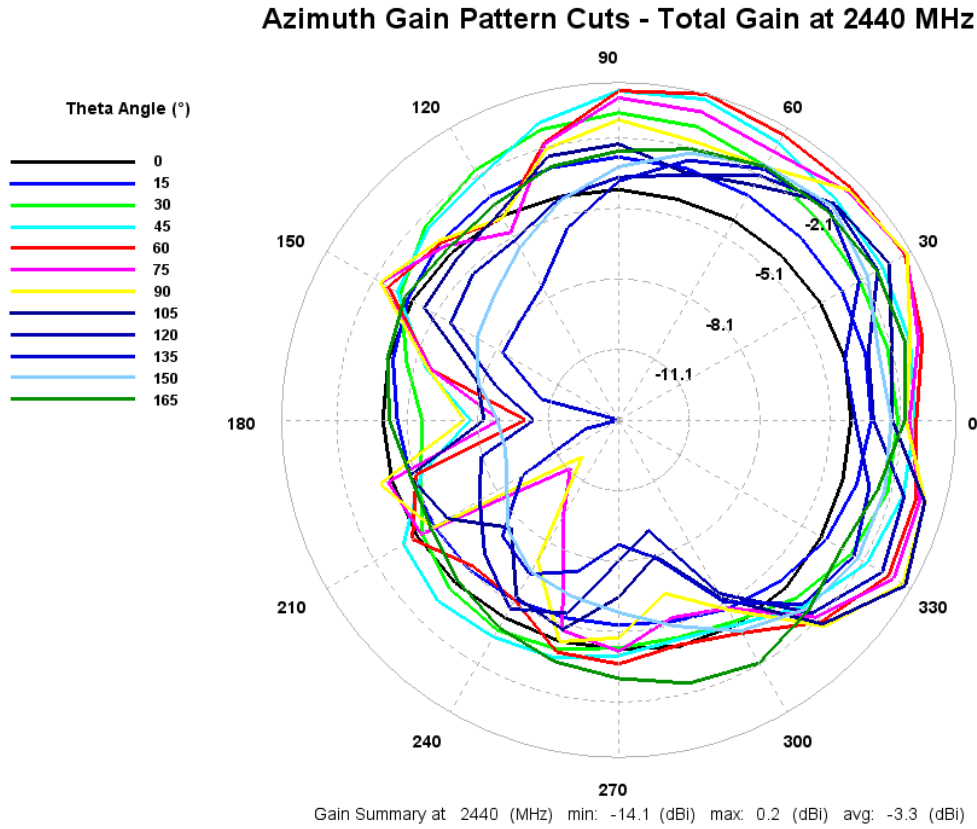


Figure 12: Total gain pattern – 2440 MHz

3D Plots at 2440 MHz

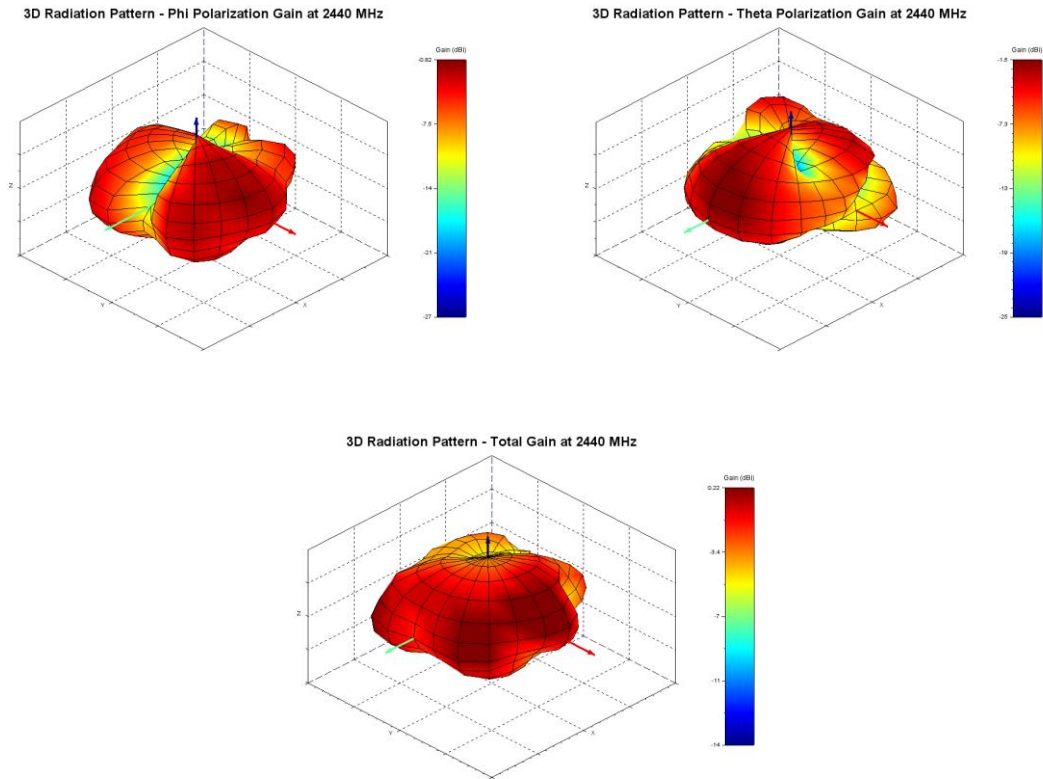


Figure 13: Phi, theta, and total gain plots – 2440 MHz

9 OPTIMAL INSTALLATION GUIDE

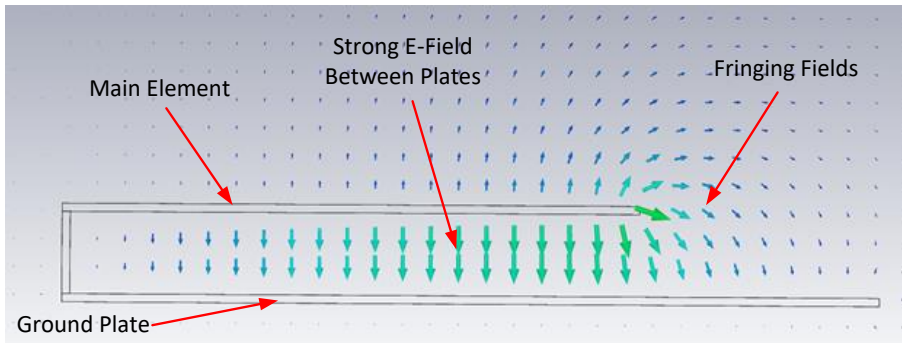


Figure 14: E-field radiation from the FlexPIFA. Taken from CST simulation

Keep the main element clear of any non-metal objects (such as plastics) on top of it by at least three millimeters (see Figure 15).

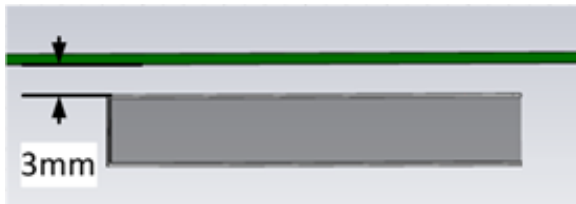


Figure 15: Top clearance

Similarly, keep the two long sides of the mFlexPIFA clear of any non-metal objects by at least two millimeters (see Figure 16). For metal objects, the top side of the mFlex should be kept clear by at least two millimeters and the bottom side of the mFlex at least 12 millimeters (see Figure 17). Images below are based on the 2.4GHz FlexPIFA (Laird PN: 001-0014) and used for reference only.

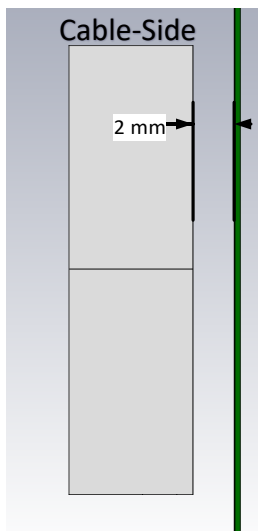


Figure 16: Non-metal side clearance (Top View)

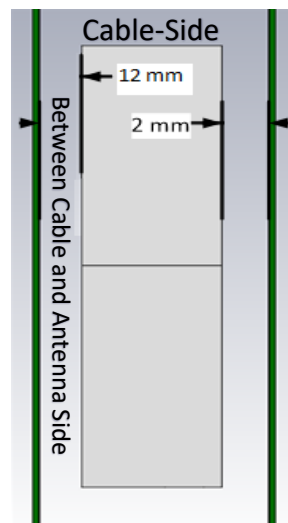


Figure 17: Metal side clearance (Top View)

A one-millimeter clearance should be observed from the ground wall to any non-metal object (Figure 18). A 15-millimeter clearance should be observed for metal objects (Figure 19).

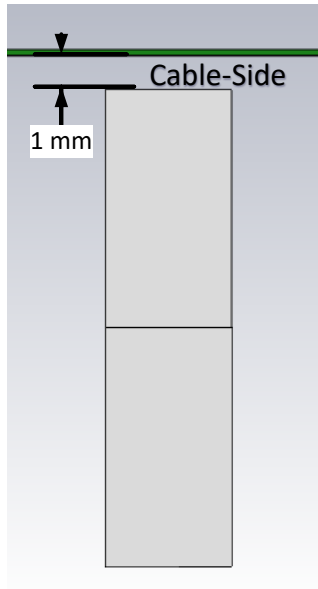


Figure 18: Non-metal ground wall clearance

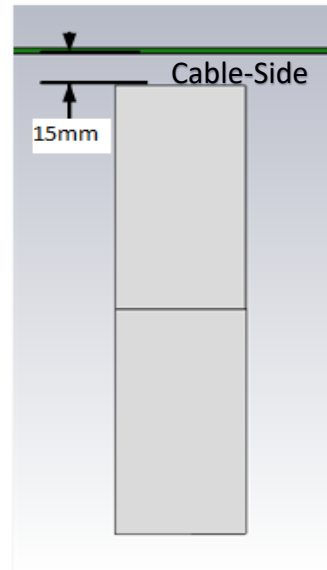


Figure 19: Metal ground wall clearance

Important! Mounting the mFlexPIFA in a situation that does not allow for these clearance recommendations may change the gain characteristics stated in the datasheet, which could impact overall range of the wireless system.

The ideal material for the mFlexPIFA to be mounted on (for maximum performance) is brass. However, as previously mentioned, the mFlexPIFA can tolerate other metallic surfaces and thicknesses and still radiate effectively. Depending on the type of material, the mFlexPIFA may be detuned.

The coaxial cable feeding the mFlexPIFA should be routed away from the antenna. Do not run the coaxial cable over the top of the mFlexPIFA or near the tip of the main element. The cable should be routed perpendicular to the side of the mFlexPIFA (this is the way the cable comes assembled) or away from the ground wall. These options are shown in Figure 20.

Perpendicular to the Side



Away from the Ground Wall



Figure 20: Recommended cable routing

As with any antenna, do not place objects near the antenna (except as described in the next section). Other objects, such as an LCD display, placed near the antenna may not affect its tuning but can distort the radiation pattern. Materials that absorb electromagnetic fields should be kept away from the antenna to maximize performance.

The following are some common things to keep in mind when placing the antenna:

- Wire routing
- Speakers – These generate magnetic fields
- Battery location
- Proximity to human body
- Display screen – These absorb radiation

9.1 Flex Limits of the mFlexPIFA

One of the unique features of the mFlexPIFA is its ability to flex. However, due to the adhesive, there are limits to how much the antenna can be flexed and still remain secured to the device. The mFlexPIFA should not be flexed in a convex position with a radius less than 60 millimeters. Going smaller than this may result in the antenna peeling off the surface over time. Should a tighter radius of curvature be required, we recommend that you contact Laird/LSR Design Services for assistance.



Figure 21: Convex mounted

We do not recommend mounting the mFlexPIFA in a metal-enclosed concave position. In this scenario, the limiting factor is performance. The ground plate of the antenna is pressed closer to the main element. The fringing fields developing off the end of the element are responsible for most of the radiation. In a concave position, the fringing fields are adversely affected and gain suffers. This can also potentially create a Faraday's cage and cancel most of the RF radiation from the antenna.

If a concave position is required, we recommend that you contact Laird/LSR Design Services for assistance.

Note: The mFlexPIFA is not designed to be twisted or crumpled. The adhesive back should lay flush with the surface on which it is mounted.

10 PRODUCT REVISION HISTORY

Rev 1: Initial Production Release



11 CONTACTING LAIRD

Headquarters

Laird
W66 N220 Commerce Court
Cedarburg, WI 53012-2636
USA
Tel: 1(262) 375-4400
Fax: 1(262) 375-4248

Website:

www.lairdtech.com

Technical Support:

ews.support@lairdtech.com

Sales Contact:

cs-sales@lairdtech.com

© Copyright 2018 Laird. All Rights Reserved. Patent pending. Any information furnished by Laird and its agents is believed to be accurate and reliable. All specifications are subject to change without notice. Responsibility for the use and application of Laird materials or products rests with the end user since Laird and its agents cannot be aware of all potential uses. Laird makes no warranties as to non-infringement nor as to the fitness, merchantability, or sustainability of any Laird materials or products for any specific or general uses. Laird, Laird Technologies, Inc., or any of its affiliates or agents shall not be liable for incidental or consequential damages of any kind. All Laird products are sold pursuant to the Laird Terms and Conditions of Sale in effect from time to time, a copy of which will be furnished upon request. When used as a tradename herein, Laird means Laird Limited due to the acquisition by Advent or one or more subsidiaries of Laird Limited. Laird™, Laird Technologies™, corresponding logos, and other marks are trademarks or registered trademarks of Laird. Other marks may be the property of third parties. Nothing herein provides a license under any Laird or any third party intellectual property right.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Laird:](#)

[001-0030](#)