


T2 Terminator Tooling Application Tooling Specification Sheet Order No. 63858-5000

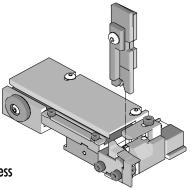

FEATURES

- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- It is ideally suited for mid-volume bench operations
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE

Products: 2.50mm (.098") Pitch Board-In Terminal 22-28 AWG

Terminal Series No.	Wi	re Size	Insulation	Diameter	Strip Length		
Terminur Jeries No.	AWG	mm ²	mm	ln.	mm	ln.	
35047	22-28	0.08-0.32	1.15-1.90	.045075	3.00-3.50	.118138	
Note: Terminal will accommodate UL1007 and UL1569 Wires							
Terminals must be wound for a left to right feed applicator. Terminals 35047-9802 are wound in the opposite direction so they must be rewound to run through this applicator.							

DEFINITION OF TERMS BEND UP ROLLING SEAM BELL CONDUCTOR BRUSH MOUTH CRIMP INSULATION CRIMP **TWISTING STRIP** LENGTH BEND DOWN **CUT-OFF CRIMP HEIGHT** TAB

The above terminal drawing is a generic terminal representation. It is not an image of any terminal listed in the scope.

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off 1	lab Max.	Conductor Brush		
Terminal Series No.	mm	ln.	mm	In.	mm	In.	
35047	0.20-0.50	.008020	0.30	.012	0.00-1.40	.000055	

	Bend up	Twist Roll		Punch Width (Ref)				Seam	
Terminal Series No.	Della oh 1	Bend down	IWISI	NOII	Cond	uctor	Insu	ation	Seam shall not be
	Deg	jree	Deg	ree	mm	In	mm	In	open and no wire allowed
35047	3	3	3	3	1.40	.055	1.90	.075	out of the crimping area

After crimping, the crimp profiles should measure the following:

Terminal Series No.	Wire Size		Conductor					
			Crimp	Height	Crimp Width (Ref)			
	AWG	mm ²	mm	In.	mm	In.		
35047	22	0.32	0.82-0.87	.032034	1.40 +/- 0.10	.055 +/004		
35047	24	0.20	0.75-0.80	.029031	1.40 +/- 0.10	.055 +/004		
35047	26	0.13	0.70-0.75	.027029	1.40 +/- 0.10	.055 +/004		
35047	28	0.08	0.66-0.71	.026028	1.40 +/- 0.10	.055 +/004		


Terminal Series No. Wire S	Wire	Siza		Pull Force Min.				
	JILC	Crimp Height (Ref)		Crimp Wi				
	AWG	mm ²	mm	ln.	mm	In.	N	Lb.
35047	22	0.32	1.60	.063	1.90 +/- 0.10	.075 +/004	39.1	8.8
35047	24	0.20	1.50	.059	1.90 +/- 0.10	.075 +/004	29.3	6.6
35047	26	0.13	1.45	.057	1.90 +/- 0.10	.075 +/004	19.6	4.4
35047	28	0.08	1.40	.055	1.90 +/- 0.10	.075 +/004	9.8	2.2


* <u>Tool Qualification Notes:</u>

- 1. This Terminator was qualified to the above specifications with UL1007 wire.
- 2. Pull Force should be measured with no influence from the insulation crimp.
- 3. The above specifications are guidelines to an optimum crimp.

PARTS LIST

tem	Order No	Engineering No.	Description	Quantity
		Perishable	Tooling	
	63858-5070	63858-5070	Tool Kit (All "Y" Items)	REF
1	63444-1407	63444-1407	Conductor Punch	1 Y
2	63445-1430	63445-1430	Conductor Anvil	1 Y
3	63446-1906	63446-1906	Insulation Punch	1 Y
4	63445-1906	63445-1906	Insulation Anvil	1 Y
5	63443-0002	63443-0002	Cut-Off Plunger Front	1 Y
6	63443-0012	63443-0012	Plunger Retainer Front	1 Y
		Other Com	ponents	
7	11-24-1067	4996-4	Cut-off Plunger Spring	1
8	11-40-4039	8302-5	Plunger Striker Front]
9	63443-0021	63443-0021	Lower Tooling Key]
10	63443-6003	63443-6003	Rear Cover	1
11	11-18-4083	60707-8	Front Cover	1
12	63443-2430	63443-2430	Anvil Mount	1
13	63443-4005	63443-4005	Wire Stop]
14	63443-0009	63443-0009	Scrap Chute Front]
		Fram	e	
15	63800-8500	63800-8500	T2 Terminator	1
		Hardw	are	
16	N/A	N/A	M3 by 6Lg. SHCS	2**
17	N/A	N/A	M4 by 6Lg. SHCS]**
18	N/A	N/A	M4 by 12Lg. BHCS	2**
19	N/A	N/A	M4 by 16Lg SHCS]**
20	N/A	N/A	M4 by 20Lg. SHCS]**
21	N/A	N/A	M4 by 50Lg. SHCS]**
22	N/A	N/A	3MM by 6Lg. Roll Pin]**
23	N/A vailable from an	N/A	#10-32 by 3/8"Lg. BHCS]**

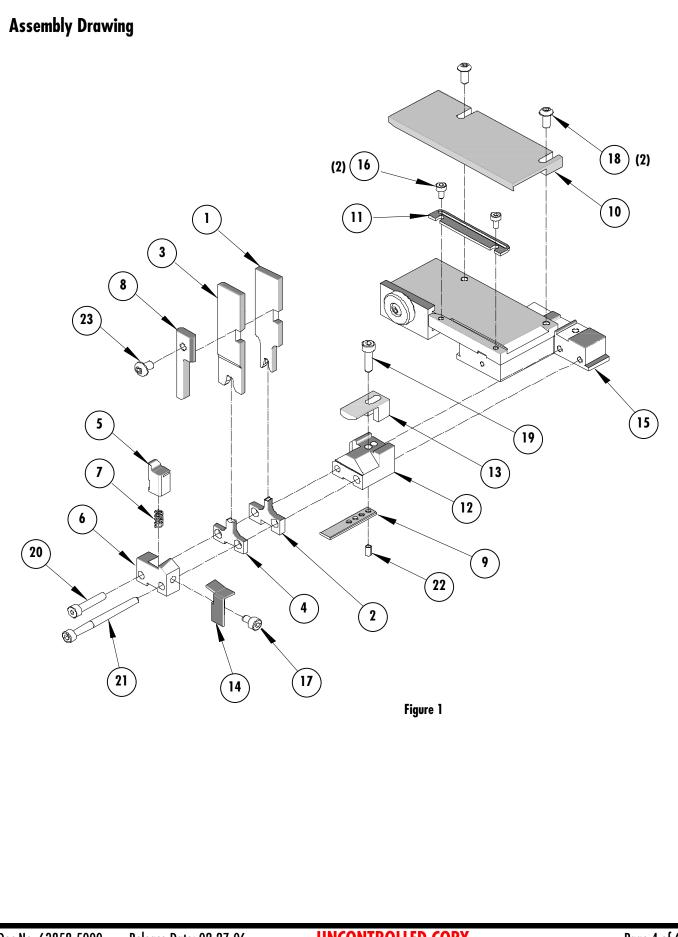

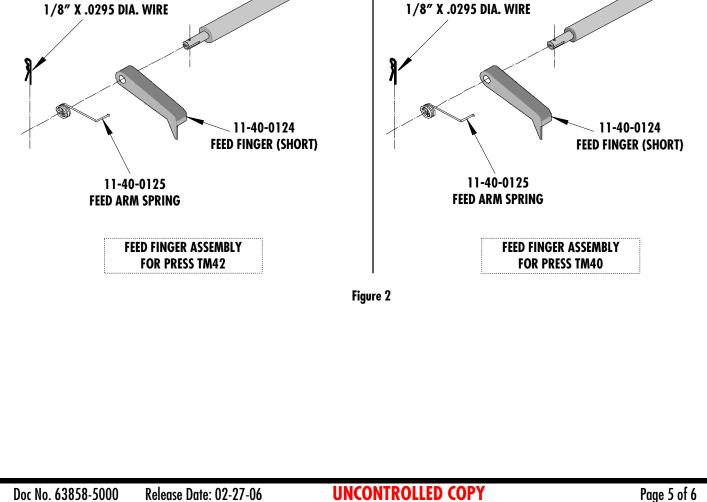

5. Release the feed arm spring. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual). 6.

11-40-5307

FEED FINGER ROD

Revision Date: 03-01-06

Revision: A

1. To remove the existing feed finger assembly loosens the M4 \times 10 mm set screw in the feed lever.

3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.

4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of

TM40 PRESS AND

BASE UNIT AND ADAPTER

COTTER PIN

11-40-0123

FEED FINGER ROD

NOTES Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

Select T2 Feed finger assembly from Terminator box.

TM42 PRESS

2.

the feed arm spring.

COTTER PIN

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Molex Application Tooling Group

2200 Wellington Court Lisle, IL 60532 Tel: (630) 969-4550 Fax: (630) 505-0049

Visit our Web site at http://www.molex.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex: 63858-5070