

Order No. 63910-6600

# **Application Tooling Specification Sheet**


#### **FEATURES**

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tablength
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

#### **SCOPE**

<u>Products</u>: 1.25mm (.049") Pitch Wire-to-Board Connector Dual Plug Terminal, 26-28 AWG.

Terminal Series No.	Terminal	Wi	re Size	<b>→</b> Insulatio	n Diameter	Strip Length		
Terminal Series No.	Terminar	Order No.	AWG	mm²	mm	ln.	mm	ln.
501930	501930-0100	501930-1100	26-28	.136079	0.80-1.00	.031039	1.50-1.70	.060067
502381	502381-0000	502381-0010	26-28	.136079	0.80-1.00	.031039	1.50-1.70	.060067
→ This T2 Terminator will not meet A-620 Class 1, 2, or 3 standards with insulation diameter range of 0.80-1.00mm.								

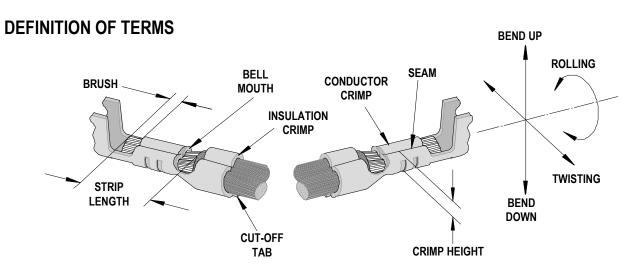

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-639106600 Release Date: 02-06-08 **UNCONTROLLED COPY** Page 1 of 6 Revision: C Revision Date: 09-06-16

#### **CRIMP SPECIFICATION**

Terminal Series No.	Bell n	nouth	Cut-off Tak	Maximum	Conductor Brush	
Terminal Series No.	Mm	ln.	mm	ln.	mm	ln.
501930	0.10-0.30	.004012	0.10	.004	0.10-0.40	.004016
502381	0.10-0.30	.004012	0.10	.004	0.10-0.40	.004016

	Bend up Bend down		Twist Roll		Punch Width mm (Ref)				Seam
Terminal Series No.	Dellu up	bellu uowii	i wist	Koli	Conductor		Insulation		
	Degree		Degree		mm	ln	mm	ln	Seam shall not be open
501930	3	3	4	6	0.80	.031	0.80	.031	and no wire allowed out
502381	3	3	4	6	0.80	.031	0.80	.031	of the crimping area

After crimping, the conductor profile should measure the following.

	\A/iwa	C:	Conductor					
Terminal Series No.	Wire	Size	Crimp Height		Crimp	Width (Ref)		
	AWG	mm <sup>2</sup>	mm	ln.	mm	ln.		
501930	26	.136	0.56-0.61	.022024				
	28	.079	0.53-0.58	.021023				
E00204	26	.136	0.56-0.61	.022024				
502381	28	.079	0.53-0.58	.021023				

	Wire	Sizo		Insulation (	Pull Force Minimum				
Terminal Series No.	WILE	SIZE	Crimp	leight Crimp \		Width		Ce William	
	AWG	mm <sup>2</sup>	mm	ln.	mm	ln.	N	Lb.	
501930	26	.136	1.18-1.28	.046050			9.8	2.20	
	28	.079	1.15-1.25	.045049			9.8	2.20	
502381	26	.136	1.18-1.28	.046050			9.8	2.20	
	28	.079	1.15-1.25	.045049			9.8	2.20	

#### **Tool Qualification Notes:**

1. Pull Force should be measured with no influence from the insulation crimp.


2. The above specifications are guidelines to an optimum crimp.

**UNCONTROLLED COPY** Doc No: ATS-639106600 Page 2 of 6 Release Date: 02-06-08 Revision: C

### **PARTS LIST**

	T2 Terminator 63910-6600								
Item	Order No Engineering No. Description								
		Perish	nable Tooling						
	63910-6670	63910-6670	Tool Kit (All "Y" Items)	REF					
1	63444-0804	63444-0804	Conductor Punch	1 Y					
2	63445-0821	63445-0821	Anvil	1 Y					
3	63446-0808	63446-0808	Insulation Punch	1 Y					
4	63443-0002	63443-0002	Front Cut-Off Plunger	1 Y					
5	63443-0012	63443-0012	Front Plunger Retainer	1 Y					
		Other	Components						
6	11-18-4083	60707-8	Feed Guide	1					
7	11-24-1067	4996-4	Cut-Off Plunger Spring	1					
8	63443-0009	63443-0009	Front Scrap Chute	1					
9	63443-0025	63443-0025	Key	1					
10	63443-0085	63443-0085	Wire Stop L-Bracket	1					
11	63443-0090	63443-0090	Wire Stop	1					
12	63443-1719	63443-1719	Height Spacer (18.90mm)	1					
13	63443-2201	63443-2201	Fine Spacer (1.00mm)	1					
14	63443-2216	63443-2216	Coarse Spacer (16.00mm)	1					
15	63443-2310	63443-2310	Fine Spacer (3.50mm)	1					
16	63443-2802	63443-2802	Front Plunger Striker	1					
17	63443-2904	63443-2904	Wire Hold Down Plunger	1					
18	63443-6002	63443-6002	Rear Cover	1					
19	63443-7201	63443-7201	Spring Cover	1					
20	63600-0021	63600-0021	Wire Hold Down Spring	1					
21	63600-2972	63600-2972	Collar	2					
			Frame	L					
22	63800-8500	63800-8500	T2 Terminator	1					
		Н	ardware						
23	N/A	N/A	M3 by 6 Long SHCS	2**					
24	N/A	N/A	M3 by 6 Long FHCS	1**					
25	N/A	N/A	M4 by 6 Long SHCS	2**					
26	N/A	N/A	M4 by 12 Long BHCS	2**					
27	N/A	N/A	M4 by 14 Long SHCS	2**					
28	N/A	N/A	M4 by 30 Long SHCS	2**					
29	N/A	N/A	M4 by 50 Long SHCS	2**					
30	N/A	N/A	M5 by 12 Long SHCS	1**					
31	N/A	N/A	#10-32 by 3/8"Long Flat Point SSS	1**					
32	N/A	N/A	#10-32 Hex Jam Nut	1**					
**	** Available from an industrial supply company such as MSC (1-800-645-7270).								

Doc No: ATS-639106600 Release Date: 02-06-08 UNCONTROLLED COPY
Revision: C Revision Date: 09-06-16

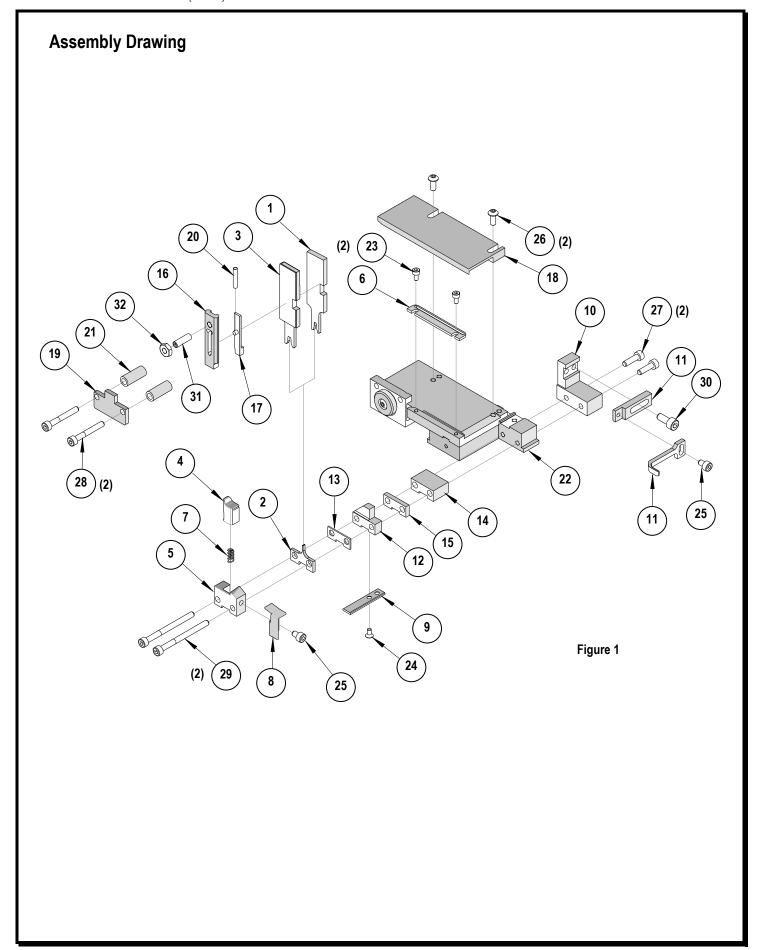

Doc No: ATS-639106600 Revision: C Release Date: 02-06-08 Revision Date: 09-06-16

#### **NOTES**

#### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

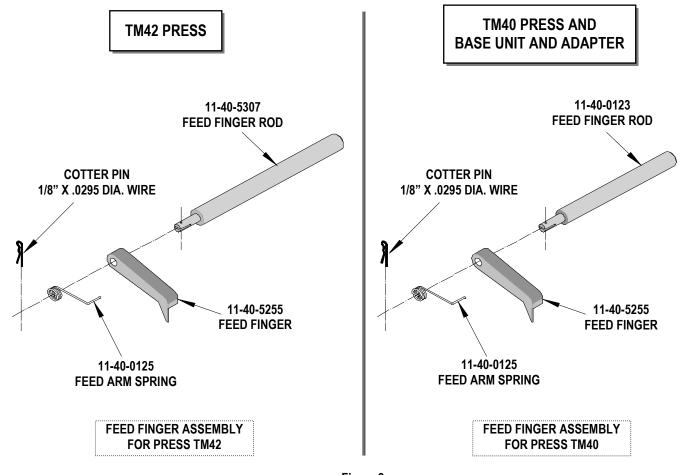


Figure 2

**UNCONTROLLED COPY** Doc No: ATS-639106600 Release Date: 02-06-08 Page 5 of 6 Revision: C Revision Date: 09-06-16

#### **NOTES**

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

**CAUTION**: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

#### **Application Tooling Support**

2200 Wellington Court
Lisle, IL 60532 USA
Phone: +1-402-458-TOOL (8665)
E-mail: applicationtooling@molex.com

Visit our Website at www.molex.com/applicationtooling

Doc No: ATS-639106600 Release Date: 02-06-08 **UNCONTROLLED COPY** Page 6 of 6

Revision Date: 09-06-16

Revision: C

## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex:

63910-6670