



SPECIFICATION SHEET T2 Terminator 63851-4100 REVISION A

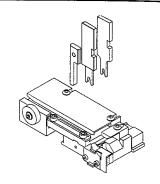

SCOPE

Terminal Series No		Wire Size		Insulation Diameter		Strip Length	
		Awg	(mm²)	mm	(in)	mm	(in)
90119-0109		22-24	(0.35-0.20)	1.00-1.60	(.039063)	2.80-3.30	(.110130)
90119-011*		22-24	(0.35-0.20)	1.00-1.60	(.039063)	2.80-3.30	(.110130)

DEFINITION OF TERMS

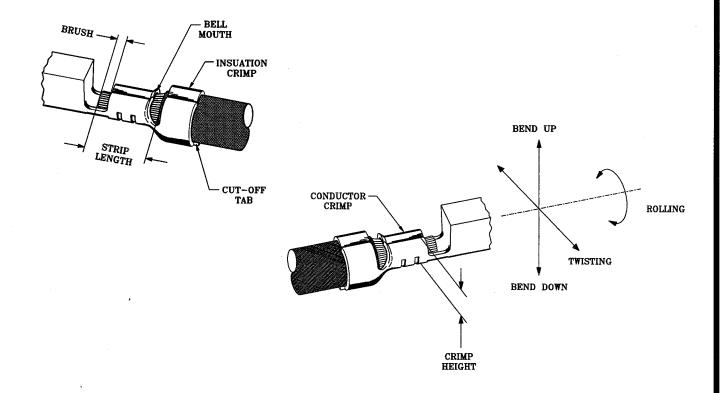

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope

Page 1 of 5 UNCONTROLLED COPY

SPECIFICATIONS

Bellmouth		Cut-Off Tab Max.		Conductor Brush	
mm	(in)	Front mm (in)	Rear mm (in)	mm	(in)
0.20-0.50	(.008020)	0.15 (.006)	0.15 (.006)	0.00-1.00	(.000039)
0.20-0.50	(.008020)	0.15 (.006)	0.15 (.006)	0.00-1.00	(.000039)
	mm 0.20-0.50	mm (in)	mm (in) Front mm (in) 0.20-0.50 (.008020) 0.15 (.006)	mm (in) Front Rear mm (in) mm (in) 0.20-0.50 (.008020) 0.15 (.006) 0.15 (.006)	mm (in) Front mm (in) Rear mm (in) mm 0.20-0.50 (.008020) 0.15 (.006) 0.15 (.006) 0.00-1.00

Terminal Series No.		Bend Up	Bend Down	Twist	Roll	Punch W	idth mm
		Degree		Degree		Conductor	Insulation
00110 0100			1 2 1				
90119-0109		3	3	3	8	1.30	1.60
90119-011*		3	3	3	8	1.30	1.60

The above specifications are guidelines to an optimum crimp.

CONDITIONS

After crimping, the conductor profile should measure the following.

Terminal Series	Wire Size		Crimp Height		Pull Force Min	
	Awg	(mm²)	mm	(in)	N	(lbs)
90119-0109	22	(0.35)	0.69-0.75	(.027030)	35.6	(8.0)
90119-0109	24	(0.20)	0.64-0.70	(.025028)	22.3	(5.0)
90119-011*	22	(0.35)	0.69-0.75	(.027030)	35.6	(8.0)
90119-011*	24	(0.20)	0.64-0.70	(.025028)	22.3	(5.0)
		<u> </u>				

Pull Force measured with no influence from the insulation crimp

Page 2 of 5 UNCONTROLLED COPY

PARTS LIST

Item Number	Order Number	Eng Number	Description	Qty	Kit Part
1	634441302	634441302	Conductor Punch	1	Y
2	634451310	634451310	Conductor Anvil	1	Y
3	634461626	634461626	Insulation Punch	1	Y
4	634451630	634451630	Insulation Anvil	1	Y
5	634430003	634430003	Cut-Off Plunger	2	Y
6	634430012	634430012	Front Plunger Retainer	1	Y
16	634431402	634431402	Cut-off Die Blade	1	Y
20	634431002	634431002	Rear Plunger Retainer	1	Y
7	11-24-1067	4996-4	Cut-Off Plunger Spring	2	
8	11-40-4039	8302-5	Front Plunger Striker	1	
9	634430021	634430021	Lower Tooling Key	1	
10	634436003	634436003	Rear Cover	1	
11	11-18-4083	60707-8	Front Cover	1	
13	638008503	638008503	Wire Stop	1	
15	638008500	638008500	T2 Terminator	1	
32	638008502	638008502	Rear Plunger Striker	1	
36	634432107	634432107	Front Spacer	1	
37	634432105	634432105	Rear Spacer	1	
38	11-24-1149	4996-37	Shank	1	
39	11-40-4274	8331-8	Hold Down Blade	1	
42	11-17-0022	1739-21	Hold Down Spring	1	
70	638514170	638514170	Tool Kit (All "Y" Items)	0	

NOTES


- 1. We recommend an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Terminator before crimping under power.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should only be used in a Molex TM42, TM40, or 3BF Press with a BaseUnit adaptor.
- 5. ** CAUTION** To prevent injury never operate this Terminator without the guarding supplied with the TM42, TM40, or 3BF Press / Base Unit.
- 6. Wear safety glasses at all times.

CRIMP

Page 3 of 5 UNCONTROLLED COPY

ASSEMBLY DRAWING

The drawing below is a generic drawing representation. Some detail may not be shown. The T2 Terminator assembly and parts list can be found in the T2 Terminator manual.

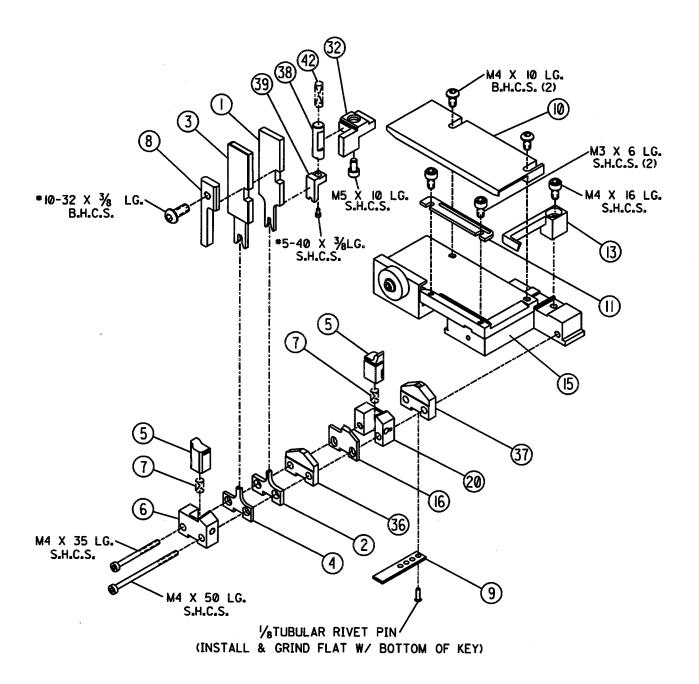


Page 4 of 5 UNCONTROLLED COPY

Note


Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosen the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box
- 3. Insert a screwdriver into to slot behind the feed lever and force the 12 mm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the 12 mm spring.
- 5. Release the 12 mm spring.
- 6. Position feed finger for selected product. (Ref fig 5.1 T2 Manual)

TM42 Press

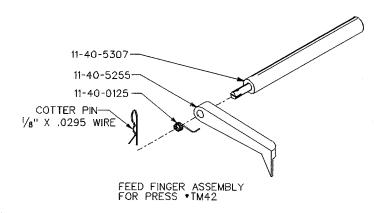

TM40 Press & BaseUnit & Adaptor

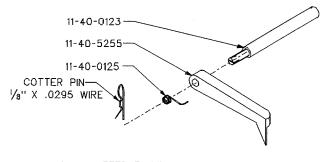

FEED FINGER ASSEMBLY FOR PRESS *TM40

Page 5 of 5 UNCONTROLLED COPY

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex:

63851-4170