


T2 Terminator Tooling Specification Sheet Order No. 63852-9100

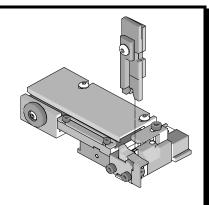

FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tablength
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements


SCOPE

<u>Products:</u> Male and Female Crimp Terminals, 14-18 AWG.

Terminal Series No.	Terminal	Wire Size			Insulation	Strip Length			
	Order No.			IPC/WHMA-A620◆				Terminal Maximum → →	
		AWG	mm²	mm	ln.	mm	ln.	mm	ln.
35745	35745-0210	14-18	2.00-0.80	2.80-3.40	.110134	3.40	.134	4.00-4.80	.157189
35746	35746-0210	14-18	2.00-0.80	2.80-3.40	.110134	3.40	.134	4.00-4.80	.157189
35747	35747-0210	14-18	2.00-0.80	2.80-3.40	.110134	3.40	.134	4.00-4.80	.157189
35748	35748-0210	14-18	2.00-0.80	2.80-3.40	.110134	3.40	.134	4.00-4.80	.157189

[◆] To achieve optimum IPC-A620 insulation crimps, use this insulation OD range.

DEFINITION OF TERMS

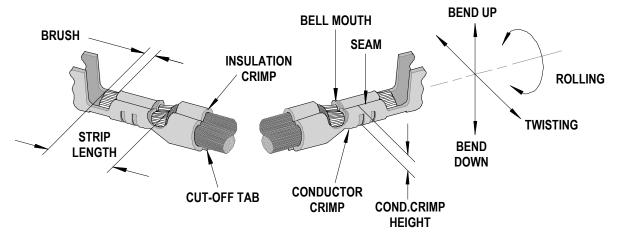

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-638529100 Release Date: 11-08-99 **UNCONTROLLED COPY** Page 1 of 6 Revision: C Revision Date: 11-05-08

[♦] Overall insulation OD specification for terminal.

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off Tak	Maximum	Conductor Brush		
Terminal Series No.	mm	ln.	mm	ln.	mm	ln.	
35745	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	
35746	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	
35747	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	
35748	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	

	Bend up Bend down		Twist Roll		Punch Width (Ref)				
Terminal Series No.	Della up	Conductor			Insulation		Seam		
	De	gree	Degree		mm	ln	mm	ln	
35745	3	3	3	5	2.50	.098	3.40	.134	Seam shall not be open
35746	3	3	3	5	2.50	.098	3.40	.134	and no wire allowed out
35747	3	3	3	5	2.50	.098	3.40	.134	of the crimping area
35748	3	3	3	5	2.50	.098	3.40	.134	

After crimping, the conductor profile should measure the following.

Terminal Series No.	Wire	Size	Conductor C	rimp Height	Pull Force Minimum		
Terminal Series No.	AWG	mm ²	mm	ln.	N	Lb.	
	14	2.00	1.60-1.70	.063067	147.1	33.1	
35745	16	1.30	1.50-1.60	.059063	127.6	28.7	
	18	0.80	1.40-1.50	.055059	97.8	22.0	
	14	2.00	1.60-1.70	.063067	147.1	33.1	
35746	16	1.30	1.50-1.60	.059063	127.6	28.7	
	18	0.80	1.40-1.50	.055059	97.8	22.0	
	14	2.00	1.60-1.70	.063067	147.1	33.1	
35747	16	1.30	1.50-1.60	.059063	127.6	28.7	
	18	0.80	1.40-1.50	.055059	97.8	22.0	
	14	2.00	1.60-1.70	.063067	147.1	33.1	
35748	16	1.30	1.50-1.60	.059063	127.6	28.7	
	18	0.80	1.40-1.50	.055059	97.8	22.0	

 $\label{pull-pull-pull-pull} \mbox{Pull Force should be measured with no influence from the insulation crimp.}$


The above specifications are guidelines to an optimum crimp.

UNCONTROLLED COPY Doc No: ATS-638529100 Page 2 of 6 Release Date: 11-08-99 Revision: C

PARTS LIST

Terminator 63852-9100										
Item	Order No	Engineering No.	Description	Quantity						
Perishable Tooling										
	63852-9170	63852-9170	Tool Kit (All "Y" Items)	REF						
1	63444-2510	63444-2510	Conductor Punch	1 Y						
2	63445-2568	63445-2568	Conductor Anvil	1 Y						
3	63446-3414	63446-3414	Insulation Punch	1 Y						
4	63445-3421	63445-3421	Insulation Anvil	1 Y						
5	63443-0002	63443-0002	Cut-Off Plunger	1 Y						
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y						
	Other Components (REF 529050)									
7	11-18-4083	60707-8	Front Cover	1						
8	11-24-1067	4996-4	Cut-off Plunger Spring	1						
9	63443-3160	63443-3160	Front Plunger Striker	1						
10	63443-0009	63443-0009	Scrape Chute	1						
11	63443-0021	63443-0021	Lower Tooling Key	1						
12	63443-2415	63443-2415	Anvil Mount	1						
13	63443-4006	63443-4006	Wire Stop	1						
14	63443-6011	63443-6011	Rear Cover	1						
	Frame									
15	63800-8500	63800-8500	T2 Terminator	1						
		Hard	ware							
16	N/A	N/A	M3 by 6 Long SHCS	2**						
17	N/A	N/A	M4 by 6 Long SHCS	1**						
18	N/A	N/A	M4 by 10 Long BHCS	2**						
19	N/A	N/A	M4 by 20 Long SHCS	1**						
20	N/A	N/A	M4 by 50 Long SHCS	1**						
21	N/A	N/A	M4 by 16 Long SHCS	1**						
22	N/A	N/A	3mm by 6 Long Roll Pin	1**						
23	N/A	N/A	#10-32 by 3/8" Long BHCS	1**						
** Av	** Available from an industrial supply company such as MSC (1-800-645-7270).									

UNCONTROLLED COPY Page 3 of 6 Doc No: ATS-638529100 Release Date: 11-08-99 Revision: C

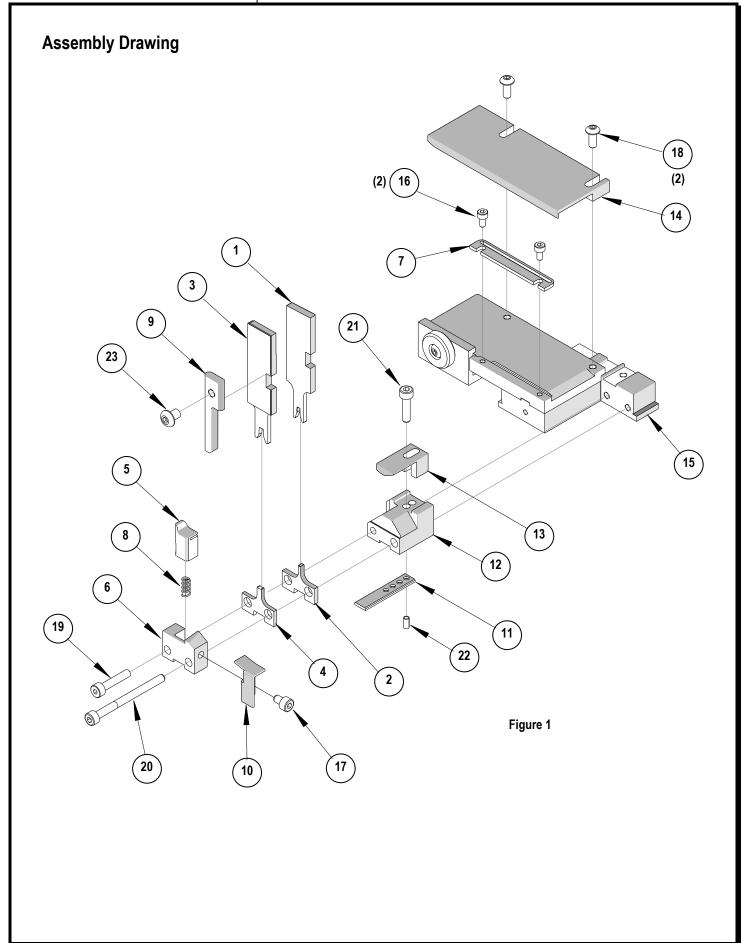


Doc No: ATS-638529100 Revision: C Release Date: 11-08-99 Revision Date: 11-05-08

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

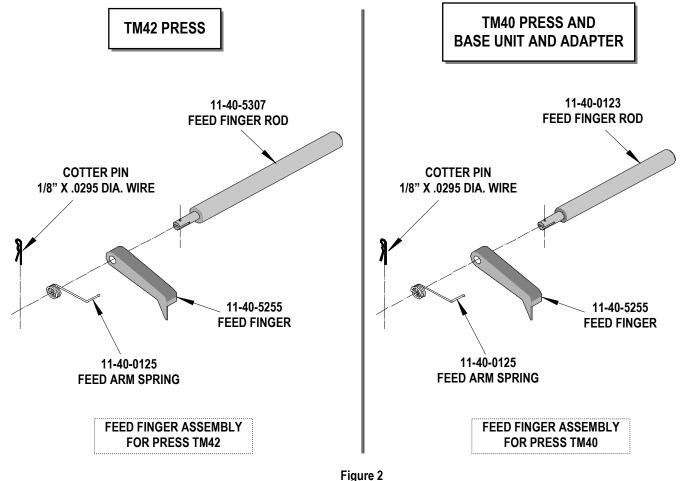

UNCONTROLLED COPY Doc No: ATS-638529100 Release Date: 11-08-99 Page 5 of 6 Revision Date: 11-05-08

Revision: C

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-638529100 Release Date: 11-08-99 **UNCONTROLLED COPY** Page 6 of 6 Revision: C Revision Date: 11-05-08

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex:

63852-9170