
# T2 Terminator Tooling Specification Sheet Order No. 63852-9200

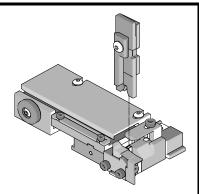


## FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

#### SCOPE

Products: 1.80mm (.070") Board-In Terminal for 18 (2), 20 (2) AWG.

Terminal Series No.	Terminal Order No.	Wi	re Size		Insulation	Strip Length				
		VVII	e Size	IPC/WHM	A-A620 🔶	Terminal Ma	aximum 🔶 🔶			
		AWG	mm²	mm	In.	mm	ln.	mm	In.	
35745	35745-0310	18 (2)-20 (2)	0.80 (2)-0.50 (2)	2.50-2.80	.098110	2.80 (2)	.110 (2)	4.00-4.80	.157189	
35746	35746-0310	18 (2)-20 (2)	0.80 (2)-0.50 (2)	2.50-2.80	.098110	2.80 (2)	.110 (2)	4.00-4.80	.157189	
35747	35747-0310	18 (2)-20 (2)	0.80 (2)-0.50 (2)	2.50-2.80	.098110	2.80 (2)	.110 (2)	4.00-4.80	.157189	
35748	35748-0310	18 (2)-20 (2)	0.80 (2)-0.50 (2)	2.50-2.80	.098110	2.80 (2)	.110 (2)	4.00-4.80	.157189	
To achieve optimum IPC-A620 insulation crimps, use this insulation OD range.										
Overall insulation OD specification for terminal.										

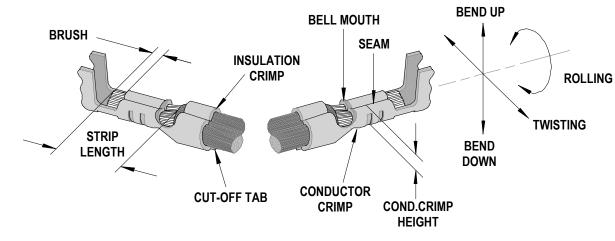

### **DEFINITION OF TERMS**

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-638529200 Revision: D Release Date: 11-10-99 Revision Date: 11-05-08 **UNCONTROLLED COPY** 

#### **CRIMP SPECIFICATION**

Terminal Series No.	Bell n	nouth	Cut-off Tab	o Maximum	Conductor Brush		
Terminal Series NO.	mm	In.	mm	ln.	mm	In.	
35745	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	
35746	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	
35747	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	
35748	0.20-0.50	.008020	0.30	.012	0.30-0.80	.012032	

	Bond up	Bend down	Twict	Dall	Punch Width (Ref)				
Terminal Series No.	Della up	I WIST KUII		Conductor		Insulation		Seam	
	De	Degree		mm	In	mm In			
35745	3	3	3	5	3.00	.118	5.30	.209	Seam shall not be open
35746	3	3	3	5	3.00	.118	5.30	.209	and no wire allowed out
35747	3	3	3	5	3.00	.118	5.30	.209	of the crimping area
35748	3	3	3	5	3.00	.118	5.30	.209	


After crimping, the conductor profile should measure the following.

	Wire Size			Pull Force				
Terminal Series No.	VVII	e Size	Crimp	Height	Crimp Wi	Minimum		
	AWG	mm <sup>2</sup>	mm	In.	mm	ln.	Ν	Lb.
35745	18 (2)	0.80 (2)	1.45-1.55	.057061	2.90-3.10	.114122	97.9	22.0
55745	20 (2)	0.50 (2)	1.35-1.45	.053057	2.90-3.10	.114122	58.7	13.2
35746	18 (2)	0.80 (2)	1.45-1.55	.057061	2.90-3.10	.114122	97.9	22.0
55740	20 (2)	0.50 (2)	1.35-1.45	.053057	2.90-3.10	.114122	58.7	13.2
35747	18 (2)	0.80 (2)	1.45-1.55	.057061	2.90-3.10	.114122	97.9	22.0
55747	20 (2)	0.50 (2)	1.35-1.45	.053057	2.90-3.10	.114122	58.7	13.2
35748	18 (2)	0.80 (2)	1.45-1.55	.057061	2.90-3.10	.114122	97.9	22.0
55740	20 (2)	0.50 (2)	1.35-1.45	.053057	2.90-3.10	.114122	58.7	13.2

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.

# PARTS LIST

Terminator 63852-9200										
Item	Order No	Engineering No.	Description	Quantity						
Perishable Tooling										
	63852-9270	63852-9270	Tool Kit (All "Y" Items)	REF						
1	63444-3012	63444-3012	Conductor Punch	1 Y						
2	63445-3068	63445-3068	Conductor Anvil	1 Y						
3	63446-5309	63446-5309	Insulation Punch	1 Y						
4	63445-5306	63445-5306	Insulation Anvil	1 Y						
5	63443-0002	63443-0002	Cut-Off Plunger	1 Y						
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y						
Other Components (REF 529050)										
7	11-18-4083	60707-8	Front Cover	1						
8	11-24-1067	4996-4	Cut-off Plunger Spring	1						
9	63443-3160	63443-3160	Front Plunger Striker	1						
10	63443-0009	63443-0009	Scrape Chute	1						
11	63443-0021	63443-0021	Lower Tooling Key	1						
12	63443-2415	63443-2415	Anvil Mount	1						
13	63443-4006	63443-4006	Wire Stop	1						
14	63443-6011	63443-6011	Rear Cover	1						
	Frame									
15	63800-8500	63800-8500	T2 Terminator	1						
		Hard	ware							
16	N/A	N/A	M3 by 6 Long SHCS	2**						
17	N/A	N/A	M4 by 6 Long SHCS	1**						
18	N/A	N/A	M4 by 10 Long BHCS	2**						
19	N/A	N/A	M4 by 20 Long SHCS	1**						
20	N/A	N/A	M4 by 50 Long SHCS	1**						
21	N/A	N/A	M4 by 16 Long SHCS	1**						
22	N/A	N/A	3mm by 6 Long Roll Pin	1**						
23	N/A	N/A	#10-32 by 3/8" Long BHCS	1**						
** Available from an industrial supply company such as MSC (1-800-645-7270).										

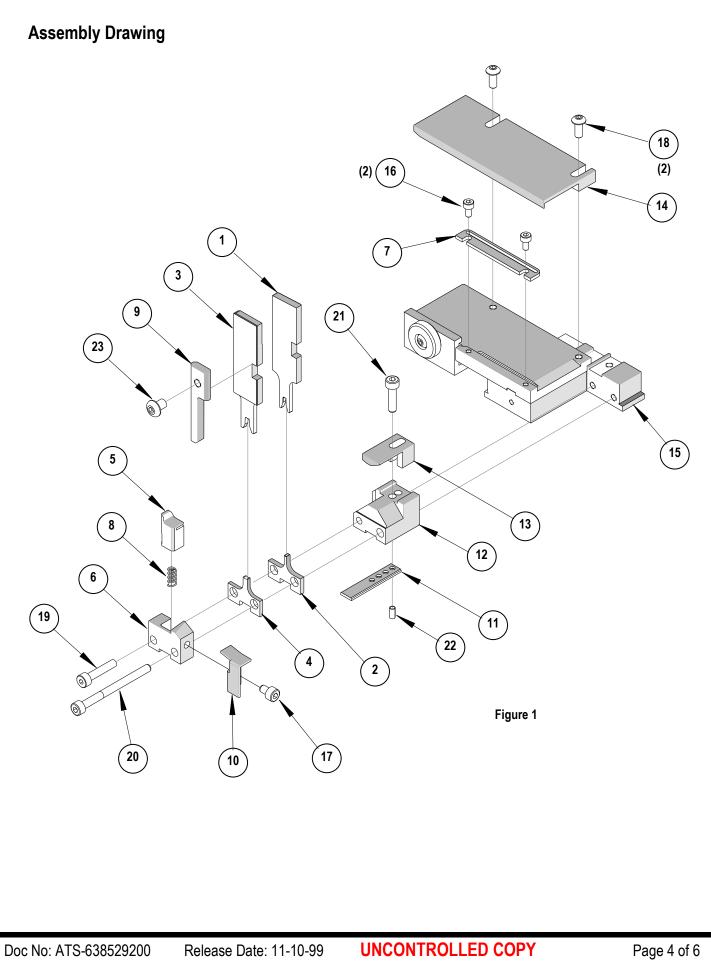


Revision: D

Revision Date: 11-05-08

### NOTES

#### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

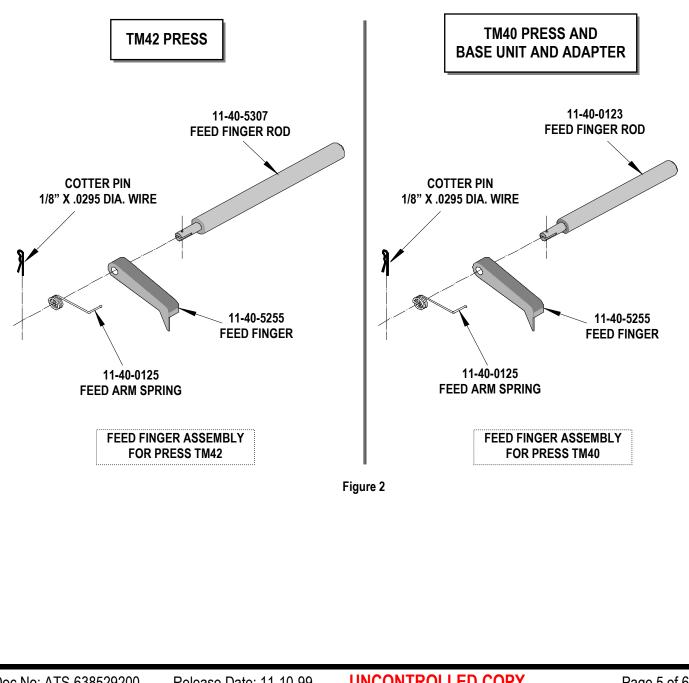

Release Date: 11-10-99 Revision Date: 11-05-08

#### NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

**CAUTION**: To prevent injury never operate this Terminator without the guards supplied with the press in place. Reference the TM42 press manufacturer's instruction manual.

**CAUTION**: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com Far East South Headquarters Jurong, Singapore 65-6-268-6868 fesinfo@molex.com European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com

Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-638529200 Revision: D Release Date: 11-10-99 Revision Date: 11-05-08 **UNCONTROLLED COPY** 

Page 6 of 6

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex: 63852-9270