



# SPECIFICATION SHEET T2 Terminator 63850-2100 REVISION B

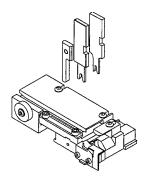

## **SCOPE**

Terminal Series No	Wire Size		Insulation Diameter		Strip Length	
	Awg	(mm²)	mm	(in)	mm	(in)
70058-00**	20-24	(0.50-0.20)	1.40-1.70	(.055067)	3.17-3.56	(.125140)
71851-00**	22-24	(0.35-0.20)	1.40-1.63	(.055064)	3.17-3.56	(.125140)

# **DEFINITION OF TERMS**

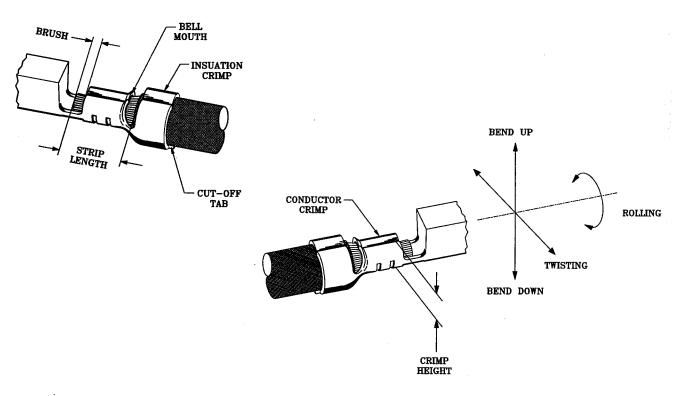

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope

Page 1 of 5 UNCONTROLLED COPY

## **SPECIFICATIONS**

ellmouth Cut-Off Tab Max. Conductor Brush	Bellmouth		Terminal Series No.	
(in) Front Rear mm (in) mm (in) mm (in)	(in)	mm		
0 (.008020) 0.13 (.005) 0.08 (.003) 0.00-1.00 (.000039)	(.008020)	0.20-0.50	70058-00**	
	(.008020)	0.20-0.50	71851-00**	
	(.008020)	0.20-0.50	/1051 00	

Terminal Series No	. Bend Up	Bend Down	Twist	Roll	Punch W	idth mm
	D	egree	Deg	gree	Conductor	Insulation
70058-00**	3	3	3	8	1.40	1.60
71851-00**	3	3	3	8	1.40	1.60
						- <u></u>

The above specifications are guidelines to an optimum crimp.

## CONDITIONS

After crimping, the conductor profile should measure the following.

Terminal Series	Wire Size		Crimp Height		Pull Force Min	
	Awg	(mm²)	mm	(in)	Ν	(lbs)
70058-00**	20	(0.50)	0.91-0.96	(.036038)	57.9	(13.0)
70058-00**	22	(0.35)	0.84-0.89	(.033035)	35.6	(8.0)
70058-00**	24	(0.20)	0.76-0.81	(.030032)	22.2	(5.0)
71851-00**	22	(0.35)	0.84-0.89	(.033035)	35.6	(8.0)
71851-00**	24	(0.20)	0.76-0.81	(.030032)	22.2	(5.0)
		· · · · · · · · · · · · · · · · · · ·				
						-
	1					

Pull Force measured with no influence from the insulation crimp

## Page 2 of 5 UNCONTROLLED COPY

## PARTS LIST

Item Number	Order Number	Eng Number	Description	Qty	Kit Part
1	634441417	634441417	Conductor Punch	1	Y
2	634451446	634451446	Conductor Anvil	1	Y
3	634461622	634461622	Insulation Punch	1	Y
4	634451630	634451630	Insulation Anvil	1	Y
5	634430003	634430003	Cut-Off Plunger	2	Y
6	634430012	634430012	Front Plunger Retainer	1	Y
16	634431402	634431402	Cut-off Die Blade	1	Y
20	634431002	634431002	Rear Plunger Retainer	1	Y
7	11-24-1067	4996-4	Cut-Off Plunger Spring	2	
8	11-40-4039	8302-5	Front Plunger Striker	1	
9	634430021	634430021	Lower Tooling Key	1	
10	634436003	634436003	Rear Cover	1	
11	11-18-4094	60709A111	Front Cover	1	
13	638008503	638008503	Wire Stop	1	
15	638008500	638008500	T2 Terminator	1	
32	638008502	638008502	Rear Plunger Striker	1	
36	634432102	634432102	Front Spacer	1	
37	634432103	634432103	Rear Spacer	1	
38	11-24-1149	4996-37	Shank	1	
39	11-40-4274	8331-8	Hold Down Blade	1	
42	11-17-0022	1739-21	Hold Down Spring	1	
50	638602015	638602015	Drag Frame	1	
70	638502170	638502170	Tool Kit (All "Y" Items)	0	


### NOTES

- 1. We recommend an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Terminator before crimping under power.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should only be used in a Molex TM42, TM40, or 3BF Press with a BaseUnit adaptor.
- 5. \*\* CAUTION\*\* To prevent injury never operate this Terminator without the guarding supplied with the TM42, TM40, or 3BF Press / Base Unit.
- 6. Wear safety glasses at all times.

#### Page 3 of 5 UNCONTROLLED COPY

## **ASSEMBLY DRAWING**

The drawing below is a generic drawing representation. Some detail may not be shown. The T2 Terminator assembly and parts list can be found in the T2 Terminator manual.

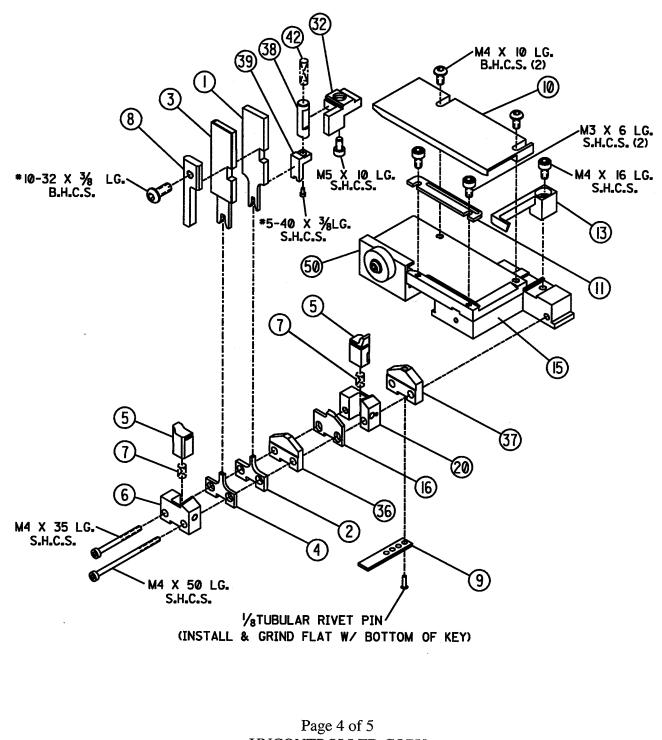


UNCONTROLLED COPY


#### Note


#### Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.


- 1. To remove the existing feed finger assembly loosen the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box
- 3. Insert a screwdriver into to slot behind the feed lever and force the 12 mm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the 12 mm spring.
- 5. Release the 12 mm spring.
- 6. Position feed finger for selected product. (Ref fig 5.1 T2 Manual)

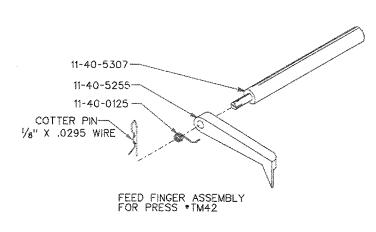

#### TM42 Press

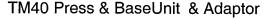

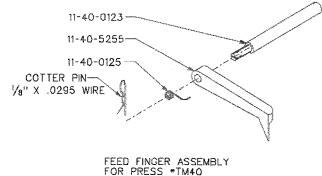

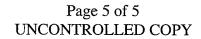

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex: 63850-2170