


T2 Terminator Tooling Specification Sheet Order No. 63911-1200

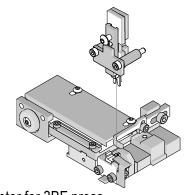

FEATURES


- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE

Products: OBD II 1.52mm (.060") Crimp Terminal, 0.30-0.50mm² and 20-22 AWG.

Terminal	Terminal	Wire Size			Insulation	Strip Length			
Series No.	Order No.			IPC/WHMA-A620◆		Terminal → →		Strip Length	
Series No.		AWG	mm²	mm	ln.	mm	ln.	mm	ln.
	57964-9702	AVS-0.3, CAVS-0.3	0.37	1.40-2.30	.055090	1.40-2.30	.055090	3.60-4.80	.142189
5706 <i>1</i>		22AWG	0.35						
57964		AVS-0.5, CAVS-0.5	0.56		.055050				
		20AWG	0.50						
◆To achieve optimum IPC-A620 insulation crimps, use this insulation OD range.									
♦ ◆ Overall insulation OD specification for terminal.									

DEFINITION OF TERMS

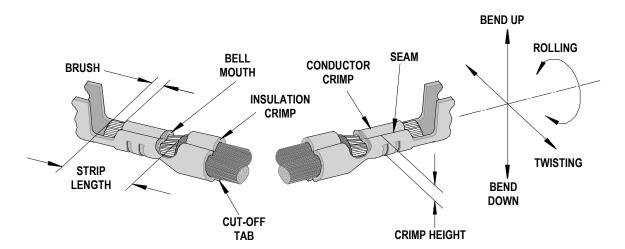

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Doc No: ATS-639111200 **UNCONTROLLED COPY** Release Date: 03-29-08 Page 1 of 6 Revision Date: 09-24-08

Revision: A

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off Tak	Maximum	Conductor Brush	
Terminal Series No.	Mm	ln.	mm	ln.	mm	ln.
57964	0.20-0.80	.008031	0.20	.008	0.30-1.50	.012059

	Bend up Bend down		Twist Roll		Punch Width mm (Ref)				Seam
Terminal Series No.					Conductor		Insulation		
	Degree		Degree		mm	ln	mm	ln	Seam shall not be open
57964	3	3	4	6	1.80	.071	2.30	.091	and no wire allowed out of the crimping area

After crimping, the conductor profile should measure the following.

Tarminal				Pull Force				
Terminal Series No.	Wire Size	Actual mm ²	Crimp	Height	Crimp Wi	Minimum		
Series No.			mm	ln.	mm	ln.	N	Lb.
	0.3, 0.3f	0.37	1.05-1.15	.041045	1.90	.075	58.8	13.2
57964	22AWG	0.35	1.05-1.15	.041045	1.90	.075	58.8	13.2
	0.5, 0.5f	0.56	1.15-1.25	.045049	1.90	.075	88.2	19.8
	20AWG	0.50	1.15-1.25	.045049	1.90	.075	88.2	19.8

Terminal			Insulation					
Series No.	Wire Size	Actual mm ²	Crimp Hei	ght (Max.)	Crimp Width (Ref.)			
oenes no.			mm	ln.	mm	ln.		
	0.3, 0.3f	0.37	2.60	.102	2.65	.104		
57964	22AWG	0.35	2.60	.102	2.65	.104		
37 304	0.5, 0.5f	0.56	2.60	.102	2.65	.104		
	20AWG	0.50	2.60	.102	2.65	.104		

Pull Force should be measured with no influence from the insulation crimp. The above specifications are guidelines to an optimum crimp.


UNCONTROLLED COPY Doc No: ATS-639111200 Page 2 of 6 Release Date: 03-29-08 Revision: A Revision Date: 09-24-08

PARTS LIST

T2 Terminator 63911-1200								
Item	Order No	Engineering No.	Description	Quantity				
	Perishable Tooling							
	63911-1270	63911-1270	Tool Kit (All "Y" Items)	REF				
1	63444-1826	63444-1826	Conductor Punch	1 Y				
2	63445-1846	63445-1846	Conductor Anvil	1 Y				
3	63454-0081	63454-0081	Insulation Punch	1 Y				
4	63445-2645	63445-2645	Insulation Anvil	1 Y				
5	63443-0003	63443-0003	Front Cut-Off Plunger	1 Y				
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y				
		Other Componer	its (REF 111250)					
7	11-18-4083	60707-8	Feed Guide	1				
8	63443-0009	63443-0009	Front Scrap Chute	1				
9	63443-0025	63443-0025	Key	1				
10	63443-0085	63443-0085	Wire Stop L-Bracket	1				
11	63443-0090	63443-0090	Wire Stop	1				
12	63443-1717	63443-1717	18.70mm Height Spacer	1				
13	63443-2215	63443-2215	15.00mm Coarse Spacer	1				
14	63443-2308	63443-2308	3.40mm Fine Spacer	1				
15	63443-2802	63443-2802	Front Plunger Striker	1				
16	63443-2912	63443-2912	Wire Hold Down Plunger	1				
17	63443-6009	63443-6009	Rear Cover	1				
18	63443-7201	63443-7201	Spring Cover	1				
19	63600-0021	63600-0021	Wire Hold Down Spring	1				
20	63600-2972	63600-2972	Collar	2				
21	11-24-1067	4996-4	Cut-Off Plunger Spring	1				
		Fra	me					
22	63800-8500	63800-8500	T2 Terminator	1				
		Hardy						
23	N/A	N/A	M3 by 6 Long SHCS	2**				
24	N/A	N/A	M3 by 6 Long FHCS	1**				
25	N/A	N/A	M4 by 6 Long SHCS	2**				
26	N/A	N/A	M4 by 12 Long BHCS	2**				
27	N/A	N/A	M4 by 14 Long SHCS	2**				
28	N/A	N/A	M4 by 30 Long SHCS	2**				
29	N/A	N/A	M4 by 50 Long SHCS	2**				
30	N/A	N/A	M5 by 12 Long SHCS	1**				
31	N/A	N/A	#10-32 by 3/8"Long BHCS	1**				
** Av	** Available from an industrial supply company such as MSC (1-800-645-7270).							

UNCONTROLLED COPY Doc No: ATS-639111200 Page 3 of 6 Release Date: 03-29-08 Revision: A

Revision Date: 09-24-08

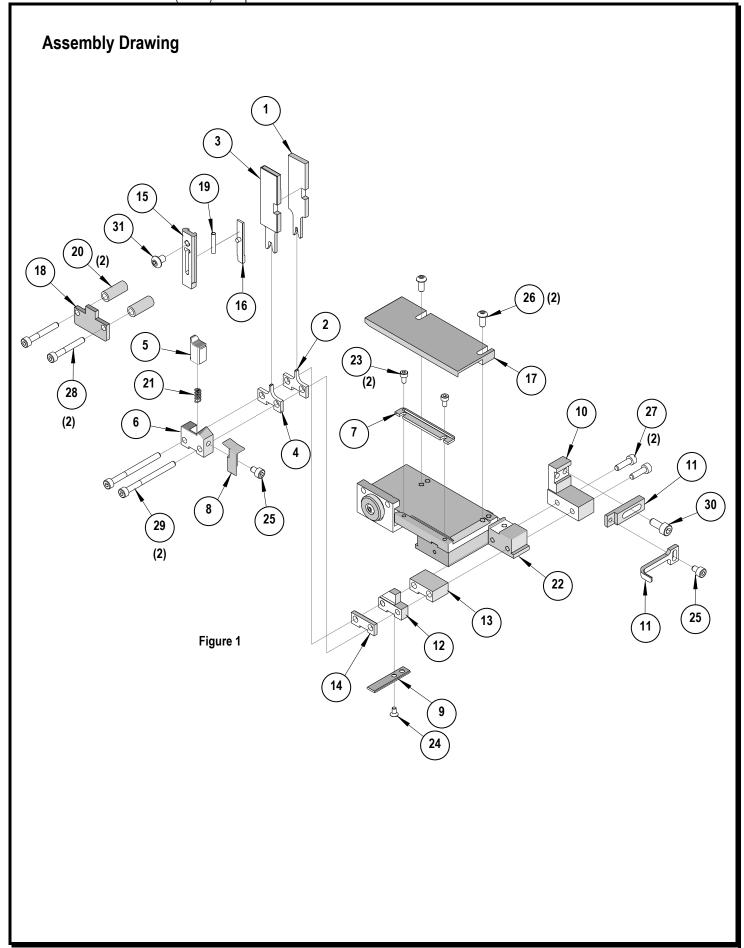


Doc No: ATS-639111200 Revision: A Release Date: 03-29-08 Revision Date: 09-24-08

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

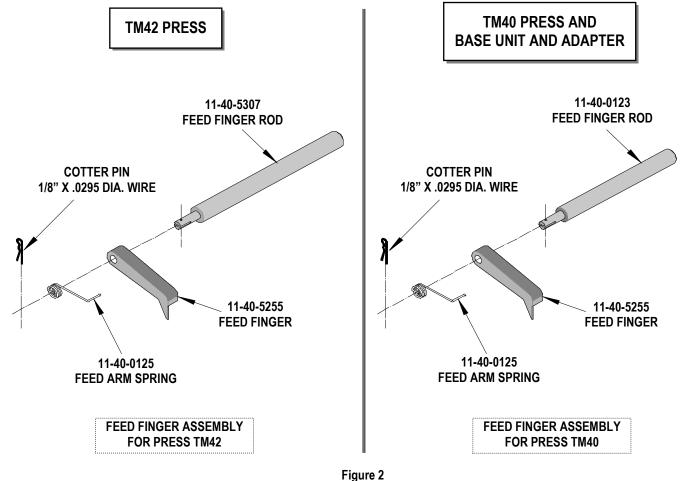

UNCONTROLLED COPY Doc No: ATS-639111200 Release Date: 03-29-08 Page 5 of 6 Revision: A Revision Date: 09-24-08

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Americas Headquarters Lisle, Illinois 60532 U.S.A. 1-800-78MOLEX amerinfo@molex.com

Far East North Headquarters Yamato, Kanagawa, Japan 81-462-65-2324 feninfo@molex.com Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters Munich, Germany 49-89-413092-0 eurinfo@molex.com

Corporate Headquarters 2222 Wellington Ct. Lisle, IL 60532 U.S.A. 630-969-4550 Fax: 630-969-1352

Visit our Web site at http://www.molex.com

Doc No: ATS-639111200 Release Date: 03-29-08 **UNCONTROLLED COPY** Page 6 of 6 Revision: A Revision Date: 09-24-08

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Molex:

63911-1270